



43270 - Vehicle Wiring Installation Instructions

Acura MDX 2014

1. After opening the rear tailgate lift up on the rear storage lid. Then, locate the access panel on the driver's side of the storage area.
2. Once the access panel has been located remove the cover to expose the vehicle's electric junction box.
3. Then, route the connector from the rear of the storage area to the vehicle's electric junction box behind the trim panel. Insert the connector into the receptacle on the junction box.
4. In the electric junction box locate position 2 and insert the 10 amp fuse. Then, locate position 11 and insert the 7.5 amp fuse.
5. Now that the T-connector is in place, place the slit grommet over the wire and place the grommet back in the hole it was removed from.
6. Locate a suitable ground point on the vehicle's body near the converter. Make sure to clean the area from dirt and rust to make good contact with the metal frame. (***NOTE* Avoid drilling into exterior vehicle surfaces and verify what is behind any surface prior to drilling to avoid damage to the vehicle and to avoid personal injury.**) Drill a 3/32" hole and secure white wire ring terminal with the self-tapping screw that is provided.
7. After the converter and the white ground wire have been secured, make sure that the 15amp fuse is placed in the fuse holder on the harness.
8. Route the 4 flat connector to the receiver hitch and secure it with the provided cable ties or store the 4 flat inside the cargo compartment of the vehicle and route the connector outside of the rear tail gate when in use.
9. To protect the connector from moisture and corrosion, apply a small amount of dielectric grease that is provided to the 4 flat terminals.
10. Attach the provided dust cover to 4 Flat connector.
11. To test, plug completed wire harness into the trailer 4 flat connector.
12. To ensure proper operation, test all functions with the engine running.
13. **Caution:** Overloading circuits can cause fires. Don't exceed manufacturer ratings of :
 - Max. Stop/turn light: (3 amps each side)
 - Max. Tail lights: (6 amps)Read vehicle's owner's manual & instruction sheet for additional information.

TIPS:

Grease applied to the wiring terminals on a regular basis will help prevent corrosion.
Always unplug boat trailer connector before backing trailer into the water.

Need Help? (English Only)
1-800-835-0129
techsupport@hopkinsmfg.com
www.hopkinstowingsolutions.com