


INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Hyundai	Santa Fe

CUSTOM WIRING CONNECTOR

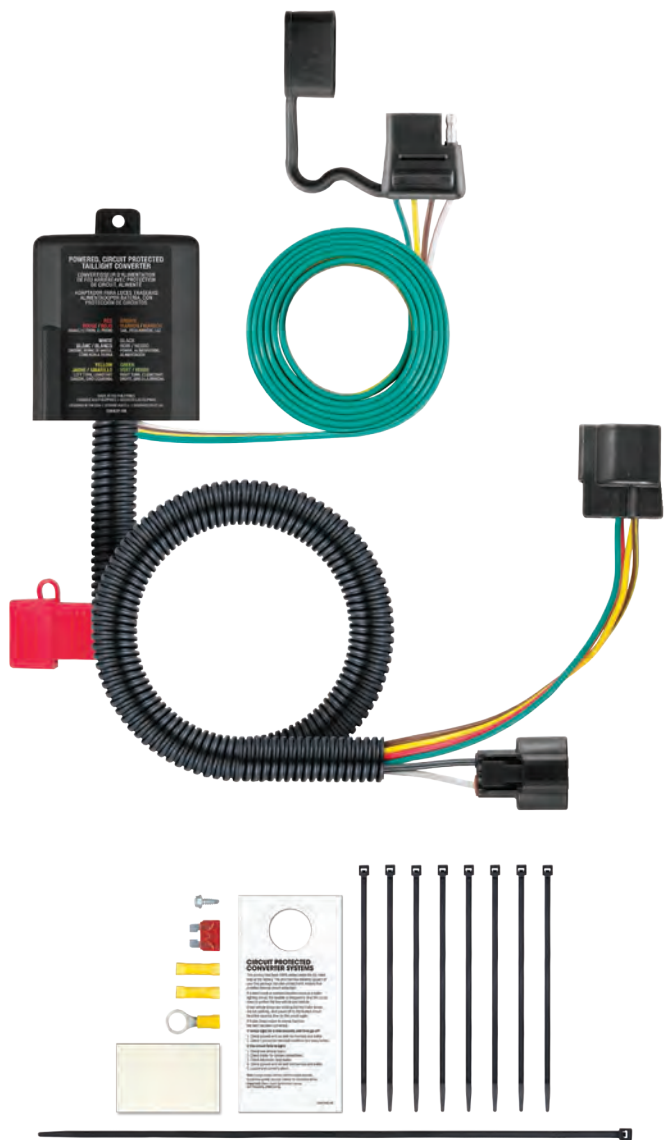

WIRING LOCATION GUIDE

SUVs, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

S5 - Behind driver side rear bumper



NOTICE

All steps must be followed to ensure the wiring connector will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

None

⚠ WARNING

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side
Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Under the vehicle, locate the vehicle taillight wiring connectors (A). The connectors will be similar to those on the custom wiring connector. Remove the protective caps from the plug ends (B).

Step 2

Insert the custom wiring connector ends into the vehicle connectors (C). Make sure the connectors are fully inserted with locking tabs in place.

Step 3

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 4

Insert the provided 10-amp fuse into the inline fuse holder.

 **WARNING:** Locate a flat clean surface that is out of the path of spray and debris from the rear wheels and road. Adhere the black converter box using the provided double-sided tape. Failure to mount the box in a protected area can cause loss of warranty, product failure, overheating and potential fire.

Step 5

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

