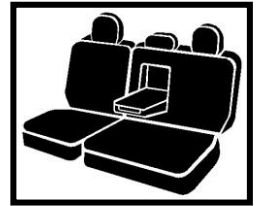 


SEAT COVERS
BY



FEATURING **SUPER-GRIP®**
THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS

NP92-80/ Oe32-80/ SL62-80/ SP82-80/ TR42-80/ TRS42-80



Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

We recommend installation begin with the cushion covers. For easier installation, remove the tire jack from the base behind passenger cushion. Replace the tire jack after installation is complete.

A. CUSHION COVER – 40 PORTION:

- | | |
|--|---|
| <ol style="list-style-type: none"> 1) Center cover on the seat. 2) Tuck back flap through crevice 3) Lift seat. Locate strap and secure to buckle on cover 4) Attach side velcro to the underside of cushion | <ol style="list-style-type: none"> 5) Pass loop on side of cushion through opening on cover 6) Adjust all velcro, straps and buckle to equalize tension and ensure a snug fit |
|--|---|

B. CUSHION COVER – 60 PORTION:

- | | |
|---|--|
| <ol style="list-style-type: none"> 1) Center cover on the seat. Cover has opening with velcro for seat belt buckle (see note below) 2) Tuck back flap through crevice 3) Lift seat. Locate strap and secure to buckle on cover | <ol style="list-style-type: none"> 4) Attach side velcro to the underside of cushion 5) Pass loop on side of cushion through opening on cover 6) Adjust all velcro, straps and buckle to equalize tension and ensure a snug fit |
|---|--|

B. BACKREST COVER – 40 PORTION:

- | | |
|---|---|
| <ol style="list-style-type: none"> 1) Remove headrests (see note below) 2) Pull tab on side of backrest to release 3) Slip cover over backrest. 4) Tuck bottom of cover through crevice 5) With backrest in down position locate strap and secure to buckle on cover | <ol style="list-style-type: none"> 6) Apply side velcro to bottom flap (see note below) 7) Repeat on other side 8) Adjust all velcro, straps and buckle to equalize tension and ensure a snug fit 9) Re-install headrest (see note below) |
|---|---|

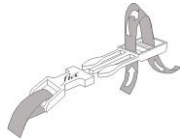 
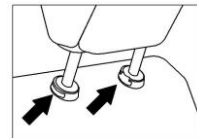 
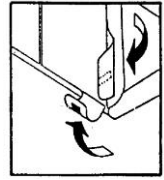 
C. BACKREST COVER – 60 PORTION:

- | | |
|--|--|
| <ol style="list-style-type: none"> 1) Remove headrests (see note below) 2) Release backrest from the back wall (see note below) 3) Detach velcro on cover 4) Slip cover over backrest under center seat belt positioning armrest through opening 5) Tuck flap with velcro behind armrest 6) Place armrest in down position and reattach velcro on cover 7) Tuck bottom of cover through crevice | <ol style="list-style-type: none"> 8) With backrest in down position locate strap and secure to buckle on cover 9) Apply side velcro to bottom flap (see note below) 10) Repeat on other side 11) Adjust all straps, buckles and velcro to ensure snug fit 12) Re-install headrest (see note below) 13) Place backrest back to original position and lock (see note below) |
|--|--|

D) ARMREST COVER

- | | |
|--|--|
| <ol style="list-style-type: none"> 1) Fold armrest down | <ol style="list-style-type: none"> 2) Slip cover over armrest and attach velcro |
|--|--|

NOTES:

<p>1) SELF-LOCKING SUPER-GRIP® BUCKLE:</p> 	<p>2) SEAT BELT OPENING</p> <ul style="list-style-type: none"> - Detach velcro pieces. - Slide cover under seat belt base - Re-attach velcro around seat belt base - Slip elastic loop over seat belt buckle
<p>3) HEAD REST REMOVAL: If the cushion is held up in ¼ position, the backrest will slant forward and make for easier removal.</p> <p>- Push in side release buttons and lift off (If unable to remove consult dealership)</p> 	<p>4) BOTTOM FLAP INSTALLATION</p> 
<p>5) RE-INSTALLATION OF HEADRESTS If the cushion is held up in ¼ position, the backrest will slant forward and make for easier re-installation.</p> <ol style="list-style-type: none"> A) Ensure pre-cut holes in seat cover align with holes in headrest base. B) Replace headrests 	<p>6) BACKREST RELEASE – 60 PORTION</p> <ol style="list-style-type: none"> A) Lift the cushion to up position B) Locate the pull tab or slide the pin on the side to release backrest C) Click sound indicates backrest is released.
<p>7) LOCKING BACKREST – 60 PORTION</p> <ol style="list-style-type: none"> A) Position the metal bar to align with the white dot or to blue line B) Push backrest back until you hear a click 	

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

LIMITED 2 YEAR WARRANTY

Fia Inc. guarantees the original purchaser a limited 2 year warranty against manufacturer's defects in materials, workmanship and finish under normal use. The warranty is void if the product has been damaged resulting from product misuse, improper installation, product modifications or product neglect. The warranty applies to all Fia products and is limited to repair or replacement of the product. Warranty does not include cost of removal, installation, labor, freight and incidental or consequential damages.

Original purchaser must return defective merchandise along with the original purchase receipt to the original place of purchase for repair or replacement. Shipping charges will apply for any repair or replacement.

Buyer assumes all risk and liability whatsoever from the installation of Fia products. Vehicles equipped with supplemental restraint systems (air bags) deployed by impact should not be modified or covered by any aftermarket seat cover without consulting the vehicle manufacturer and Fia Inc. Fia Inc. assumes no liability for injury, loss, incidental or consequential damages in the event of an accident.

