

SEAT COVERS  
BY




FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR

**NP97-42/ Oe37-42/ SL67-42/ SP87-42/ TR47-42/ TRS47-42**

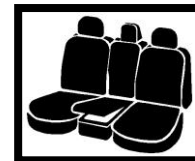

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) CUSHION COVER – 40 PORTIONS**

- 1) Release seat belt buckle from elastic holder
- 2) Center cover on the seat
- 3) With seat in highest position, pass back straps under seat through crevice and buckle to front
- 4) Pass long side strap through the opening between the molded plastic and the seat. Buckle to opposite side
- 5) replace seat belt buckle to elastic on cover
- 6) Adjust straps and buckles to equalize tension

**B) BACKREST COVER – 40 PORTIONS**

- 1) Remove head rest (see note)
- 2) Slip cover over backrest. (see air bag warning below)
- 3) Tuck flaps under backrest and attach to Velcro at back
- 4) Adjust Velcro to equalize tension
- 5) Replace headrests (see note)

**C) CUSHION COVER – 20 PORTION**


- 1) Open cushion lid to up position
- 2) Slip cover over lid and attach velcro strips
- 3) With cushion lid closed, pass back flap through crevice between seat and plastic molding
- 4) Open cushion lid to up position
- 5) Pull back flap and apply velcro to carpet
- 6) Snug and adjust velcro for a better fit

**D) BACKREST COVER – 20 PORTION**

- 1) Undo velcro on cover
- 2) Slip cover over backrest
- 3) Place headrest opening in cover around the headrest posts and attach velcro
- 4) Snug cover at back attach velcro
- 5) Position adhesive velcro supplied to align with velcro on cover around the edge of cup holder. NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.
- 6) Adjust all velcro to equalize tension


**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

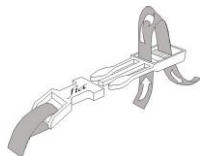

**2) HEAD REST REMOVAL:**

- Push in side release buttons
  - Lift off
- (If unable to remove consult dealership)

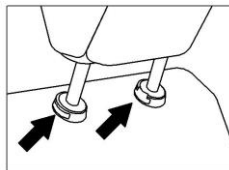

**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

08-28-19