


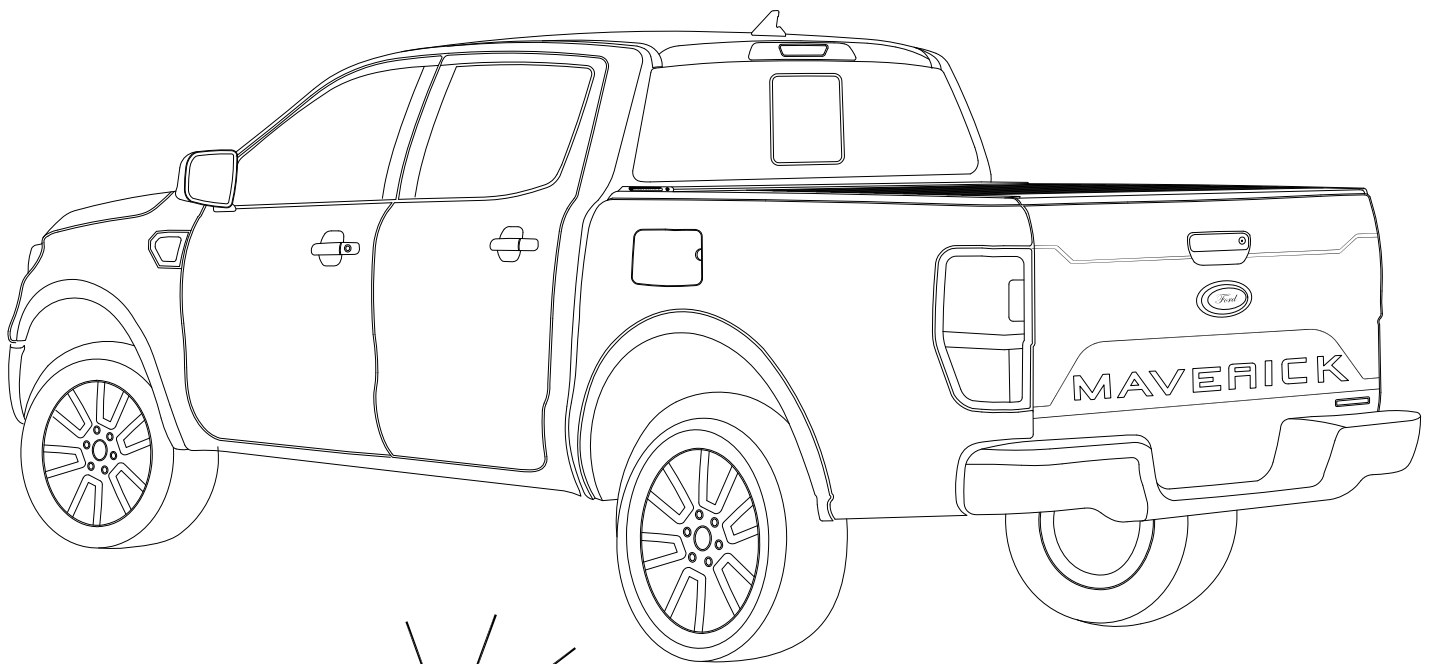

E - Series Installation Guide

Ford Maverick




Product Code
RC135E RC135E-XT


Note: Installation is the same
for both E and XT Series track.

Parts List


Item	Part Name	Qty.	Item	Part Name	Qty.	Item	Part Name	Qty.
A	Housing	1	G	Cargo Nut	6	M	1/4-20 x 1" Screw	2
B	Track	2	H	5/16-18 x 1" Cap Screw	4	N	1/4-20 Nut	2
C	Cargo Shield/Track spacer	1	I	5/16 Lock Washer	4	O	Allen Wrench (1/4")	1
D	Drain Tube	2	J	Black Rubber Washer	4	P	303 [®] Vinyl Protector	1
E	Bed Clamp	4	K	1/4-20 x 3/8" Screw	4	Q	Override Cable	1
F	#10-24 Screw	6	L	1/4-20 Lid Screw	2			

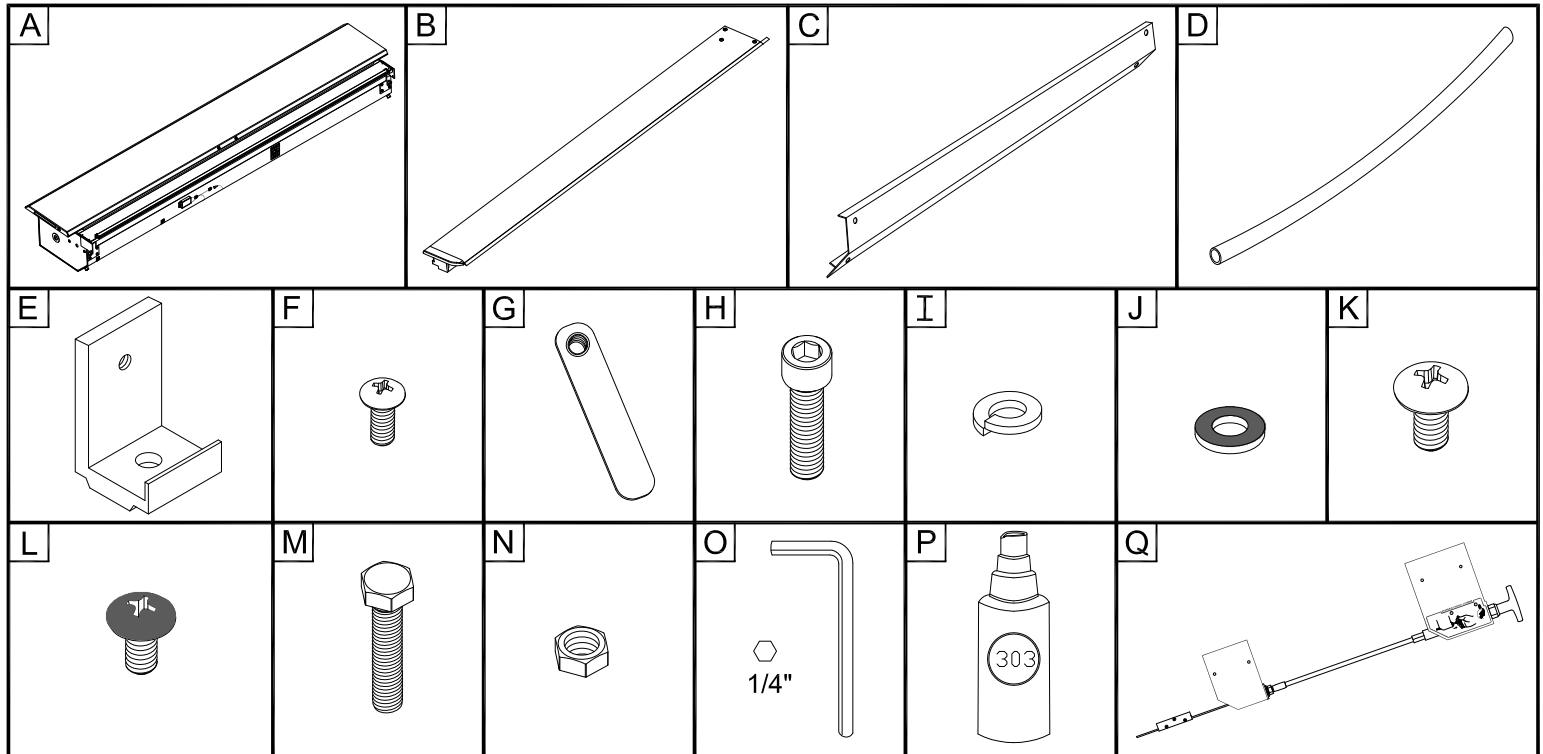


Tools Needed

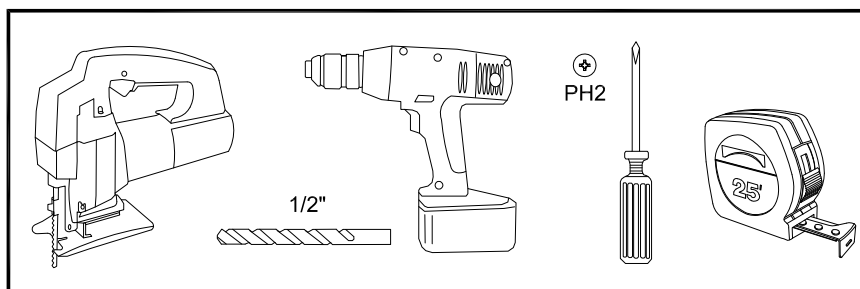

Power Wire / Connectors

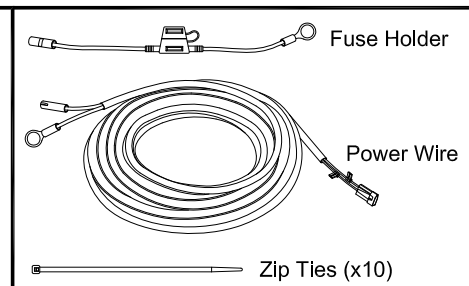


Remotes

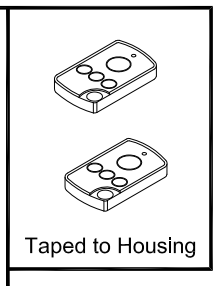



1a

If no plastic bedliner present proceed to page 4 - Step 1

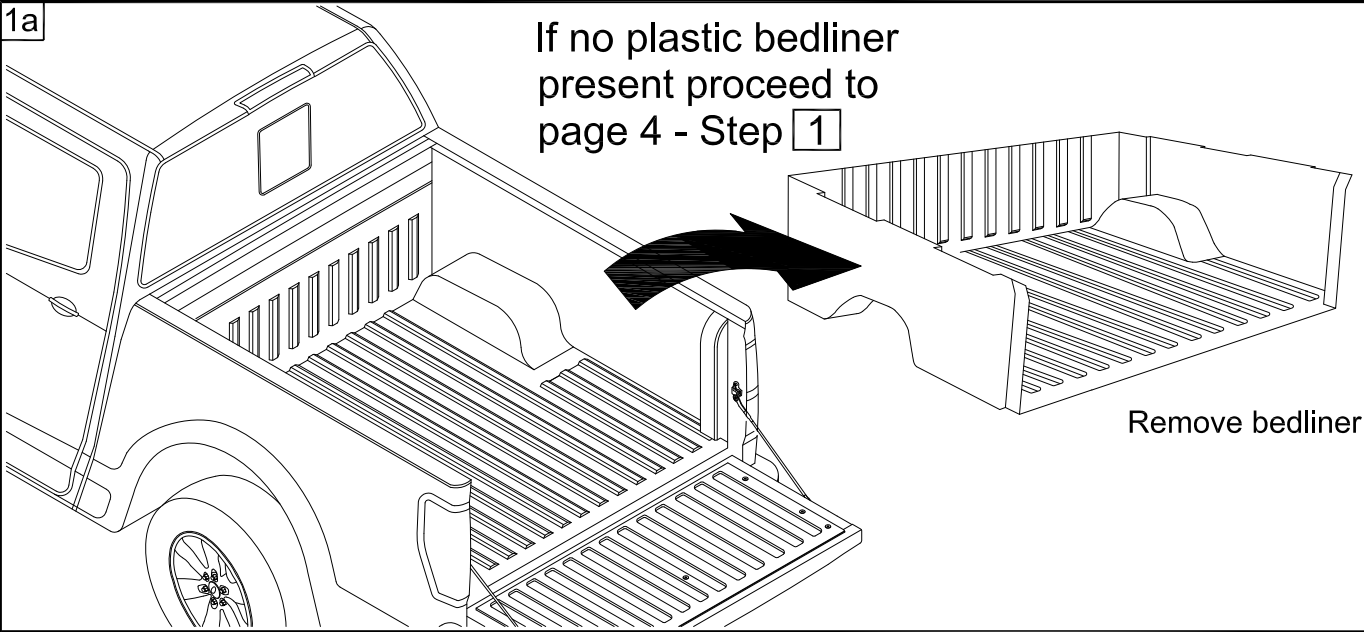


1b


Cut bedliner as shown.

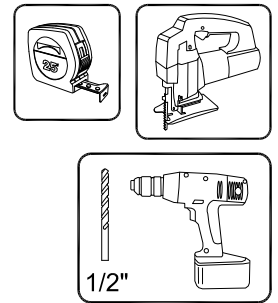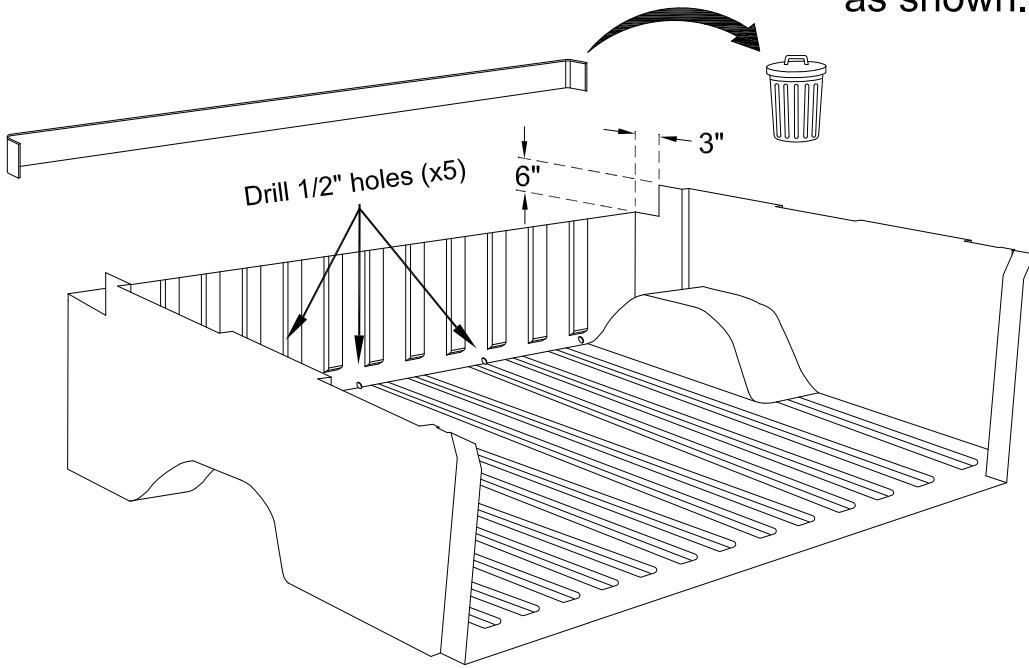


1c

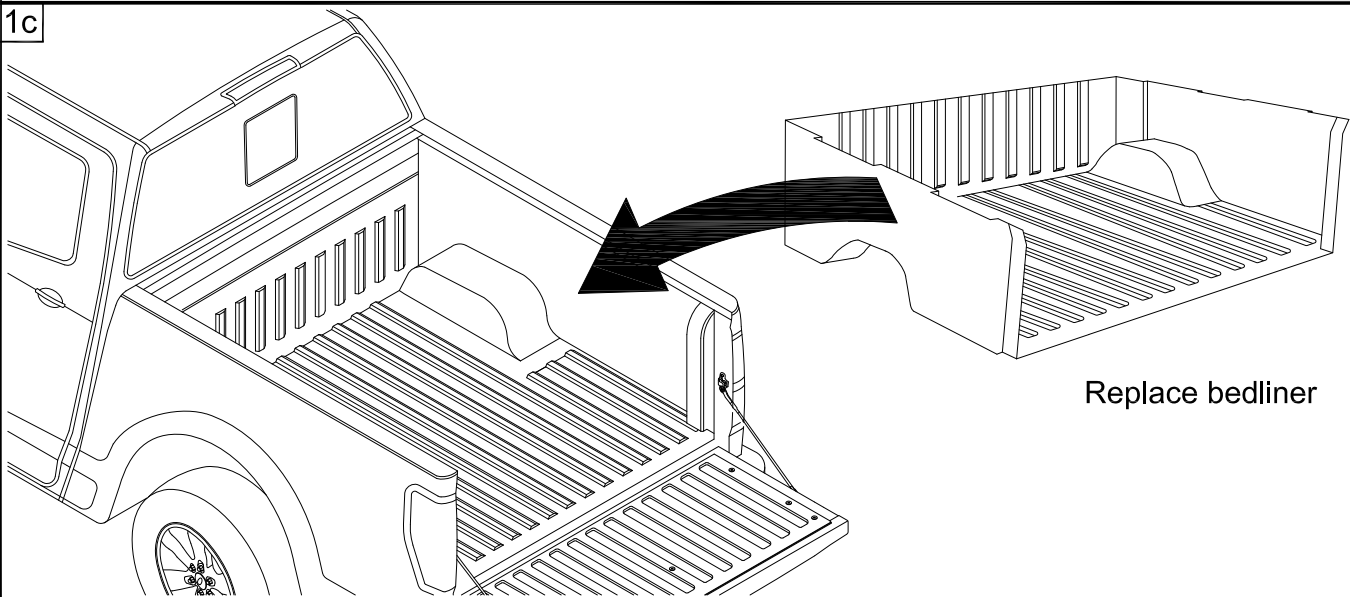


1

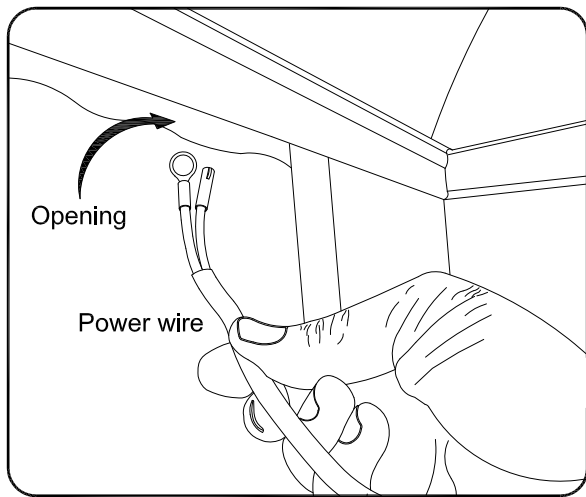

Feed end of power wire through an opening on the drivers side of truck, then down through the side panel to the ground.
Leave 2 feet of power wire in the truck bed.

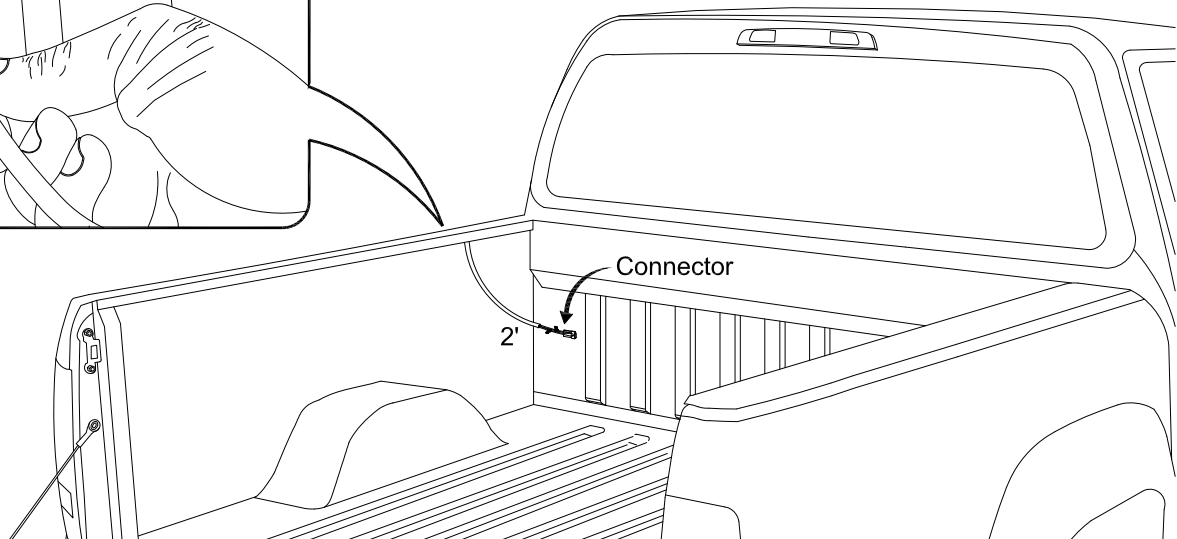

2


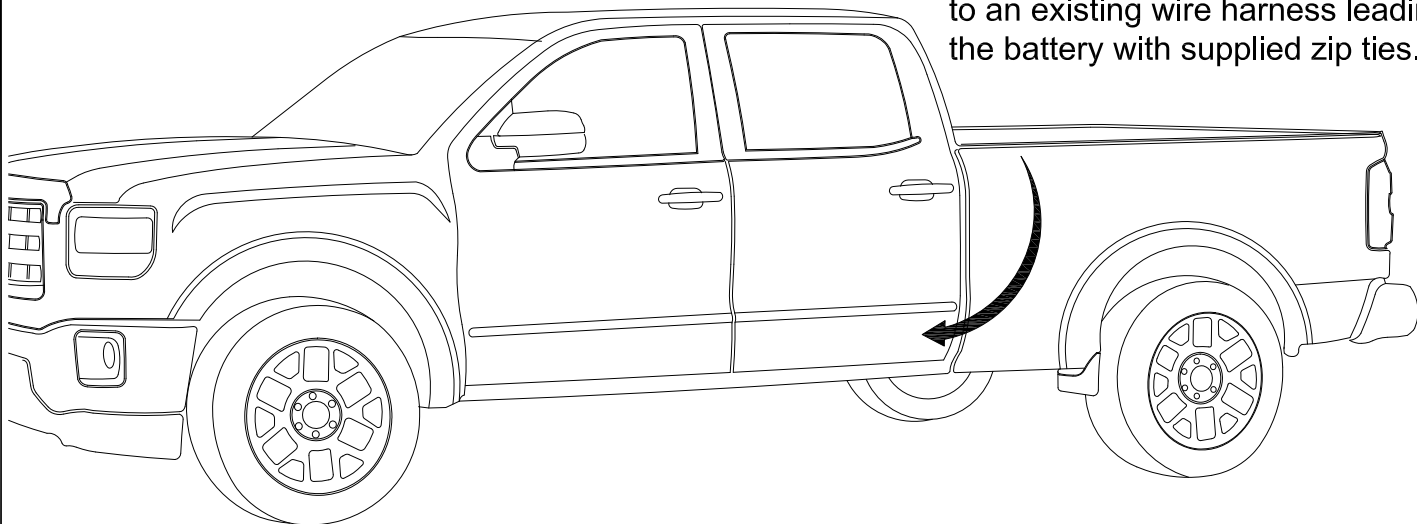


Feed power wire under the truck securing to an existing wire harness leading to the battery with supplied zip ties.


3

Connect the fuse holder to the white wire connector.

Connect to battery.

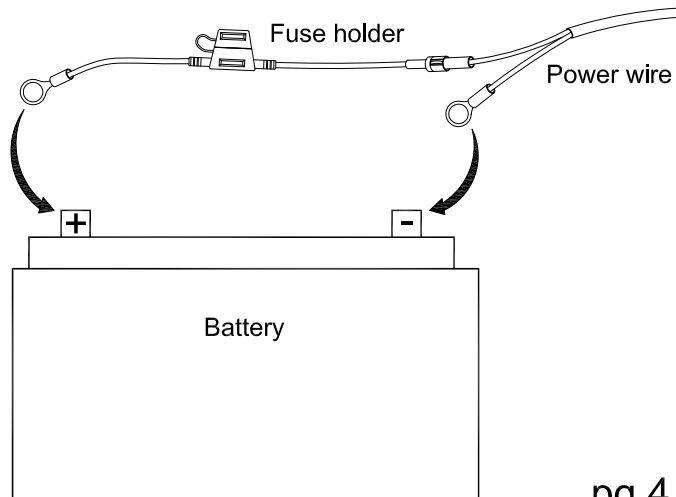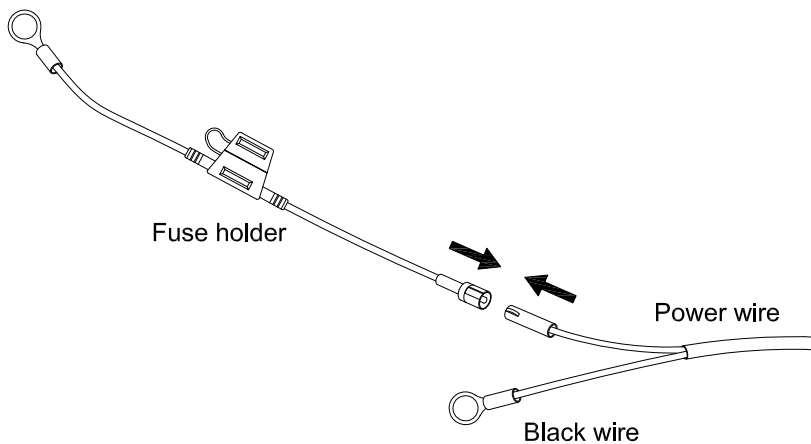


4 LHS = RHS

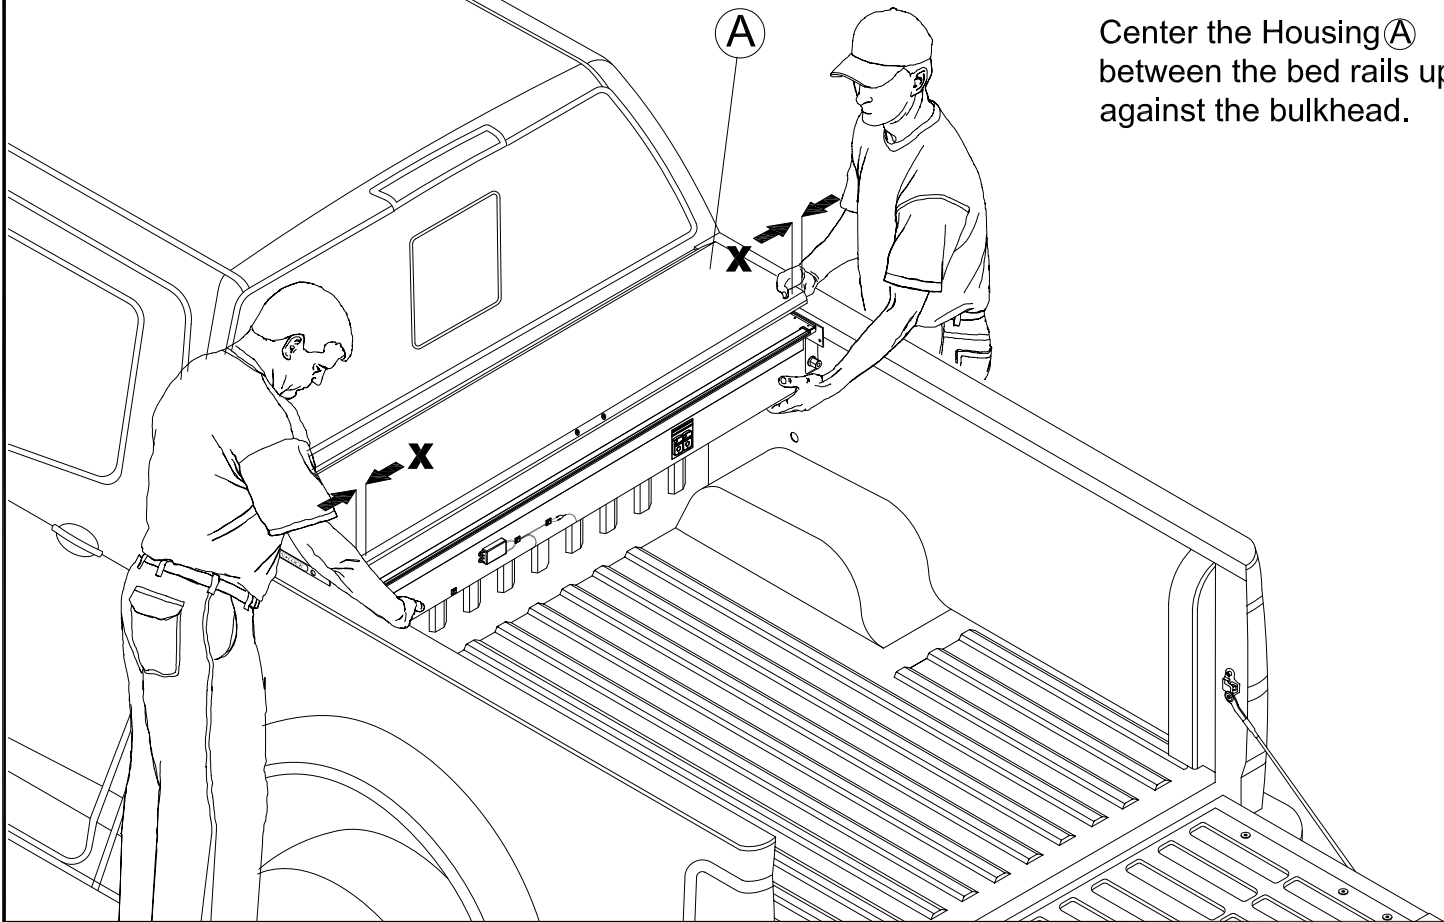

Center the Housing **A** between the bed rails up against the bulkhead.


5

Remove Lid.

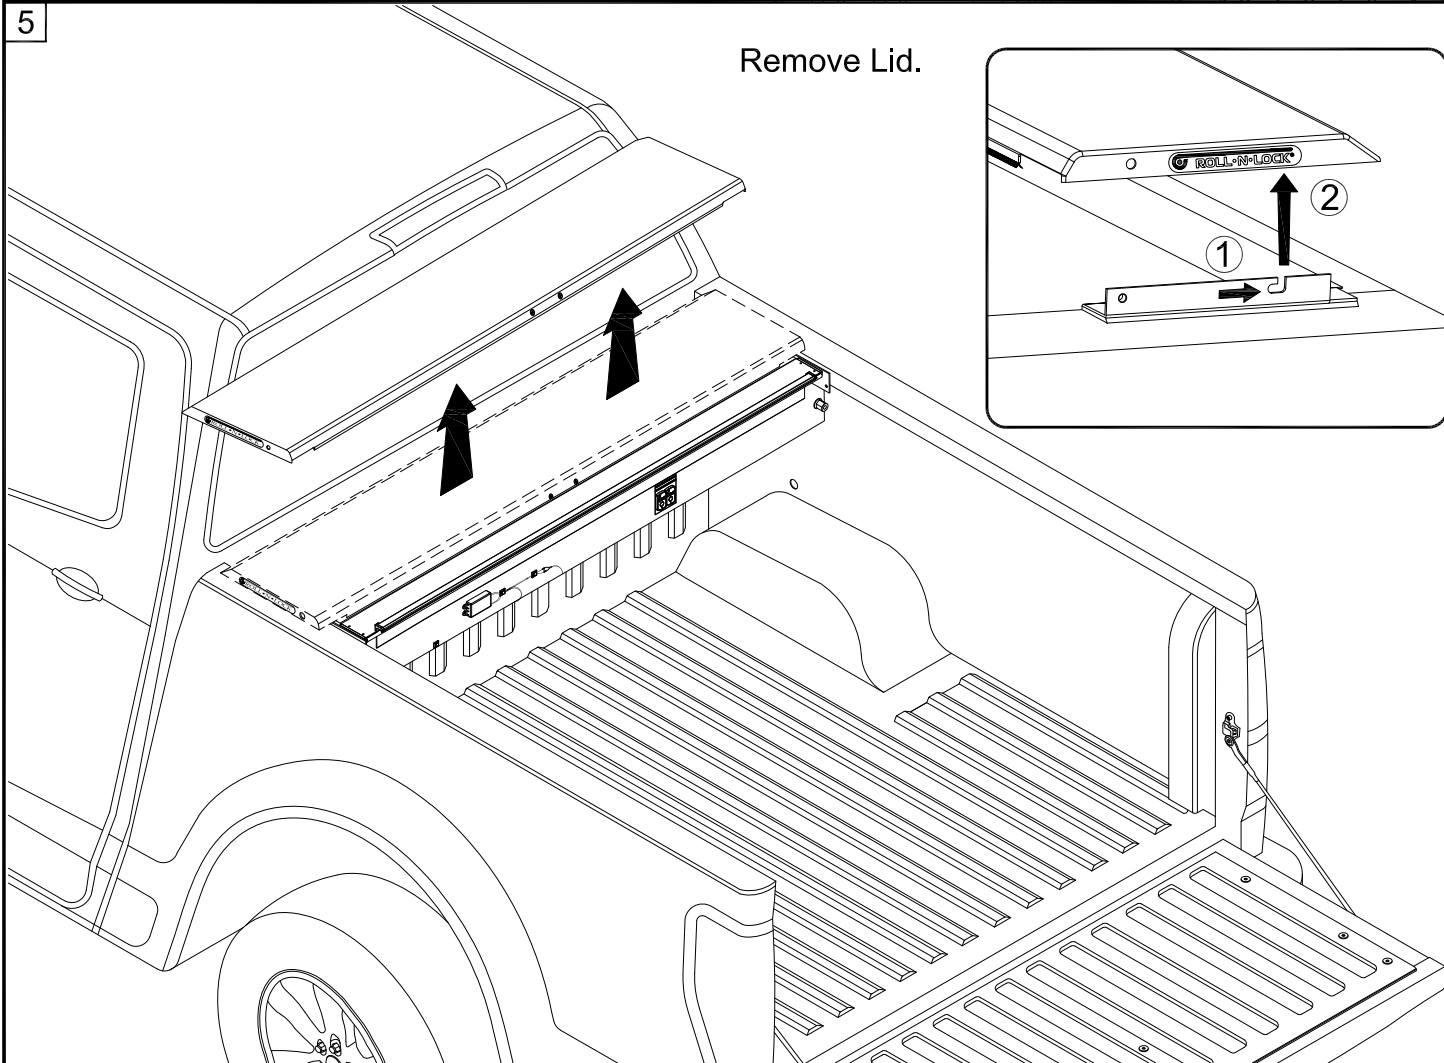


6 LHS = RHS

Key Tracks **B** onto housing stems.


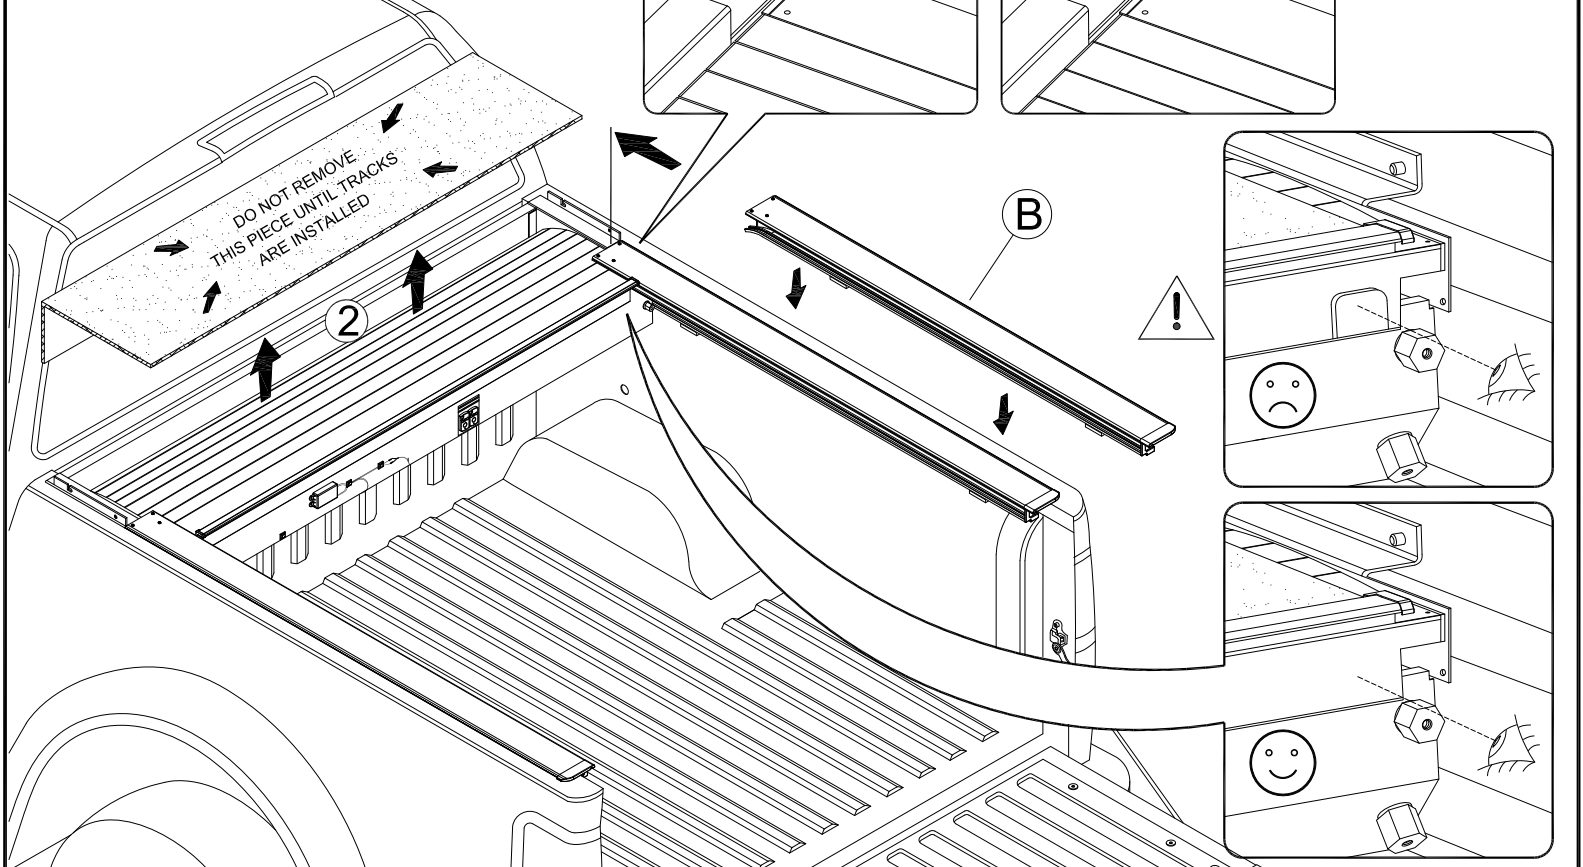


7 LHS = RHS

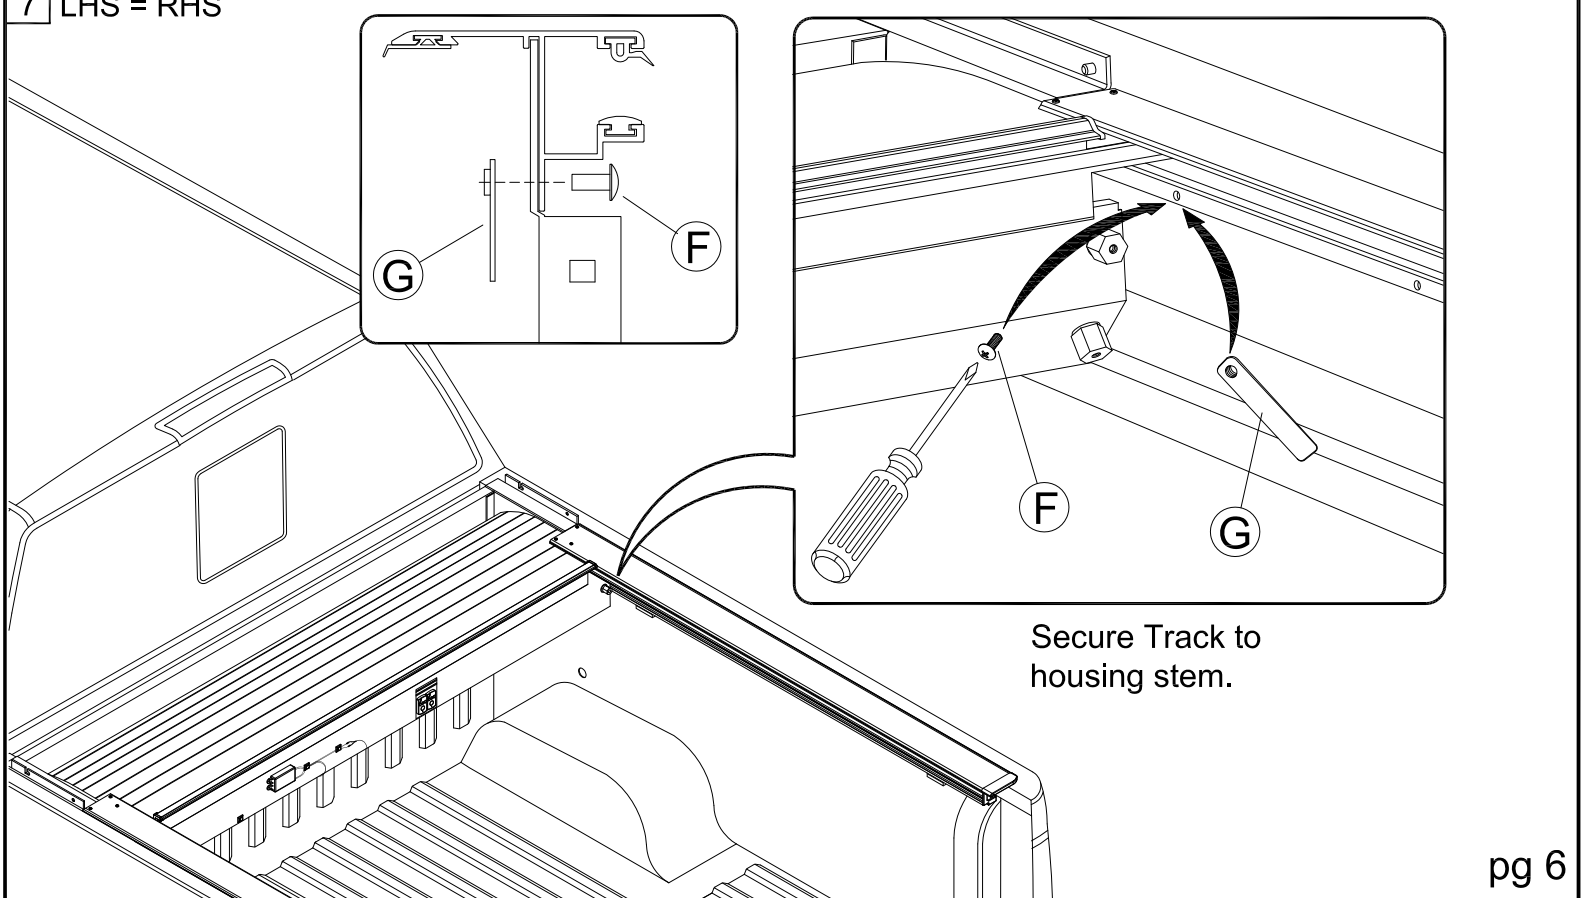




8 LHS = RHS

Loosely attach the Bed Clamps (E) to the track clamps.

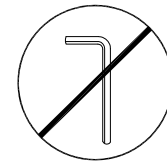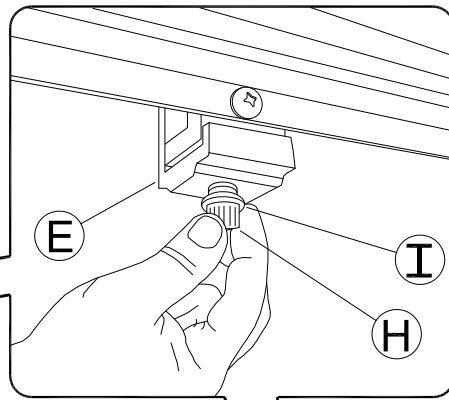

9 LHS = RHS

Close tailgate, shift the Housing back so the end of the Tracks are up against the tailgate.

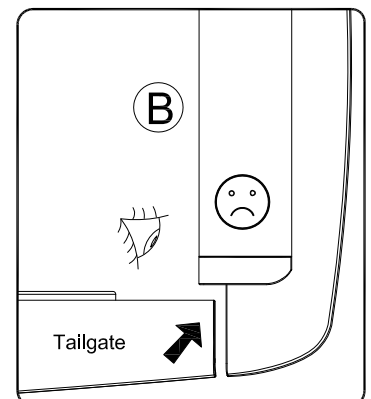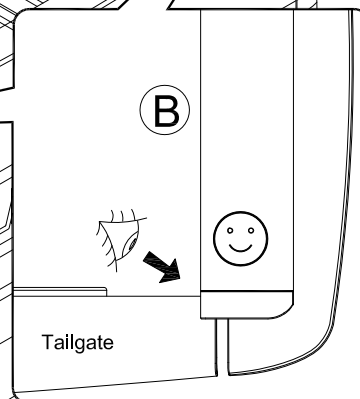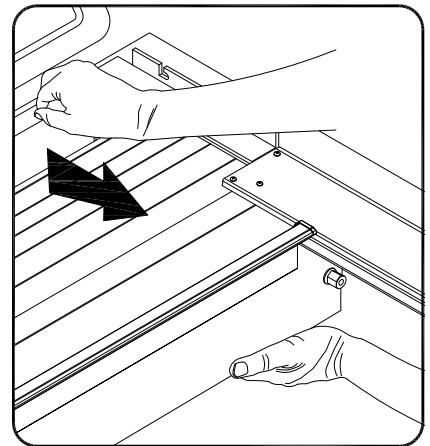

10 LHS = RHS

Important to check track to track inside dimension, otherwise the cover will not run properly.

49 1/4"

49 1/4" !

Notch →

C

C




Carefully place Cargo Shield on tracks using the notches to ensure correct spacing of tracks.

11 LHS = RHS

Once tracks are correctly spaced tighten bed clamps to the track clamps, do not over tighten.




62in/lbs

7 Nm

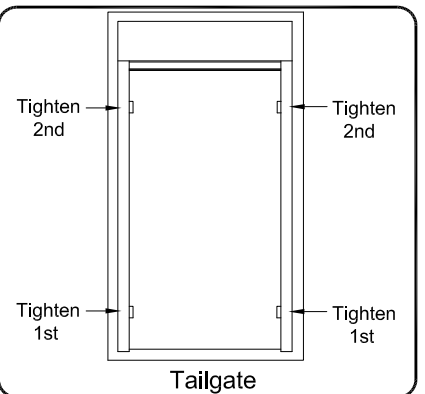

12 LHS = RHS



If needed:
Use bolt (M) and nut (N) to
align the track to correct
position.

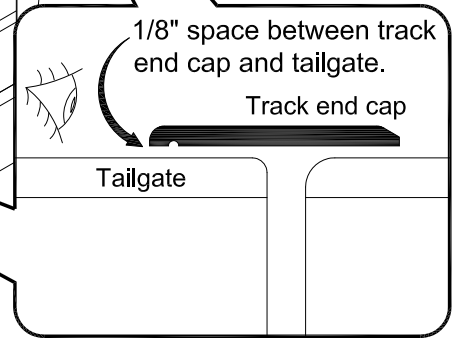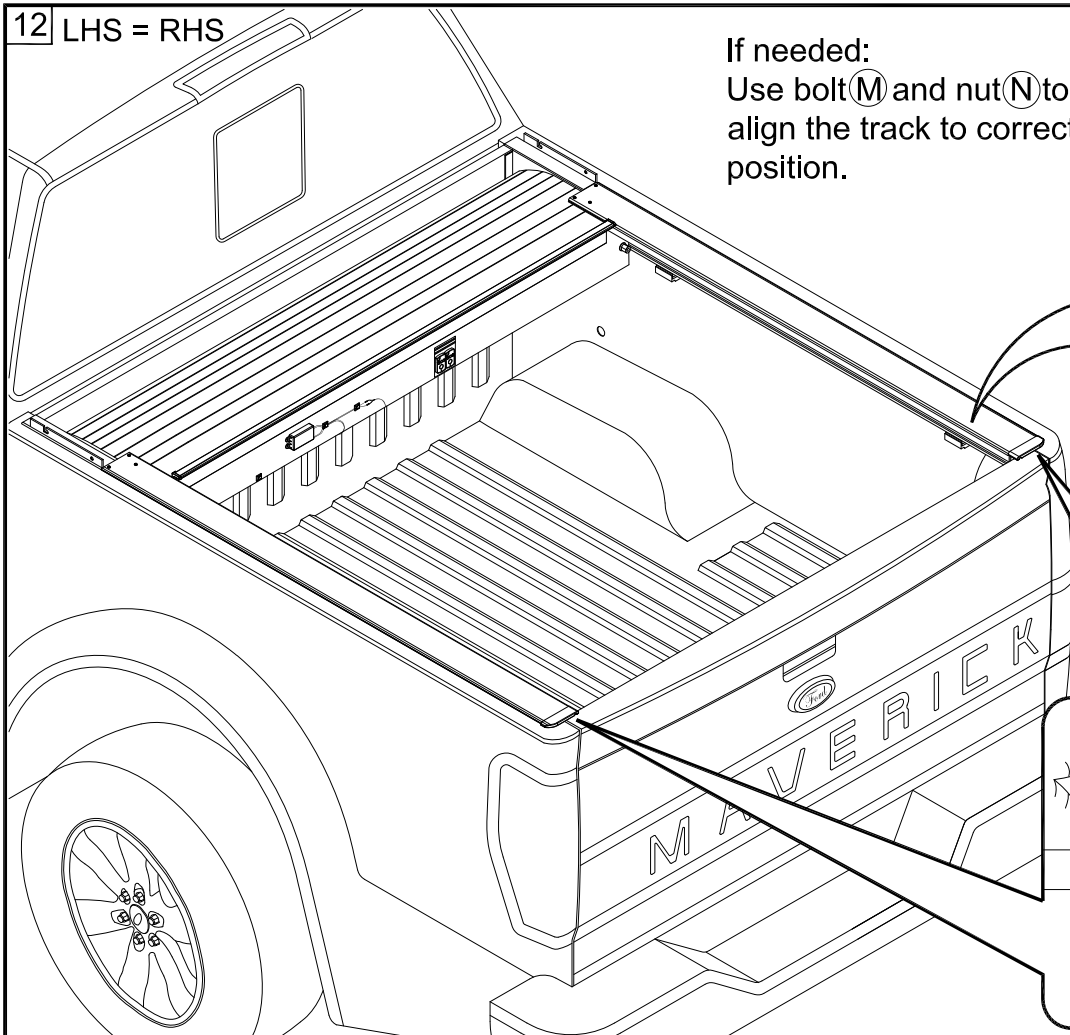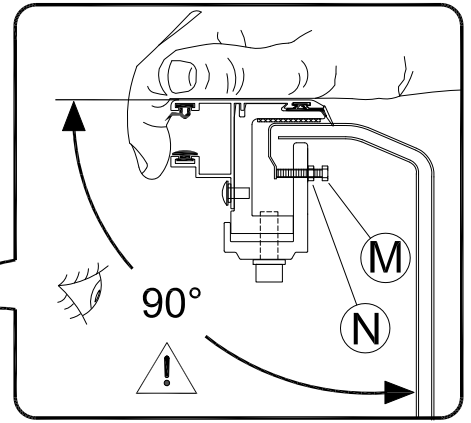

13 LHS = RHS

Replace lid.


Use supplied lid screws
(L) in hardware bag.

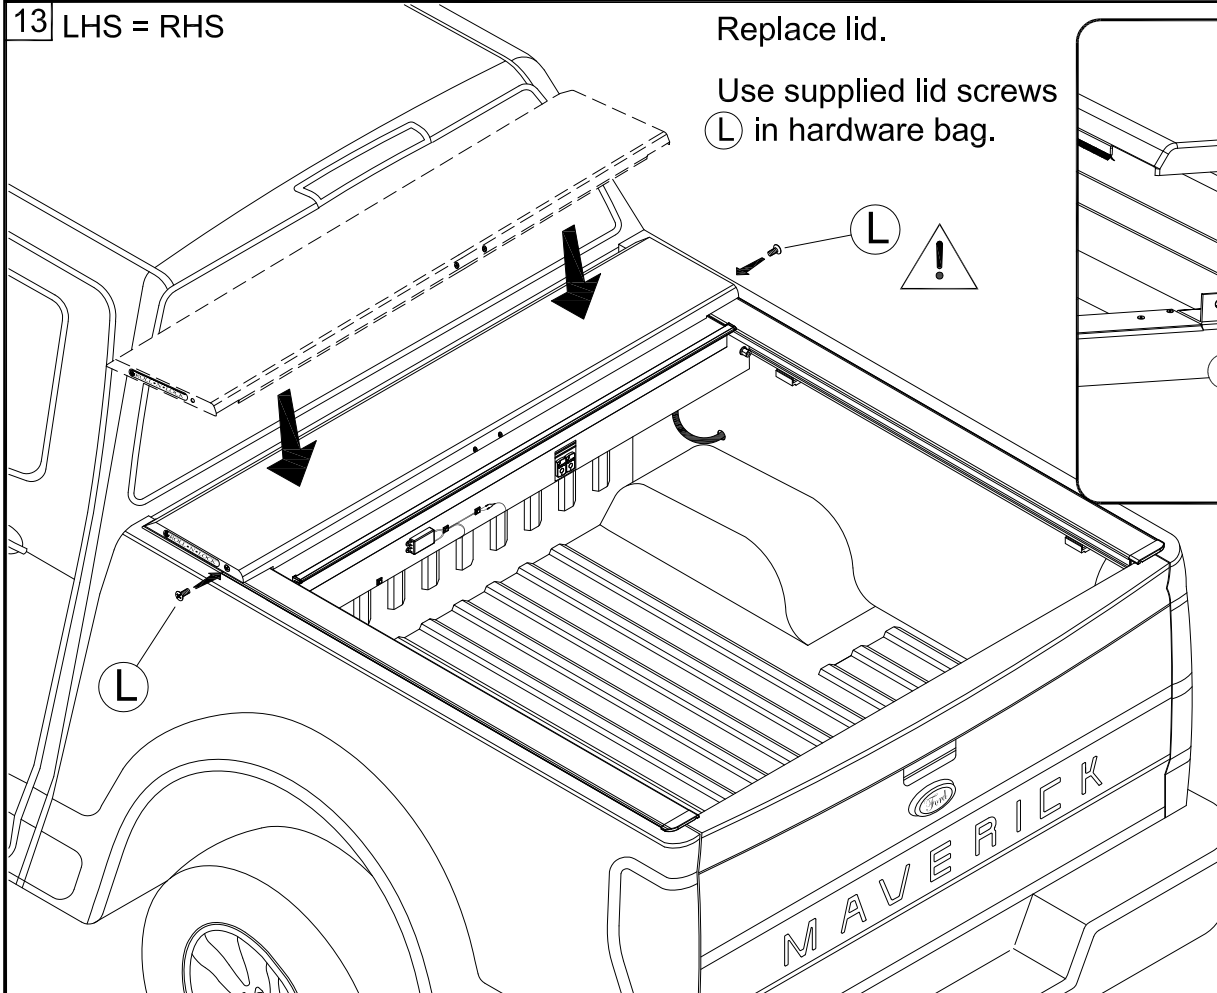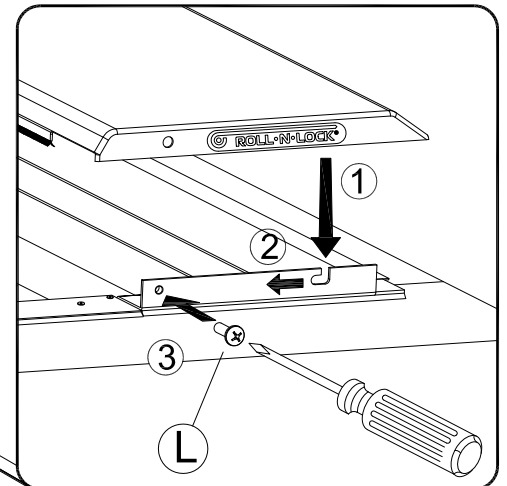

14 Powering the unit:


A

Unwrap light wires from motor wire.

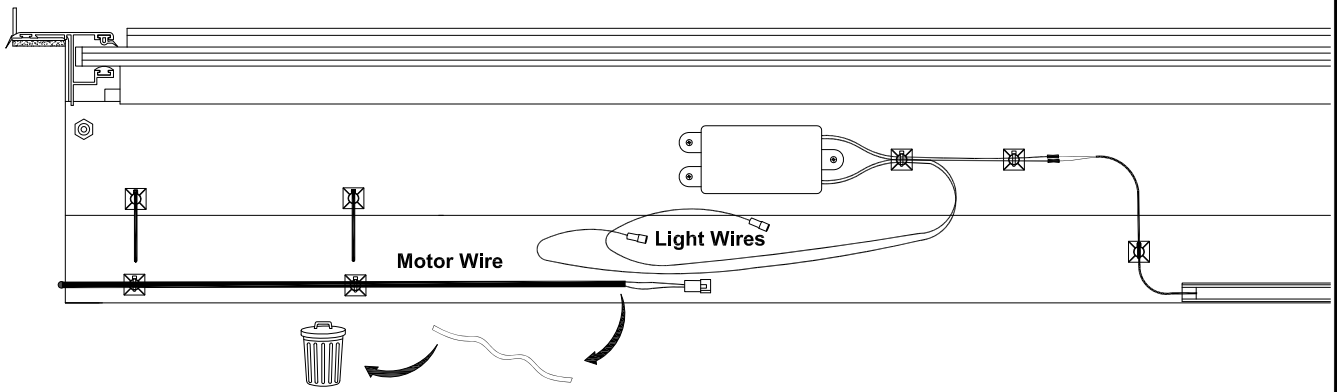


B

Bring power wire around and loosely zip tie to the front of the unit.

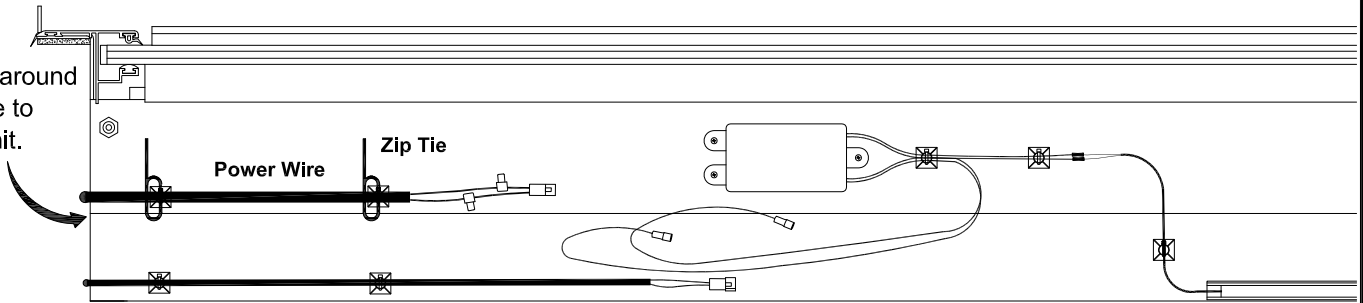

C


Plug motor wire connector into power wire connector.

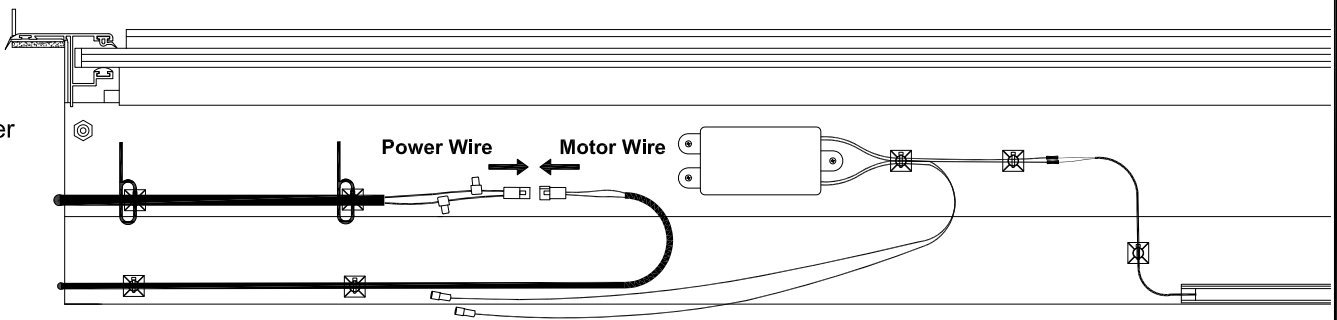

D


Plug light wire connectors into power wire connectors.


⚠ Black to Black
White to Red

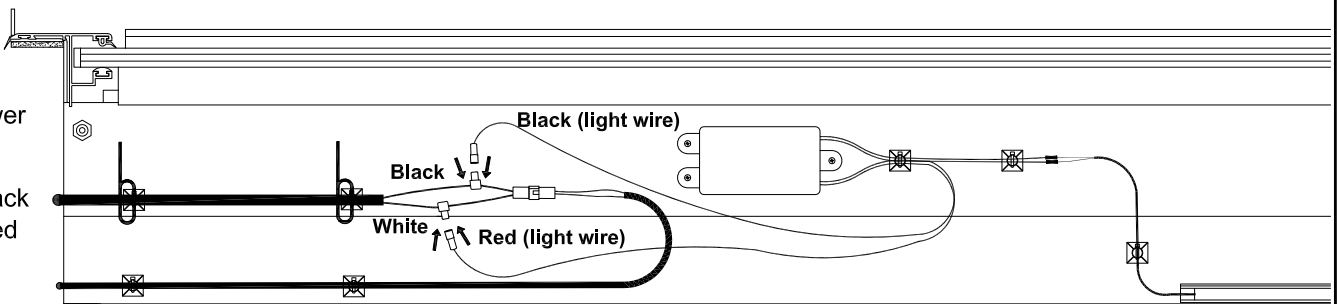

E

Position motor wire tighten zip ties and trim.

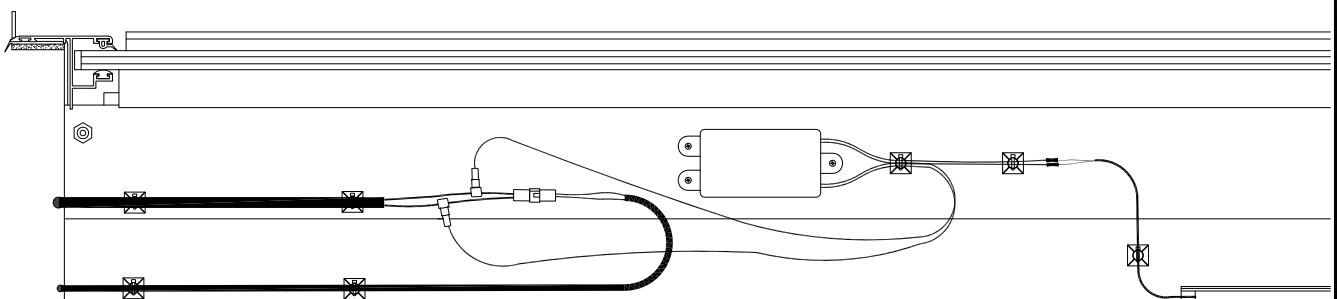


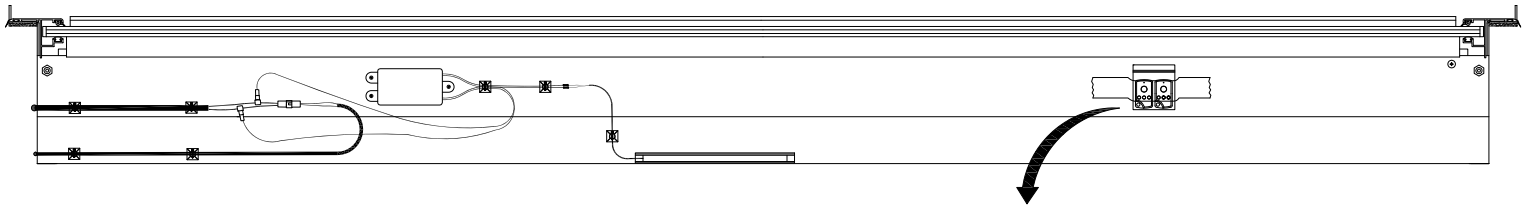


- Remove remotes from housing.

Operating the system:




- Push the large button to run cover.
- Push the large button to stop the cover.
- Cover will stop automatically at tailgate and housing.

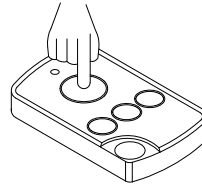

- Push the small left button to turn light on.
- Push the small left button to turn light off.
- Light will automatically turn off in 3 minutes.


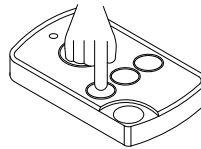


Attach the Cargo Shield © with the slots at the bottom to the housing. Note washer ① placement.

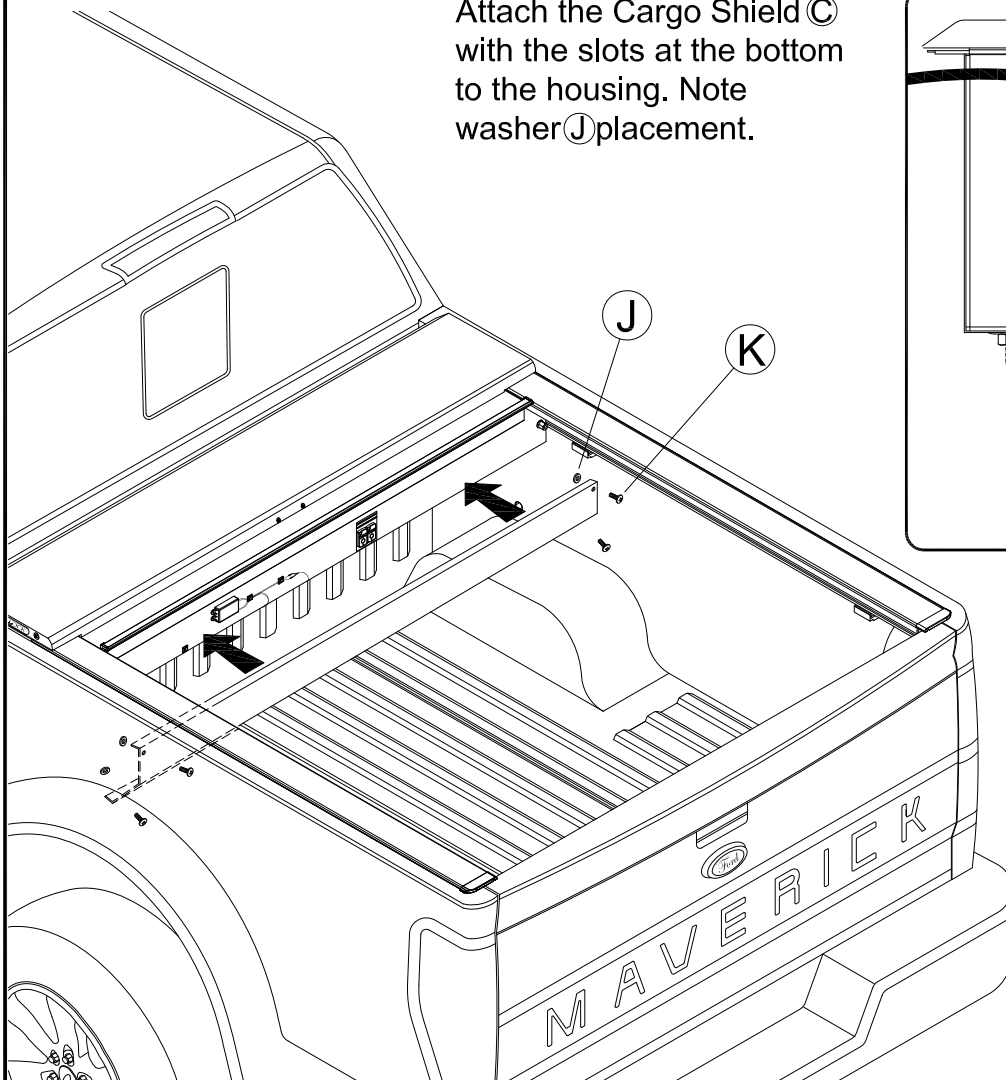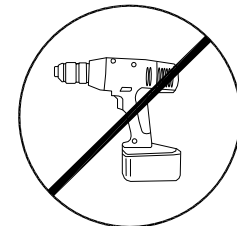
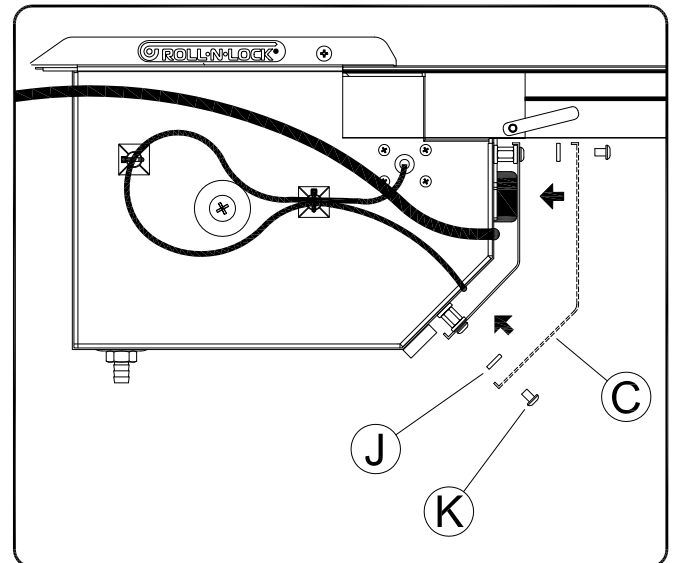


17 LHS = RHS

Insert one end of the drain tube **D** through the side truck bed existing hole and insert the other end onto the housing fitting.

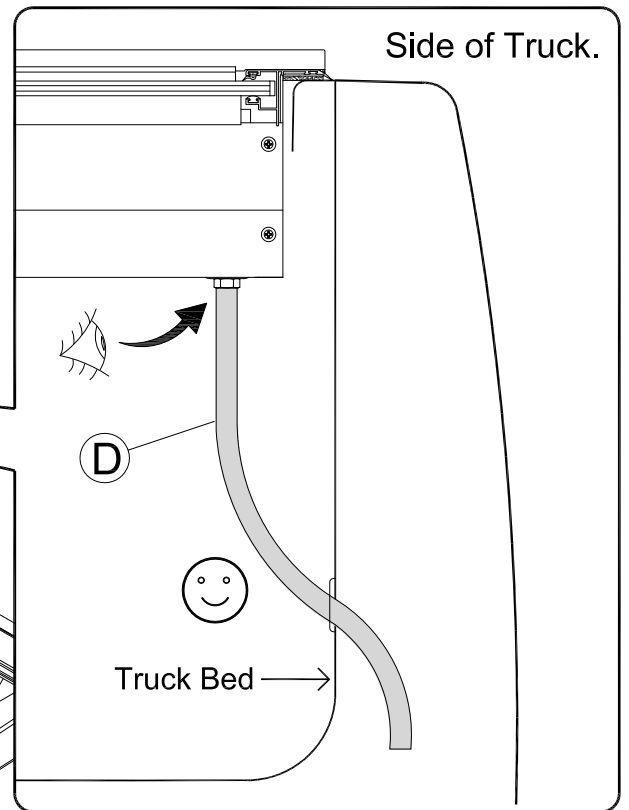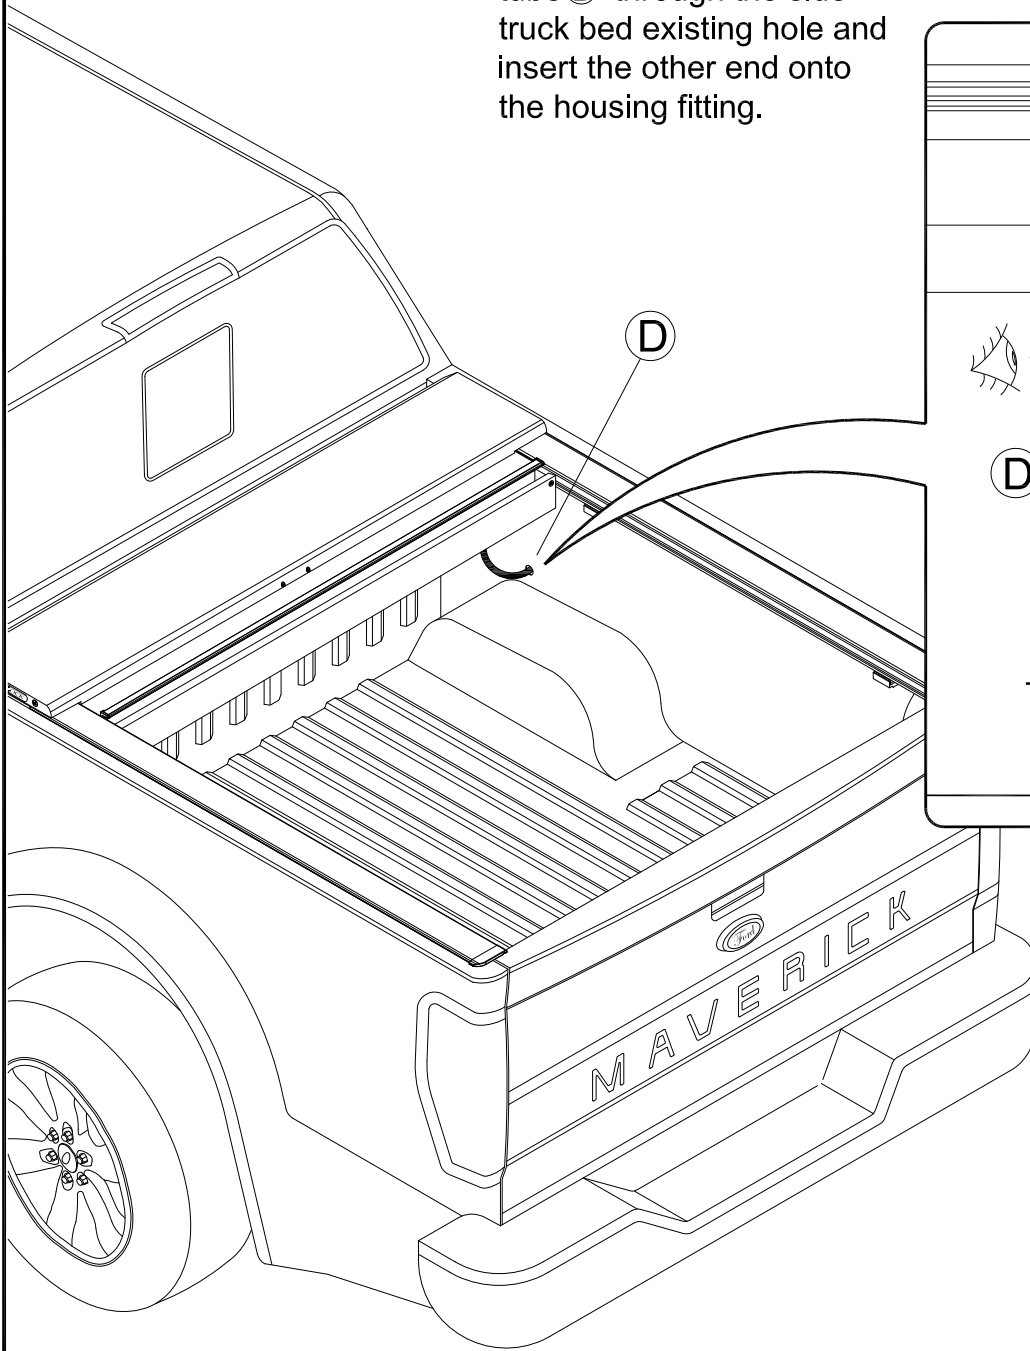


Override Cable

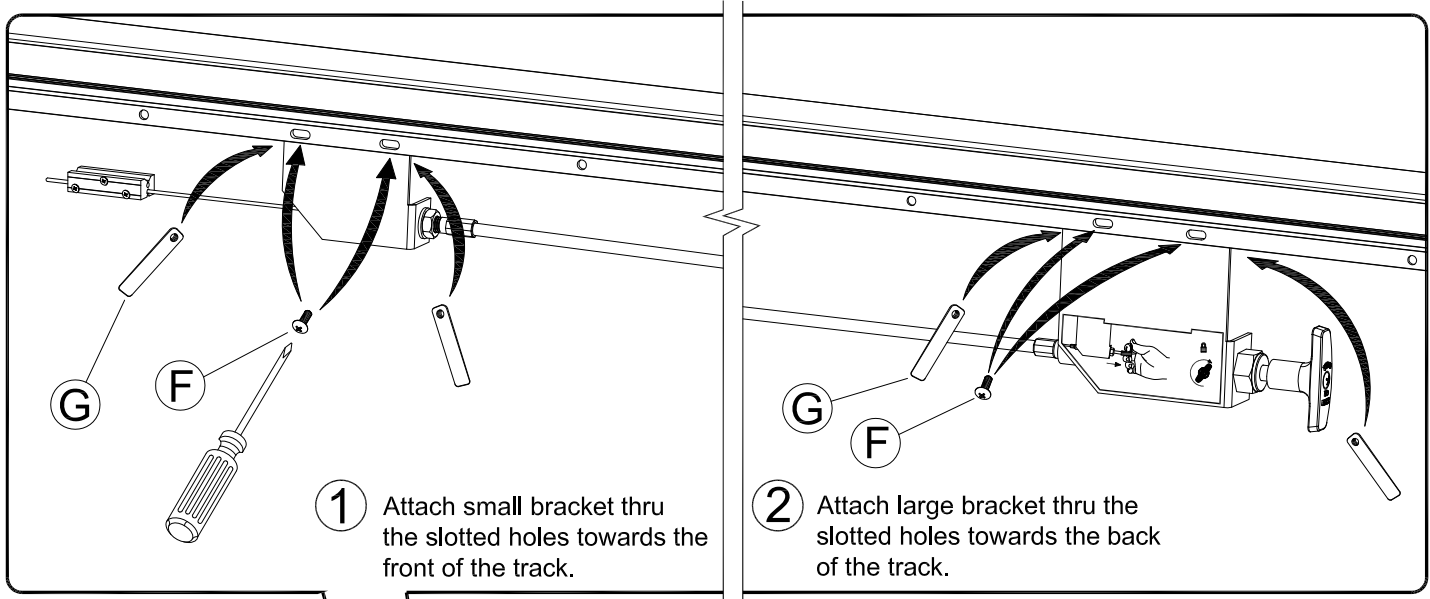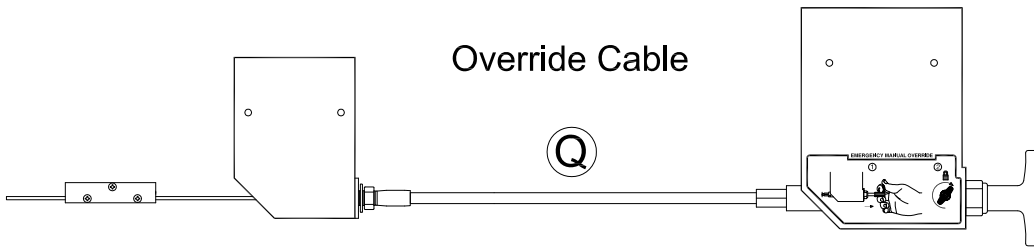



1 Attach small bracket thru the slotted holes towards the front of the track.

2 Attach large bracket thru the slotted holes towards the back of the track.

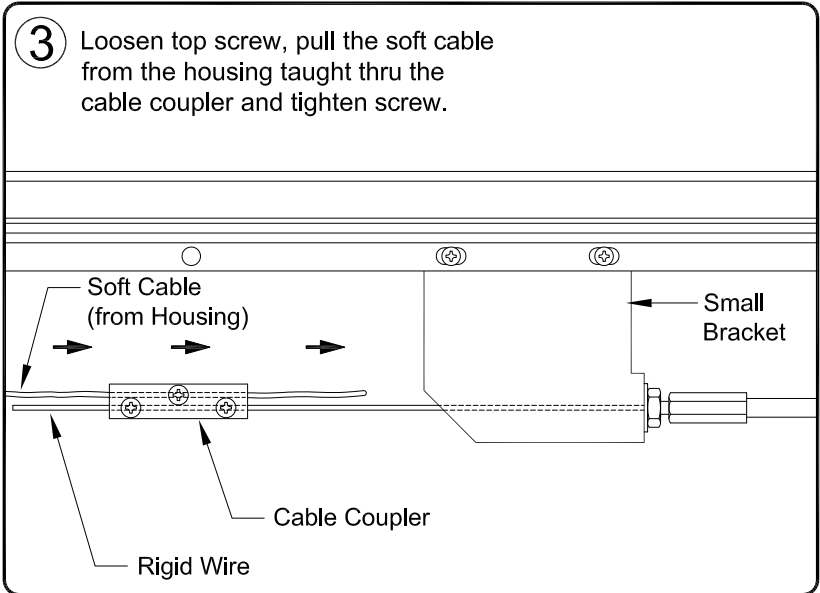

3 Loosen top screw, pull the soft cable from the housing taught thru the cable coupler and tighten screw.

*Passenger side only

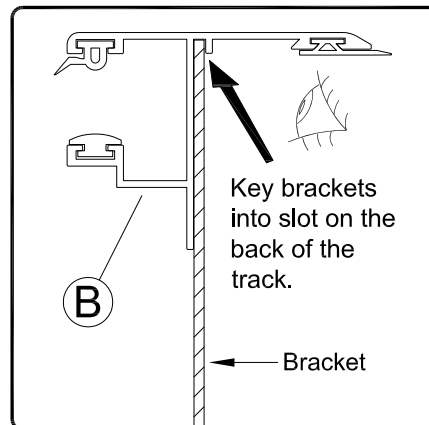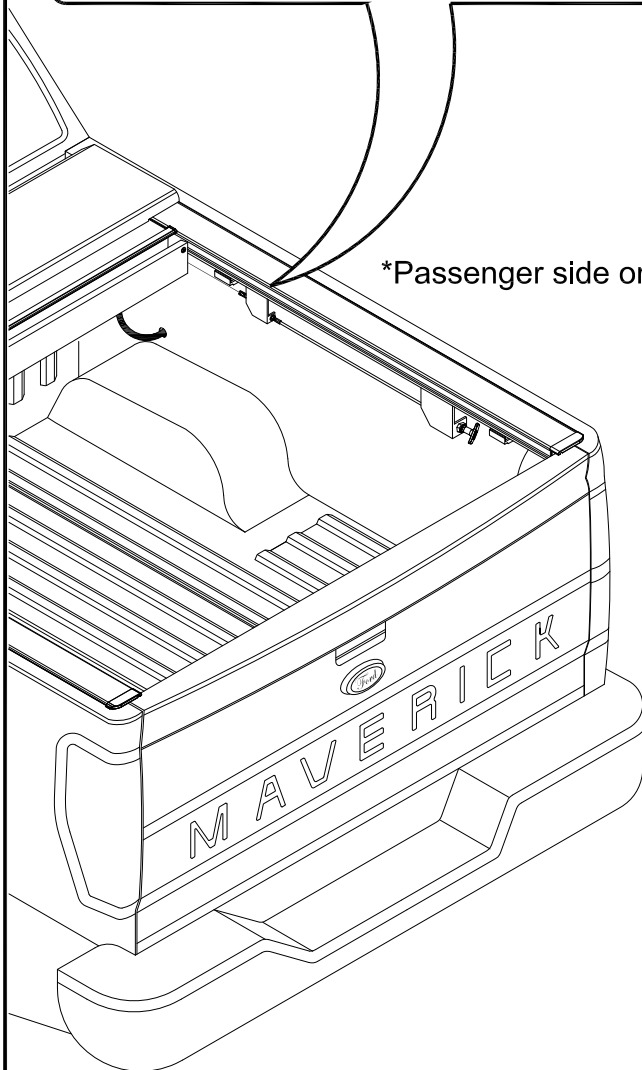


Key brackets into slot on the back of the track.

Bracket

Operating the override:

- Use only when the cover is not operating remotely.
- Pull the lever and turn to lock in place, the cover will operate manually.
- Unlock the lever and push back to lock cover.

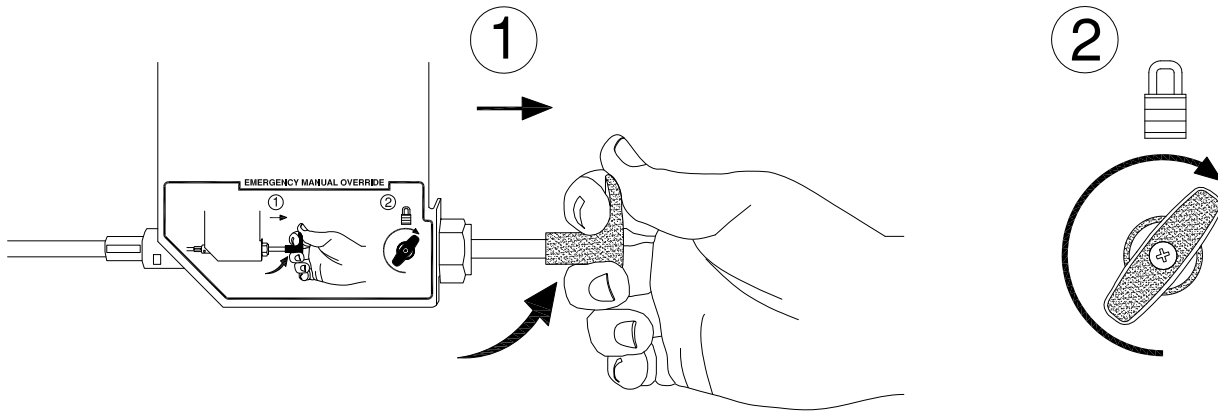


Troubleshooting

Cover jumps when running.




Check Track connection at housing.

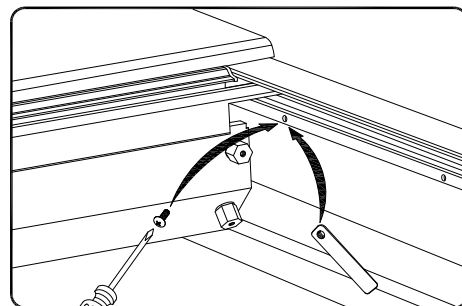

Cover drags running forward and back.




Spray 303[®] on a rag and wipe the top gasket in the Track back and forth.

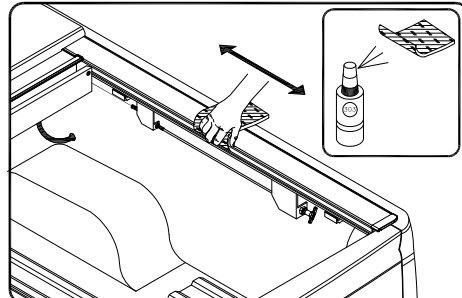

Cover binds when closing.




Check Track to Track measurement.

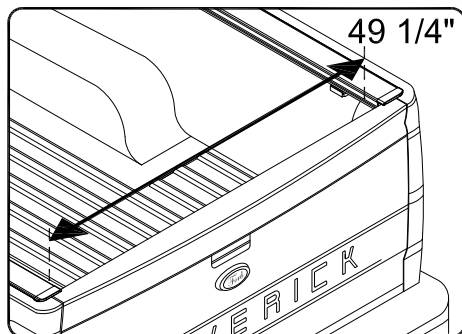

Track tips up.




Use angularity bolt to level Track.

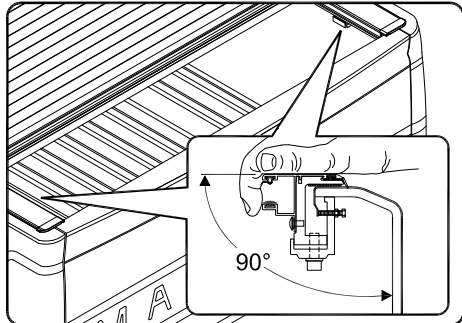

Cover does not run.




Check connection at battery.

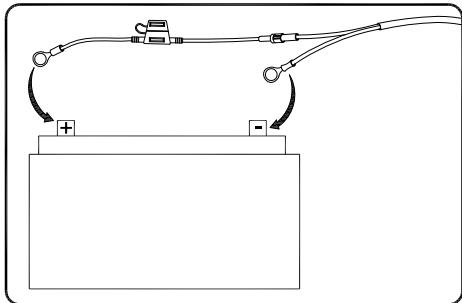

Light does not work.



Check plug-in connection.

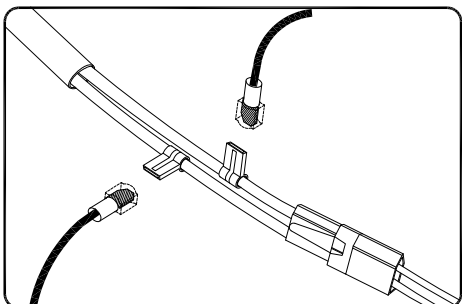

Any questions please call Customer Service at 800-952-7655 or email customerservice@rollnlock.com



3-YEAR LIMITED WARRANTY*

***5-YEAR LIMITED WARRANTY ON E-SERIES COVERS**

www.rollnlock.com/warranty-information

This limited warranty is extended by ROLL-N-LOCK Corporation, a Florida corporation, with its principal office at 915 S. Dixie Highway, E., Pompano Beach, Florida ("ROLL-N-LOCK"), to the original purchaser of a ROLL-N-LOCK® truck bed cover or cargo management device. ROLL-N-LOCK warrants its products, when purchased directly or from an authorized reseller, to be free from manufacturer's defects for a period of three (3) years from the date of purchase on A and M Series covers -- five (5) years from date of purchase on E-Series covers. During this period, ROLL-N-LOCK, or its authorized dealer, will repair or replace at no expense to the limited warranty holder, any part found to be defective as a result of the manufacturing process, subject to the limitations and exclusions below (See HOW TO MAKE A CLAIM below). Labor charges associated with removing or reinstalling the product and parts are not covered with this warranty. ROLL-N-LOCK warrants only against defects that arise as a result of normal use of the product in normal environmental conditions. ROLL-N-LOCK does not warrant against the following: (a) improper installation, including, but not limited to, installations performed not in accordance with installation instructions and warning labels; (b) extreme environmental conditions, including, but not limited to, temperatures below negative thirty degrees Fahrenheit (-30°F) or above one hundred-twenty degrees Fahrenheit (120°F); (c) water intrusion, including, but not limited to, leaks as a result of normal use; (d) misuse, abuse, modification, tampering or alteration; (e) improper maintenance; (f) operation outside of the product specifications; (g) normal wear and tear, cosmetic damages or fading or deterioration of the finish caused by exposure to sunlight or chemicals and/or other unusual environmental conditions; (h) negligence; or (i) accidents, flood, fire, earthquake or other acts of God. This warranty does not extend in any respect to accessories or parts not produced by ROLL-N-LOCK and shall not extend to any consequential or incidental damages. This warranty is expressly in lieu of all other warranties expressed or implied, including the warranties of merchantability and fitness for a particular purpose and of all other obligations or liabilities on the part of ROLL-N-LOCK. ROLL-N-LOCK neither assumes nor authorizes any other person to assume for it any other liability in connection with the sale of its products. The warranty expires if the product is removed from the original vehicle or if the original vehicle is transferred to another owner. The warranty is not transferable from the original purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limits on implied warranties, therefore the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. ROLL-N-LOCK does not warrant any products purchased from unauthorized resellers or any products whose serial number has been removed or defaced. For a complete list of ROLL-N-LOCK authorized dealers, please visit ROLL-N-LOCK's website at <http://rollnlock.com> and click on the "Find a Dealer" tab.

HOW TO MAKE A CLAIM

For products purchased from a brick and mortar dealer, the party claiming must notify the dealer from whom the product was purchased of the defect or malfunction. The dealer will inspect the product and consult ROLL-N-LOCK to be covered by its warranty. ROLL-N-LOCK will send, at no cost to the warranty holder (including freight expense within the continental U.S.A.), the replacement part or parts necessary to correct the defect. If the problem is determined to be caused by improper installation by the dealer, the dealer will, in accordance with his obligation to adhere to ROLL-N-LOCK's authorized dealer warranty policy, immediately rectify the problem. For products purchased from ROLL-N-LOCK directly, a ROLL-N-LOCK internet dealer or any other authorized outlet that excluded the service of installation, and the warranty holder performed the installation on a do-it-yourself basis, the warranty holder may, at ROLL-N-LOCK's option, be required to return the defective parts, properly packaged and at the warranty holder's expense, to ROLL-N-LOCK's warranty department at the address below. The warranty holder should include a product I.D. number and a brief description of the problem. If the part or parts are found to be defective, the replacement part or parts will be immediately returned to the warranty holder at ROLL-N-LOCK's expense (limited to the continental U.S.A.). If the warranty holder requires assistance, he may call ROLL-N-LOCK directly at 1-800-952-7655. ROLL-N-LOCK maintains the highest possible standards of manufacturing and quality control. Accordingly, it expects its dealers to adhere to a similar standard when installing its products and upholding this warranty. If you believe you have a defective ROLL-N-LOCK product and encounter any difficulty obtaining satisfaction, please contact ROLL-N-LOCK customer service by telephone at 1-800-952-7655 or by email at info@rollnlock.com.

