



INSTALLATION INSTRUCTIONS SYNTHETIC WINCH ROPE PN68560

 
Application: ATV PLOW

As you read these instructions, you will see **NOTES**, **CAUTIONS** and **WARNINGS**. Each message has a specific purpose. **NOTES** are additional information to help you complete a procedure. **CAUTIONS** are safety messages that indicate a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. A **CAUTION** may also be used to alert against unsafe practice or possible equipment damage. **WARNINGS** are safety messages that indicate a potentially hazardous situation, which, if not avoided could result in serious injury. **CAUTIONS** and **WARNINGS** identify the hazard, indicate how to avoid the hazard, and advise of the probable consequence of not avoiding the hazard. **PLEASE WORK SAFELY!**

WARNING

SEVERE INJURY OR DEATH MAY RESULT IF YOU IGNORE ANY OF THE FOLLOWING.

- Read the Winch Operator's Manual, ATV Operator's Manual, and all warning labels before operating the winch and ATV.
- Stay clear of moving parts and cable. Keep others away when operating the winch.
- Inspect the winch mechanism, fasteners, wire, or synthetic rope, before operating. Replace all worn or damaged parts before operating.



1. Remove Wire Rope:

Place the winch in the free spool position, and un-spool all the wire rope. Be careful when removing the metal button, this will not be reinstalled when using the synthetic winch rope. See figure 1.

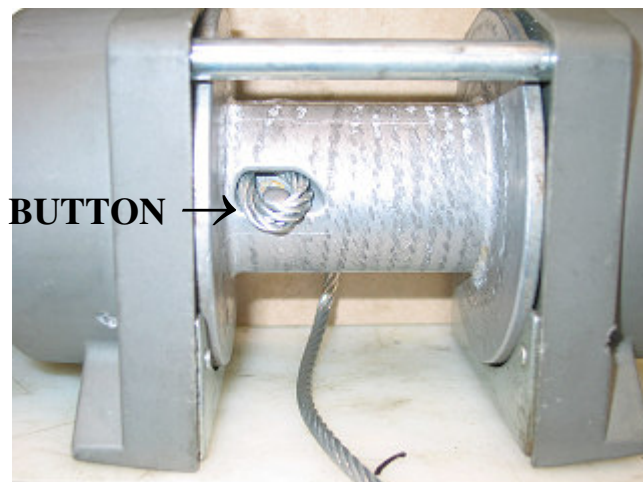


Figure 1

2. Install Synthetic Rope:

Feed the synthetic rope through the smaller winch drum opening. **Note:** In order to feed the rope through the hole, you will need to push the rope through with a thin screwdriver. Terminate the rope by leaving a 3" tail sticking out of the drum. See figure 2. Rotate the drum so the rope being wound up will wrap around the tail. See figure 3. **Note:** The cable should always pull from the bottom of the drum. A minimum of eight wraps is required on the drum for all winching.

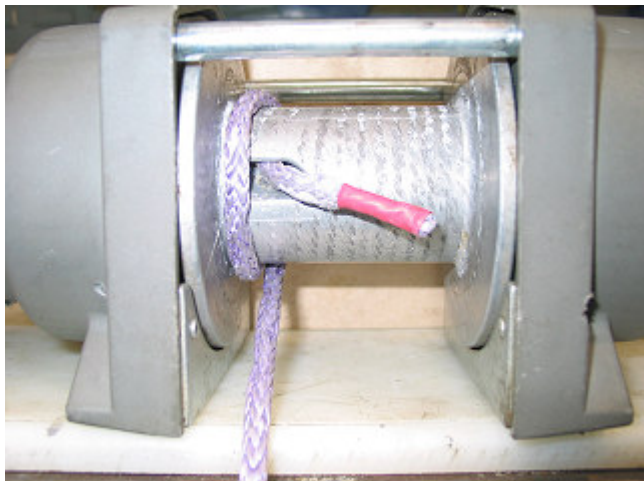


Figure 2

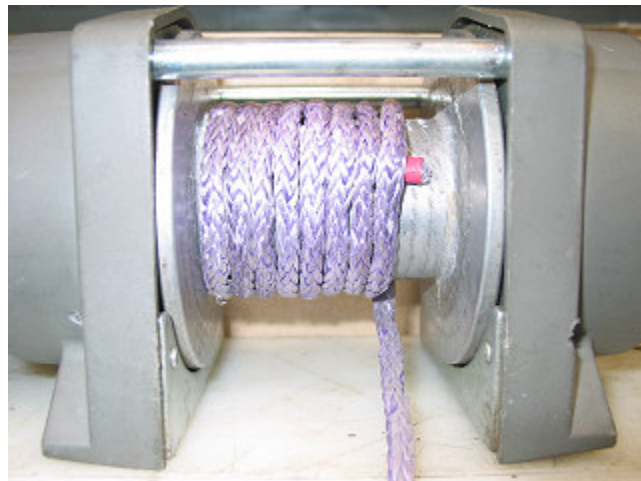


Figure 3

NOTE: WARN SYNTHETIC ROPE PN 68560 IS USED TO RAISE AND LOWER THE ATV PLOW ONLY!