



1. Remove the access panel located at the left inside rear of the vehicle and find the vehicle taillight wiring connector inside (Fig. 1). Pull from cavity for easier access.
2. Remove hanger clip, spread side retainers and unplug vehicle taillight connector (Fig. 1).
3. Apply terminal grease to electrical connections on vehicle harness and connectors to help prevent corrosion.
4. Plug Wiring Kit into the male and female plugs of the disconnected vehicle taillight wiring harness (Fig. 2).
5. Grease the terminals on the wire harness.

**NOTE:** If your application came with a separate 4-flat extension, plug the extension into the Wiring Kit.

6. Plug completed wire harness into the trailer.
7. Check the lighting system for proper operation with engine running.
8. Secure excess wire to vehicle with cable tie provided.

**TIPS:**

- Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.
- A heavy duty flasher may be required to eliminate rapid flashing.
- Always unplug boat trailer connector before backing trailer into the water.

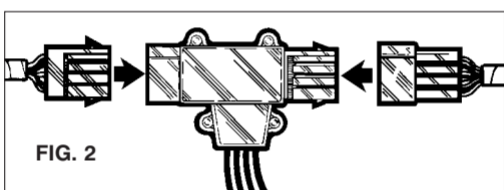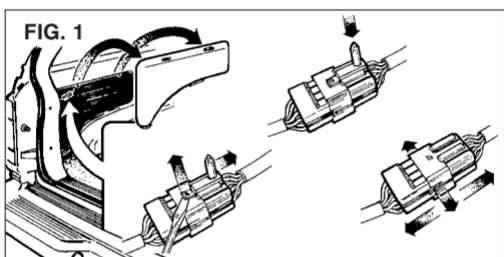

1. Quite el panel de acceso localizado a la izquierda de la parte trasera del vehículo y encuentre el conector del cableado de las luces traseras dentro. Tire de la cavidad para fácil acceso (Fig. 1).
2. Remueva el clip, eleve candados laterales y desenchufe el conector de las luces traseras (Fig. 1).
3. Aplique grasa de terminal a conexiones eléctricas en ensamble del vehículo y conectores para ayudar a prevenir la corrosión.
4. Enchufe el kit del cableado en enchufes hembra y macho del ensamble de cableado para luces traseras desconectado (Fig. 2).
5. Engrase los terminales en el arnés de cable.

**NOTA:** Si su aplicación viene con una extensión de 4 vías, conéctelo en su kit del cableado.

6. Conecte el ensamble terminado al remolque.
7. Revise la operación correcta del sistema de luce con el motor funcionando.
8. Asegure el cable restante al vehículo con la corbata proporcionada.

**CONSEJOS:**

- La aplicación frecuente de grasa a las terminales de los cables del remolque ayudará a prevenir la corrosión.
- Se puede requerir una luz intermitente de alta potencia para eliminar una intermitencia demasiado rápida.
- Siempre desenchufe el conector del remolque de botes antes de regresar el remolque al agua.