

AIR AID

INTAKE SYSTEMS

® Installation Instructions
Part Number 201-180
2006-07 H3 Hummer 3.5L/3.7L I5

Packing List:

| | | | |
|----|--------------|-------------------------|---|
| #1 | 701-451 | Airaid Premium Filter | 1 |
| #2 | KIT180FPC | Front Panel Coated | 1 |
| #3 | KIT180RPC | Rear Panel Coated | 1 |
| #4 | KITWSTRIP02 | Weather Strip 22" | 1 |
| | KIT180HPS | Hardware & Instructions | 1 |
| #5 | KIT6C31MXPPZ | 6-32x 5/16" Screw | 4 |
| #6 | KIT6NWSAPZ | #6 Flat Washer | 4 |
| #7 | KIT6CNKEPZ | 6-32 Keps Nut | 4 |

Tools Required For Installation:

Phillips Head Screwdriver
5/16" Nutdriver or Socket
Ratchet and Extension




1. **Disconnect the negative battery cable.**
Unhook the three clips that hold down the air box lid.



2. Remove the lid by lifting, and sliding it out of the tabs on the side of the airbox.



3. Remove the factory air filter from the airbox. Do not remove the factory airbox base. The factory base is required to mount the Airaid Quick Fit Panel.

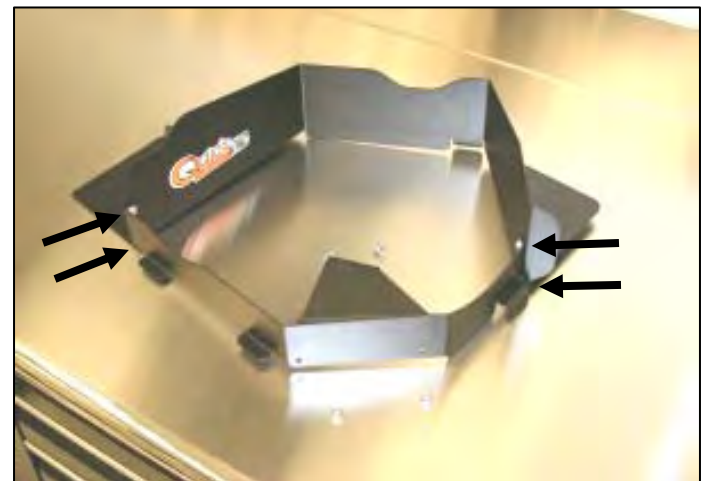


4. Assemble the Airaid Quick Fit Panels (#2, #3) using four 6-32x 5/16" screws (#5), #6 flat washers (#6), and 6-32 keps nuts (#7).



5. Install the Airaid Premium Filter (#1) on the factory intake tube.



6. Make sure the filter and the hose clamp are pushed close to the factory airbox wall, and tighten the hose clamp as shown. **Do Not over tighten.**

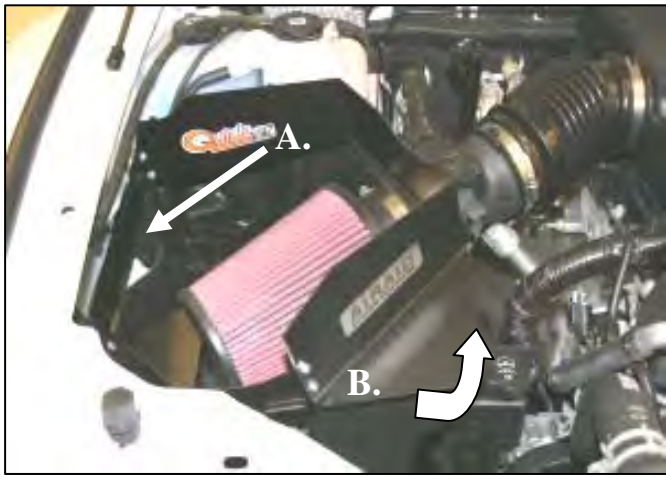

7. **A.)** There are two tabs on the Quick Fit Panel, insert the one closest to the headlight first into the slot on the factory airbox.
B.) Next, carefully rotate the Quick Fit Panel counterclockwise until the factory clips line up with the tabs on the Quick Fit Panel. Make sure the filter tab retains the Airaid Premium Filter. Using the factory clips, lock down the panel.



8. Starting at one end of the Quick Fit Panel, install the weather strip (#4) as shown.

9. Double check your work!

Make sure there is no foreign material in the intake path. Make sure all clamps, hoses, bolts, and screws are tight.

10. Reconnect the negative battery cable!

Before!



After!



Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY!

SynthaMax[®]

Do Not Oil



Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green[®], Formula 409[®] or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.