

AIR AID®

INTAKE SYSTEMS

P/N 301-138 Installation Instructions 03-05 Chrysler PT Cruiser *Turbo*

Thank you for purchasing the Airaid Intake System. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY!



Packing List:

721-431	Airaid Premium Filter	1
KIT138FPC	Front Panel Coated	1
KIT138MAFC	MAF Panel Coated	1
KITWSTRIP02	Weather Strip 29 1/2"	1
KIT138HPS	Hardware Pack	1
- Instructions Sheet		1
- KIT6C31MXPZ	6-32 Screw	4

-KIT6CNKEPZ	6-32 Keps Nut	4
-KIT6NWSAPZ	#6 Flat Washer	4

Tools Required for this Installation:

Flat Head Screwdriver



Packing List (Cont'd):

Installation Instructions. Read Me!

I) DISCONNECT NEGATIVE (-) BATTERY CABLE.

II) Remove the Factory Air Box Lid

- a) Loosen the clamp on the factory intake tube at the air box lid. **See Fig#1**
- b) Unclip the factory air box lid and remove from vehicle.
- c) Extract the factory air filter box assembly. (*Note: leave the base in place*) **See Fig#1**
- d) Unclip and remove the small intake tube attached to the factory air filter box. **See Fig#2 & Fig #3**
- e) Replace the factory air filter box in its original place and re-connect the hose it its original location. **See Fig#4**

III) Assemble the Airaid Cool Air Dam

- a) Assemble the two Airaid Cool Air Dam panels with the hardware provided. **See Fig #5.**
- b) Position the assembled Airaid Cool Air Dam in place of the factory air box. Snap into place.
- c) Connect the factory intake tube to the Airaid Cool Air Dam and fasten using the factory clamp. **See Fig#6**
- d) Mount the Airaid premium filter to the Airaid Cool Air Dam & secure using the clamp provided. **See Fig #6**
- e) Press the supplied weather strip onto the upper rim of the Airaid Cool Air Box. (*Hint: for easy installation of weather seal, start on a corner*) **See Fig #6**


IV) Finishing Up

- a) Check for any foreign objects or debris in the intake path.
- b) Reconnect the negative battery cable & double-check your work.

Synthamax Air Filters **do not** require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.

Synthamax

Do Not Oil

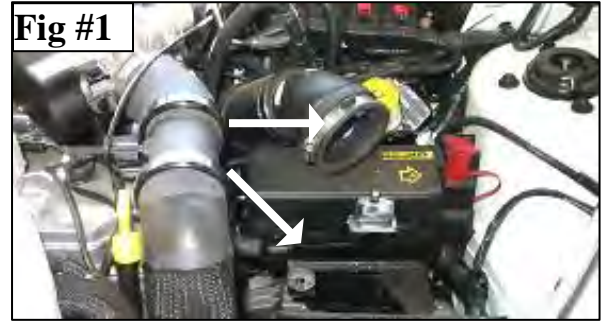

REV:10/25/10

