

AIR RAID®

INTAKE SYSTEMS

310-137 INSTALLATION INSTRUCTIONS

'03-'06 Jeep Wrangler 2.4L

Thank you for purchasing the Airaid Intake System. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned using the Airaid Filter Tune-Up Kit periodically.

Thank you for selecting Airaid.



Packing List:

700-451	Airaid Premium Filter	1
KIT137MAFC	Cool Air Panel	1
KIT137BPC	Cool Air Panel	1
KIT137T	Black Plastic Intake Tube	1
KITWSTRIP02	Weather Strip 24 1/4"	1
KIT137HP	Hardware & Instructions	1
- KIT15DHC3050	1/4-20 Head Cap Bolt	2
- KIT09FWZ019	1/4" Flat Washer	4
- KIT6NWSAPZ	#6 Flat Washer	4
- KIT6CNKEPZ	6-32 Keps Nut	4
- KIT6C31MXPPZ	6-32 x5/16" Screw	4

Package List Continued:

- KIT25C50HCSS	1/4-20 x 1/2" Hex Bolt	1
- KIT25CNNES	1/4-20 Hex Nut	1
-KITGRMT05	Grommet	1

Tools Required for this Installation:

Flat Head Screwdriver
Phillips Head Screwdriver
10mm Socket
7/16" Socket
1/2" Socket
5/32" Allen wrench


Installation Instructions. Read Me!



1. Disconnect the negative battery cable. Remove bolt for radiator support rod. (*Note: Retain bolt for later use.*)




2. Loosen hose clamp attaching air filter assembly to throttle body. Using a 1/2" socket, remove bolt on back side of air filter assembly.

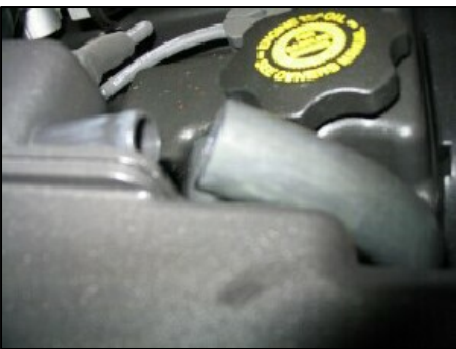

3. Disconnect the breather hose from the factory air box silencer. (*Note: Retain hose for later use.*)



4. Remove air filter assembly from engine compartment. Retain rubber throttle body coupler for later use.

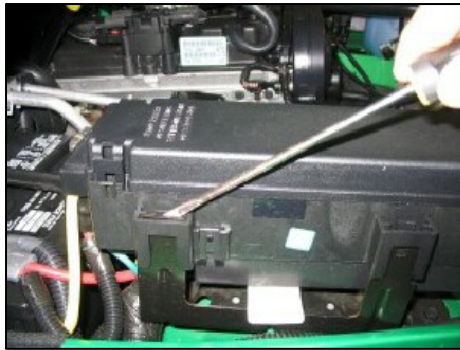


5. Using a flat blade screwdriver, unclip the fuse box from the bracket and set aside. Using 10mm socket, remove bolt from bracket. (*Note: Retain bolt for later use.*)



6. Using a 7/16" socket, remove the bolt located on the radiator fan cover on the passenger side. (*Note: Retain bolt for later use.*)




7. Using the supplied hardware, assemble the two Airaid panels as shown.

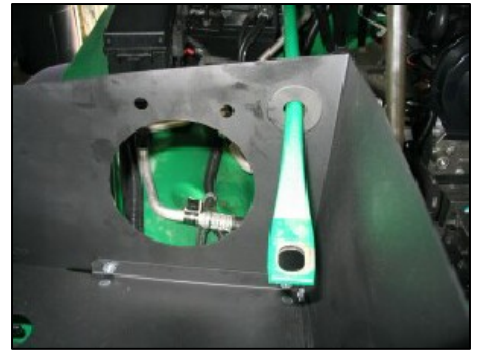

8. Position Airaid Cool Air Dam in place by inserting factory radiator support rod through grommet as shown.



9. Reinstall original bolt through Airaid Cool Air Dam and factory fuse block bracket. Replace fuse block on bracket.

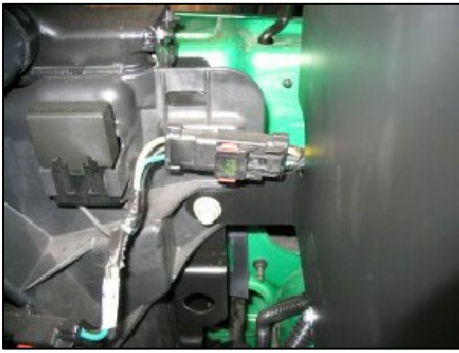

10. Using a 7/16" socket, reinstall the original bolt through the Airaid Cool Air Dam and radiator fan cover.



11. Using the supplied hardware and 7/16" socket, fasten the front of the Airaid Cool Air Dam to the fender.



12. Using a 1/2" socket, reinstall the original bolt on the radiator support rod.



13. Install factory throttle body coupler on end of Airaid intake tube and position assembly on engine as shown. Mount Airaid intake tube to Cool Air Dam using two supplied 1/4"-20 bolts and washers provided. Connect factory breather hose to Airaid intake tube.



14. Install the Airaid filter on the end of the intake tube. Install the weather strip on the top edge of the Cool Air Dam. (*Note: Start at one end and work your way around to insure proper alignment.*)

15. Double check your work to be certain that all nuts, bolts, and clamps are securely fastened.

16. Reconnect the negative battery cable.

**PROUDLY MADE IN THE
USA** 



Before



After!



Don't Forget Your AIRAID Filter Tune-Up Kit!



P/N 790-550

Instructions Revision
Date: 6/16/04