




PERFORMANCE EXHAUST SYSTEMS

INSTRUCTION MANUAL
CAT-BACK DUAL SPORT EXHAUST
COLORADO/CANYON TRUCK 2.8L-3.5L 2WD
REGULAR CAB, SHORT BED
PART # 5311

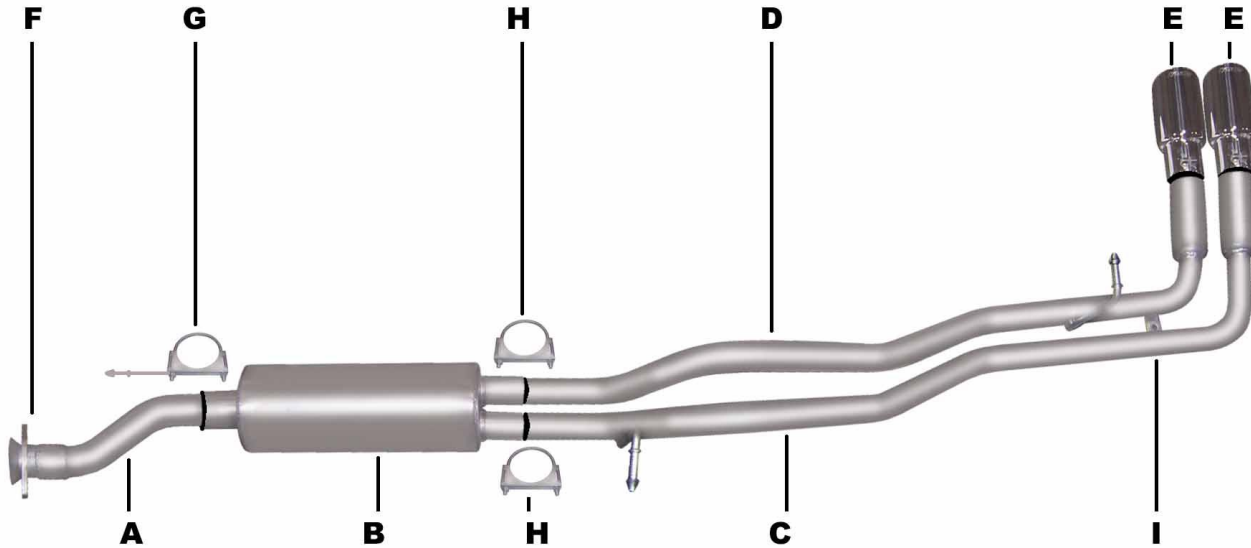


ITEM	PART #	QUANTITY	DESCRIPTION
A	700611	1	2 1/2" HEADPIPE W/ FLANGE GP-102
B	758216	1	SUPERFLOW MUFFLER
C	700757	1	1 3/4" DRIVERSIDE TAILPIPE
D	700758	1	1 3/4" PASSENGER SIDE TAILPIPE
E	500396	2	3 1/2" STAINLESS TIP
F	BO-1028	1	BOLT KIT FOR HEADPIPE
G	4321	1	FRONT MUFFLER HANGER
H	5755	2	1 3/4" CLAMP
I	BO-906	1	BOLT KIT FOR TAILPIPE

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need any further assistance, please do not hesitate to call our Technical Department at 1-800-528-3044 Monday through Friday, 8:00 AM to 5:00 PM.

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE TRUCK, SET THE PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!!!

SUGGESTED TOOLS:

1/2" , 9/16", 15mm Socket & Wrench, WD-40, Jack Stand, Hacksaw

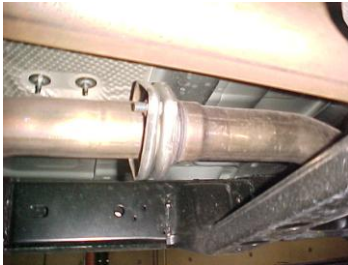

Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual. To remove your stock exhaust Remove it from the 2-bolt flange located in front of the muffler. Leave all rubber grommets in place. Use WD-40 to aid in removal of exhaust and hangers.



Install the driverside tailpipe #C over axle into muffler 1 1/2"to 2". Use clamp # H to secure tailpipe and muffler. Insert welded hanger into rubber grommet.



Install head pipe # A on to your existing stock 2-bolt flange use bolt kit #F to secure. Use jackstand to secure converter. Install front muffler hanger#G. Insert hanger into rubber grommet. Do not tighten.



Install passenger side tailpipe #D into muffler 1 1/2"- 2" and attach with clamp #H. Use bolt kit #I to attach the tailpipes together. Do not tighten. Insert welded hanger into rubber grommet.



Install muffler #B onto head pipe #A 1-1/2" to 2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #G to secure muffler to headpipe. Do not tighten.



Install stainless tips, clamp down. Start from the front and work your way back to tighten all clamps, nuts and bolts. Use and stainless cleaner and ScotchBrite pad to clean tips

MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, FUEL LINES, ETC.