




INSTRUCTION MANUAL

CAT-BACK DUAL SPORT EXHAUST

OO-06 SUBURBAN / YUKON XL 2500 6.0L-8.1L 2/4wd

PART # 5602

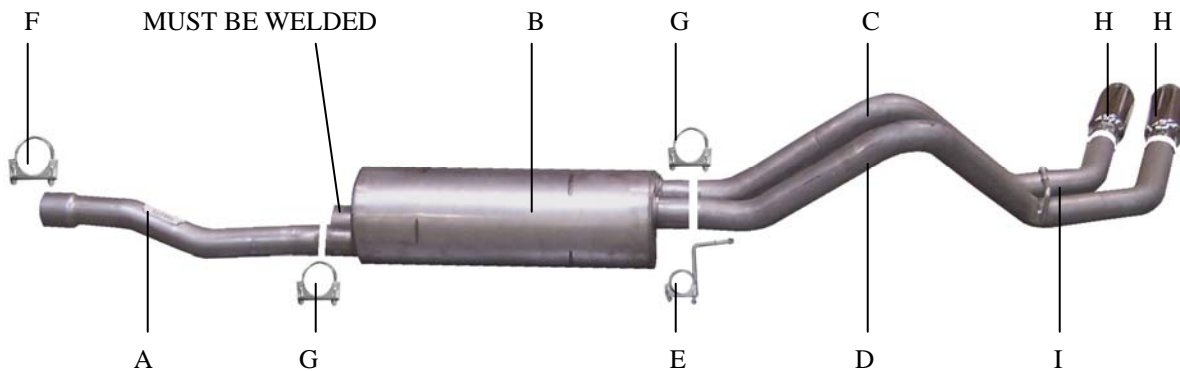

ITEM	PART #	QTY	DESCRIPTION
A	700272	1	2 1/2"DRIVERSIDE HEADPIPE
B	766024-3	1	SUPERFLOW DUAL INLET MUFFLER
C	700305	1	2 1/2"PASSENGER SIDE OVERAXLE TAILPIPE
D	700306	1	2 1/2"DRIVER SIDE OVERAXLE TAILPIPE
E	40103	1	HANGER- DRIVER SIDE MUFFLER
F	5758	1	2 3/4" CLAMP
G	5757	2	2 1/2" CLAMP
H	500374	2	3 1/2" STAINLESS STEEL TIPS
I	BO-906	1	BOLT KIT FOR TAILPIPE

THIS SYSTEM REQUIRES MINIMUM WELDING

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department AT (800) 528-3044. 0106

EXHAUST INSTALLATION #5602

THIS KIT REQUIRES MINIMUM WELDING

WHEN INSTALLING THE GIBSON EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACKSTANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GOGGLES AND GLOVES. **DO NOT WORK WITH HOT PIPES!!**

SUGGESTED TOOLS

9/16" SOCKET & WRENCH, 15MM SOCKET, 1/2" SOCKET & WRENCH, HACKSAW, JACKSTAND, WD-40




EXHAUST BRACKET

CUT BRACKET AT THIS POINT. THEN CUT 3/4" IN FRONT ON THE MUFFLER ON PASS. SIDE

LAY THE EXHAUST AND COMPARE PART NUMBERS WITH THE MANUAL.


REMOVE THE FACTORY EXHAUST BRACKET AT THE FRONT OF THE MUFFLER BY USING A HACKSAW. CUT 3/4" IN FRONT OF THE STOCK MUFFLER ON PASSENGER SIDE. UNBOLT THE DRIVERSIDE CLAMP LOCATED 23 1/2" IN FRONT OF THE FACTORY MUFFLER. FOR EASIER REMOVAL OF STOCK EXHAUST, CUT TAILPIPE AND REMOVE. LUBE ALL RUBBER GROMETS WITH WD-40 FOR EASIER REMOVAL.. NOW REMOVE THE STOCK EXHAUST. LEAVE ALL FACTORY RUBBER GROMMETS IN PLACE.

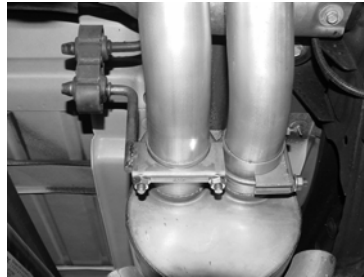


INSTALL REAR MUFFLER HANGER #E ON THE DRIVER SIDE OUTLET OF THE MUFFLER AND INSERT WELDED HANGER TO THE RUBBER GROMMET. DO NOT TIGHTEN.



INSTALL THE PASSENGER OVERAXLE TAIL PIPE #C 1" TO 2" INTO MUFFLER OUTLET. USE CLAMP #G TO SECURE. DO NOT TIGHTEN.

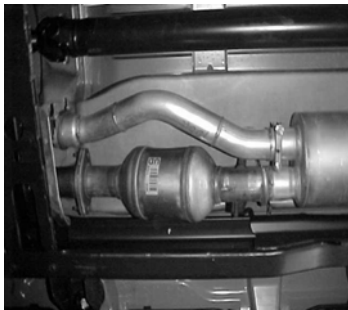

INSTALL HEADPIPE #A ON THE FACTORY DRIVERSIDE PIPE AND ATTACH HEADPIPE USING CLAMP #F. DO NOT TIGHTEN. INSTALL THE MUFFLER WITH THE OUTLET'S POSITIONED AT 12 O'CLOCK. INLET HAS LOUVERS FACING FORWARD TO CATCH THE EXHAUST. USE A JACKSTAND TO SUPPORT THE MUFFLER.

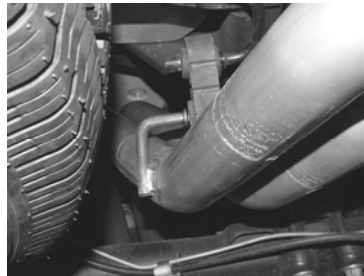


INSTALL DRIVERSIDE OVERAXLE TAILPIPE #D INTO THE MUFFLER OUTLET ABOUT 1" TO 2". INSERT THE WELDED HANGER INTO THE RUBBER GROMMET. **ROTATE** PIPES UNTIL YOU HAVE A MINIMUM OF A 1" CLEARANCE ON ALL RUBBER BRAKE LINES, TIRES, SHOCKS, ETC



MUST BE WELDED AT THIS POINT

THE MUFFLER MUST BE WELDED ON THE PASSENGER SIDE INLET AND CLAMPED ON THE DRIVER SIDE INLET USING CLAMP #G. DO NOT WELD UNTIL KIT IS COMPLETELY INSTALLED

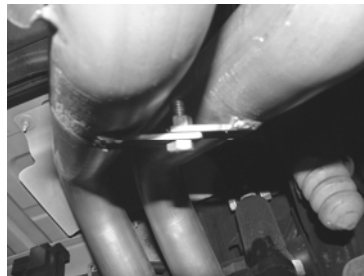

ATTACH OVERAXLE PIPES TOGETHER WITH WELDED BRACKETS. USING BOLT KIT # I. THEN TIGHTEN ALL CLAMPS AND HANGERS. DRIVERSIDE TAILPIPE TAB WILL BE ON THE BOTTOM.



INSTALL YOUR STAINLESS STEEL TIPS. USE ANY ALUMINUM OR STAINLESS STEEL CLEANER TO POLISH YOUR TIPS.

MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, FUEL LINES, ETC...