




Installation Instructions

Cat-Back Dual Sport Stainless Exhaust
Hummer H2 6.2L 4wd

Part #612002

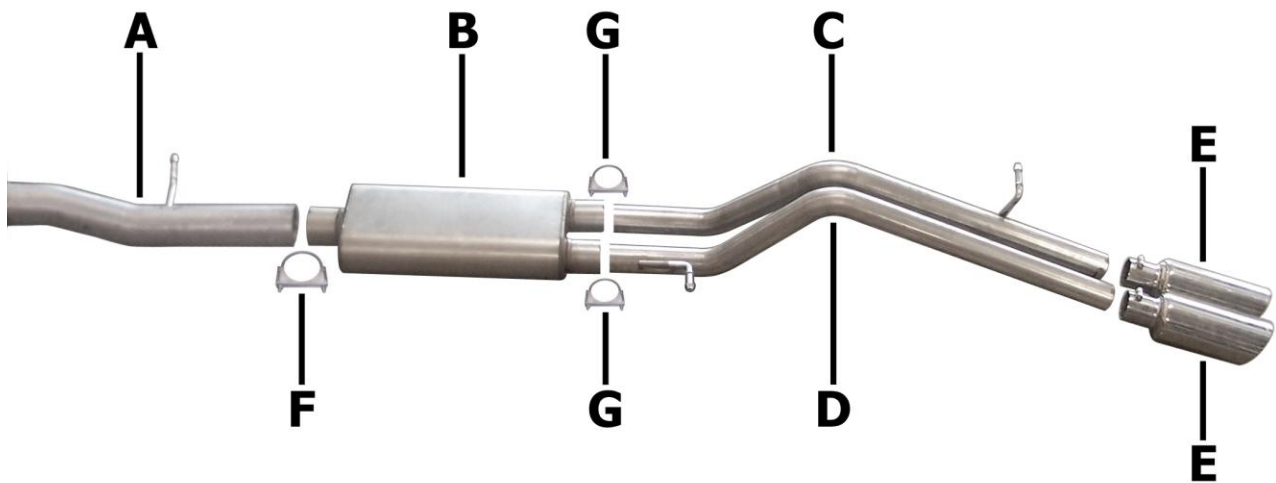

ITEM	PART	QUANTITY	DESCRIPTION
A	1395-701120S	1	3.5" Stainless Headpipe
B	11238s	1	Superflow CFT Stainless Muffler
C	1238-700996S	1	2.25" Stainless Passenger side tailpipe
D	1239-700997S	1	2.25" Stainless Driver side tailpipe
E	500553	2	4" Stainless Tip
F	4170	1	3.5" Clamp
G	5756	2	2.25" Clamp
H	BO-906	1	Bolt kit for tailpipe

Thank you for purchasing our Gibson Exhaust System for your vehicle.
If you need further assistance, please do not hesitate to call our technical department at
(800) 528 -3044 Monday through Friday, 8am to 5 pm.

Installation Instructions #612002

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. First remove the clamp located in front of the muffler. Save the stock hardware as you will reuse it to attach new headpipe. Disengage the welded hangers from the OEM rubber grommets. Use WD-40 to aid in this process. Do not damage or remove the rubber grommets as you will reuse them to mount your new system. Now, cut off tailpipe and remove exhaust.



5. Slide the passenger side over axle tailpipe #C into the muffler 1.5-2". Use clamp #G to secure tailpipe to muffler. Do not tighten. Insert welded hanger into rubber grommet.



3. Install headpipe #A onto your existing stock front pipe and attach using stock hardware. Do not tighten. Insert welded hanger into rubber grommet.



6. Slide the driver side over axle tailpipe #D into the muffler 1.5-2". Use clamp #G to secure tailpipe to muffler. Do not tighten. Insert welded hanger into rubber grommet.



7. Use bolt kit #H to secure tailpipes together. (Driver side should be on the bottom.)



8. Install stainless steel tip. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration. Inspect all fasteners after 25-50 miles of operation and re-tighten as necessary.



4. Slide muffler #B onto headpipe 1.5-2". Use a jack stand to support the muffler. Use clamp #F to secure the muffler to the headpipe. Do not tighten.



GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of the exhaust. **Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire.**