



INSTRUCTION MANUAL


CAT-BACK DUAL SPORT EXHAUST

DODGE DAKOTA TRUCK 3.9L, 4.7L, 5.9L 2/4WD

DAKOTA RT TRUCK 5.9L 2WD

STANDARD CAB, EXTENDED CAB, SHORT BED

PART# 6202

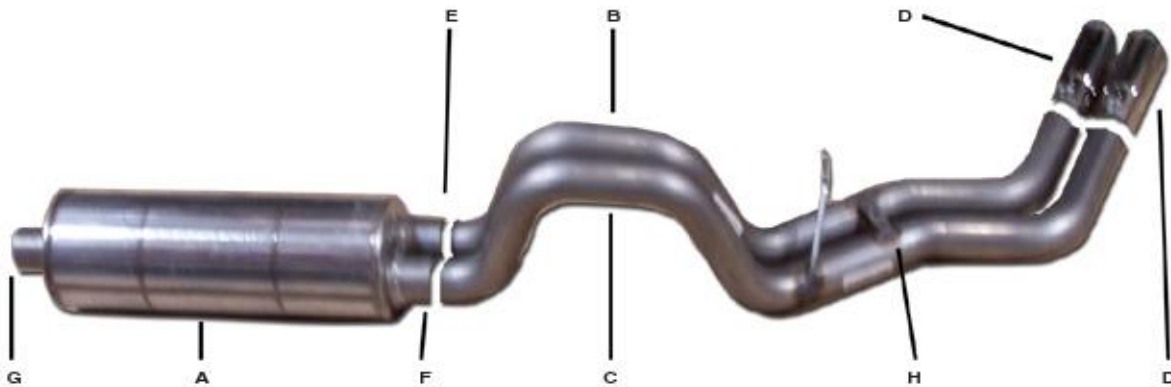

ITEM	PART #	QUANTITY	DESCRIPTION
A	789800-3	1	DUAL OUTLET SUPERFLOW MUFFLER
B	700247	1	2.5" PASSENGERSIDE OVERAXLE TAILPIPE
C	700241	1	2.5" DRIVERSIDE OVERAXLE TAILPIPE
D	500361	2	3" STAINLESS TIPS
E	5757	1	2-1/2" CLAMP
F	40102	1	HANGER- REAR MUFFLER
G	40101	1	HANGER- FRONT MUFFLER
H	BO-906	1	BOLT KIT FOR TAILPIPE

****4WD - SPARE TIRE MUST BE REMOVED**

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044 Monday through Friday 8:00am to 5:00PM.

INSTALLATION INSTRUCTIONS KIT# 6202


WHEN INSTALLING THIS EXHAUST SYSTEM ON YOUR VEHICLE BE SURE TWO USE ALL THE PROPER SAFTEY PRECAUTIONS. USE A JACK STAND WHILE UNDER THE VEHICLE. SET THE PARKING BREAK, BLOCK TIRES, AND USE SAFTEY GOGGLES AND GLASSES.

DO NOT WORK WITH HOT PIPES!


SUGGESTED TOOLS

15mm Wrench, 9/16" Socket & wrench, 1/2" Wrench & socket, Jack Stand, WD-40, hacksaw

LAY OUT THE EXHAUST ON THE FLOOR LIKE DRAWING AND COMPARE PART NUMBERS.

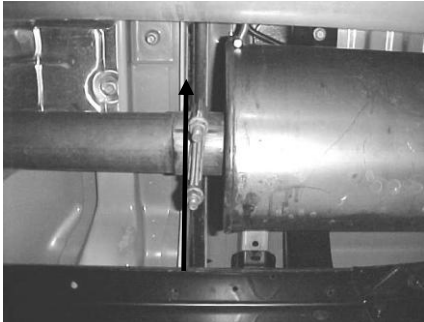

DO NOT REMOVE EXTENSION PIPE BETWEEN MUFFLER AND CATALYTIC CONVERTER. REMOVE THE FIRST CLAMP IN FRONT OF YOUR MUFFLER, AND THEN REMOVE STOCK EXHAUST. USE WD-40 ON HANGERS FOR EASIER REMOVAL.

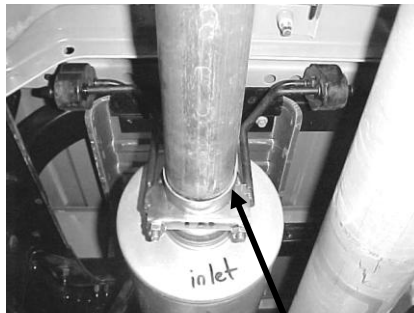


INSTALL HANGER # G IN FRONT OF THE MUFFLER AND INSERT INTO THE STOCK RUBBER GROMMETS. THEN INSTALL MUFFLER #B WITH INLET TOWARDS THE FRONT OF THE VEHICLE. USE A JACK STAND TO SUPPORT MUFFLER. DO NOT TIGHTEN.



ATTACH REAR MUFFLER HANGER # F TO THE OUTLET OF THE MUFFLER ON DRIVERSIDE AND INSERT WELDED HANGER INTO GROMMET. MAKE SURE MUFFLER OUTLETS ARE LEVEL,

INSTALL PASSENGER OVERAXLE TAILPIPE #B INTO THE REAR OF THE MUFFLER USING CLAMP # E TO ATTACH TAILPIPE TO MUFFLER. INSTALL DRIVERSIDE OVERAXLE TAILPIPE #C. INSERT WELDED HANGER INTO RUBBER GROMMET. ATTACH TAILPIPES TOGETHER USING BOLT KIT # H. DRIVERSIDE TAILPIPE #C BRACKET SHOULD BE ON TOP OF PASSENGER TAILPIPE #B BRACKET. DO NOT TIGHTEN.

INSTALL STAINLESS STEEL TIPS. USE ANY ALUMINUM OR STAINLESS STEEL CLEANER TO POLISH TIPS. NOW FIRMLY TIGHTEN ALL CLAMPS AND HANGERS.

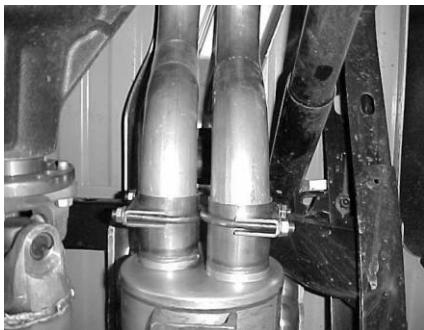

MAKE SURE YOU HAVE AT LEAST 1" CLEARANCES AROUND TIRES, SHOCKS, FUEL LINES, BRAKE LINES, PIPES, ETC.