




**INSTRUCTION MANUAL
CAT-BACK DUAL SPORT EXHAUST
DODGE RAM 2500 HEAVY DUTY & POWERWAGON
QUAD CAB, SHORT BED, 5.7L HEMI 4DR 4WD
PART # 6542**

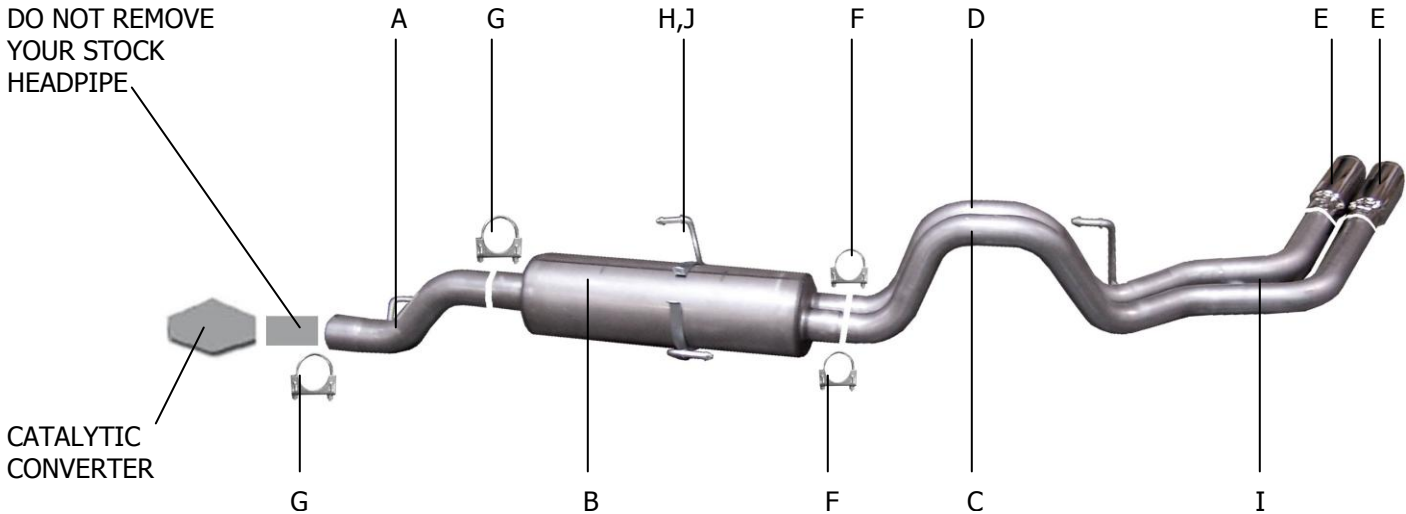

TO REMOVE STOCK EXHAUST UNCLAMP JUST IN FRONT OF MUFFLER

ITEM	PART #	QUANTITY	DESCRIPTION
A	700749	1	3" HEADPIPE EXTENSION
B	789800	1	SUPERFLOW MUFFLER
C	700750	1	2 1/2" DRIVER SIDE TAILPIPE
D	700751	1	2 1/2" PASS. SIDE TAILPIPE
E	500374	2	3 1/2" STAINLESS TIPS
F	5757	2	2 1/2" CLAMP
G	OHD300	2	3" CLAMP
H	4258	1	BAND CLAMP
I	BO-906	2	BOLT KIT FOR TAILPIPE
J	BO-1015	1	BAND CLAMP BOLT KIT

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 524-3044, Monday through Friday, 8:00 am to 5:00 pm.

EXHAUST INSTALLATION KIT#6542

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACKSTANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS

15MM SOCKET, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, JACKSTANDS, HACKSAW, WD-40


TO REMOVE THE STOCK EXHAUST UNCLAMP THE STOCK EXHAUST JUST IN FRONT OF THE MUFFLER.



YOU MAY NEED TO HEAT IT UP FOR EASIER REMOVAL. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 FOR REMOVAL OF HANGERS. FOR EASIER REMOVAL, REMOVE THE TWO CROSSMEMBER BARS FIRST.



INSTALL DRIVERSIDE TAILPIPE #C INTO MUFFLER. USE CLAMP #F TO SECURE TAILPIPE TO MUFFLER.

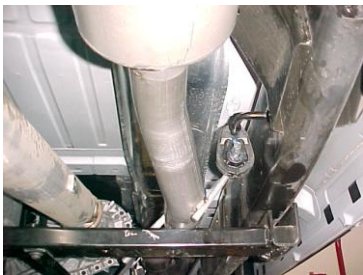

INSTALL HEADPIPE #A ONTO YOUR EXISTING STOCK FRONT PIPE AND SECURE WITH CLAMP #G. USE A JACKSTAND TO SUPPORT THE CONVERTER. INSERT WELDED HANGER INTO RUBBER GROMMET.



INSTALL PASSENGER SIDE TAILPIPE #D INTO MUFFLER AND ATTACH USING CLAMP #F. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN. USE BOLT KIT #I TO ATTACH THE TAILPIPES TOGETHER. DO NOT TIGHTEN. DRIVER SIDE TAILPIPE TABS WILL BE ON THE BOTTOM.



INSTALL MUFFLER #B ONTO HEADPIPE 1-1/2" TO 2". USE CLAMP #G TO SECURE THE MUFFLER TO THE HEADPIPE. DO NOT TIGHTEN. SLIDE BAND CLAMP #H ONTO THE MUFFLER AND INSERT THE WELDED HANGERS INTO THE RUBBER GROMMETS. ATTACH WITH BOLT KIT #J.



INSTALL THE STAINLESS TIPS. NOW GO BACK AND TIGHTEN ALL CLAMPS, NUTS AND BOLTS STARTING FROM THE FRONT AND WORKING BACK. TO CLEAN TIPS USE A SCOTCH BRITE PAD AND ANY STAINLESS CLEANER.

FOR EASIER INSTALLATION, YOU MAY NEED TO MOVE YOUR SPARE TIRE OVER. MAKE SURE YOU HAVE A MINIMUM OF A 1" CLEARANCE AWAY FROM ALL SHOCK BOOTS, BRAKE LINES, FUEL LINES, TIRES, ETC...