




PERFORMANCE EXHAUST SYSTEMS

**INSTRUCTION MANUAL**  
**CAT-BACK STAINLESS SPLIT EXHAUST SYSTEM**  
**DODGE RAM 1500 TRUCK 5.7L HEMI 4DR 2/4WD**  
**QUAD CAB, SHORT BED**  
**PART #66520**

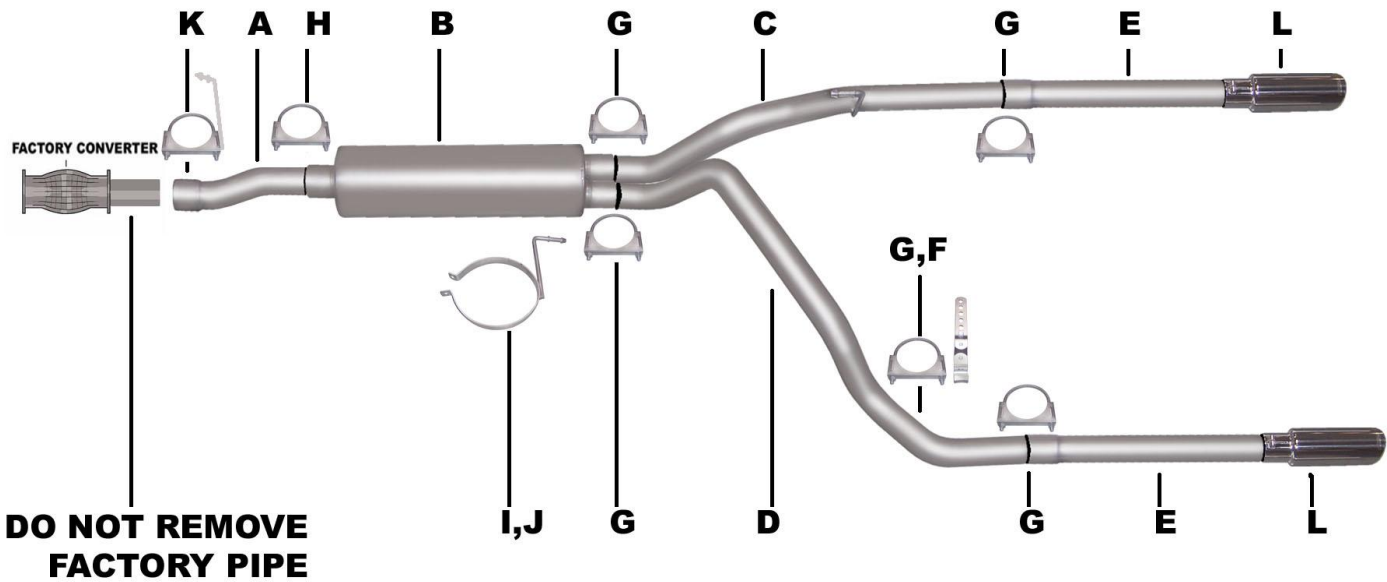

---

ITEM	PART #	QTY.	DESCRIPTION
------	--------	------	-------------

---

A	602-700486S	1	3" x 21" STAINLESS HEADPIPE EXTENSION
B	789800S	1	STAINLESS SUPERFLOW MUFFLER
C	544-700407S	1	2½" STAINLESS PASSENGER OVERAXLE PIPE
D	612-700408S-1	1	2½" STAINLESS DRIVERSIDE OVERAXLE PIPE
E	546-700346S	2	2½" STAINLESS EXIT PIPE
F	08269	1	10" HANGER
F	BO-101	1	BOLT KIT FOR 10" HANGER
G	5757	5	2½" CLAMP
H	OHD300	1	3" CLAMP
I	4188	1	BAND CLAMP
J	BO-1015	1	BAND CLAMP BOLT KIT
K	4216	1	HEADPIPE HANGER
L	500374	2	3½" STAINLESS TIPS
M	ZIP	2	ZIP TIES

**SPARE TIRE MUST BE REMOVED IF EQUIPPED WITH 20" SPARE**

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday through Friday, 8:00 am to 5:00 pm.

# EXHAUST INSTALLATION #66520

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER TRUCK, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES AND GLOVES. **DO NOT WORK WITH HOT PIPES!**

## SUGGESTED TOOLS:

9/16, 1/2, 15MM Wrench and Socket, Jack Stand, Hacksaw, WD-40

## **TO REMOVE STOCK EXHAUST UNCLAMP THE STOCK EXHAUST JUST IN FRONT OF THE MUFFLER.**



YOU MAY NEED TO HEAT IT UP FOR EASIER REMOVAL. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 FOR REMOVAL OF HANGERS.



MEASURE 19 1/2" FROM THE REAR OF THE FRAME AND USE THIS HOLE AND BOLT ON HANGER #F. USE THE 3<sup>RD</sup> HOLE FROM THE TOP.


SPARE TIRE MAY NEED TO BE LOOSENED AND PUSHED TO THE REAR OF THE TRUCK FOR BETTER CLEARANCE.



INSTALL HEADPIPE #A, YOU WILL NEED TO LINE UP THE TWO NOTCHES. USE HEADPIPE HANGER #K TO SECURE PIPES TOGETHER. INSERT HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN.



INSTALL DRIVER SIDE TAILPIPE #D INTO MUFFLER 1-1/2" TO 2" AND USE CLAMP #G TO SECURE THE MUFFLER. DO NOT TIGHTEN. USE CLAMP #G TO HOLD PIPE UP TO THE HANGER #F. DO NOT TIGHTEN.

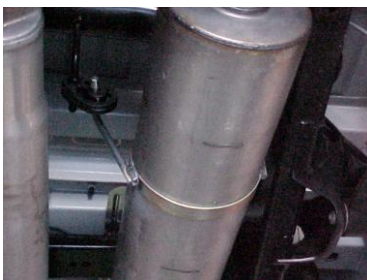

INSTALL MUFFLER #B ONTO HEADPIPE 1-1/2" TO 2". USE CLAMP #H TO SECURE THE MUFFLER TO THE HEADPIPE. DO NOT TIGHTEN. SLIDE BAND CLAMP #I ONTO THE MUFFLER AND INSERT THE WELDED HANGER INTO THE RUBBER GROMMET AND ATTACH WITH BOLT KIT #J.



INSTALL THE EXIT PIPES #E ONTO THE TAILPIPES USING CLAMPS #G. ROLL THE PIPES UNTIL YOU HAVE THEM AT THE ANGLE YOU DESIRE.



INSTALL PASSENGER SIDE TAILPIPE #C INTO MUFFLER 1-1/2" TO 2". USE CLAMP #G TO SECURE TAILPIPE TO MUFFLER. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN.



NOW GO BACK AND TIGHTEN ALL CLAMPS, NUTS AND BOLTS STARTING FROM THE FRONT AND WORKING BACK. INSTALL STAINLESS TIPS. USE ZIP TIES FOR BRAKE LINES, WIRES, ETC.

**MAKE SURE YOU HAVE A 1" CLEARANCE AWAY FROM ALL PIPES, BRAKE LINES, FUEL LINES, SHOCKS, TIRES, ETC...**