




PERFORMANCE EXHAUST SYSTEMS

**INSTRUCTION MANUAL
ELITE SUPER TRUCK EXHAUST SYSTEM
FORD F150/F250 TRUCK
4.9L, 5.0L, 5.8L 2/4WD
EXTENDED CAB, SHORT BED**

PART # 69511

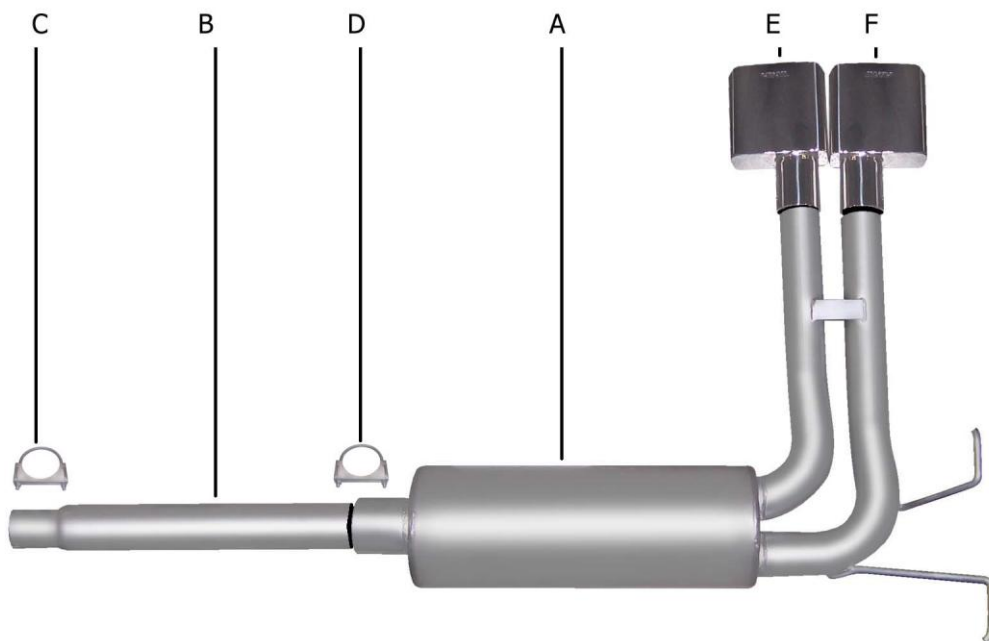

ITEM	PART #	QUANTITY	DESCRIPTION
A	788-700101S	1	STAINLESS MUFFLER ASSEMBLY
B	789-22522S	1	3" X 22-1/2" STAINLESS HEADPIPE
C	5756	1	2-1/4" CLAMP
D	OHD300	1	3" CLAMP
E	500365	1	SUPER TRUCK TIP
F	500366	1	SUPER TRUCK TIP

Thank you very much for purchasing our GIBSON PERFORMANCE EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday through Friday, 8:00 am to 5:00 pm.

EXHAUST INSTALLATION SHEET

WHEN INSTALLING THIS EXHAUST SYSTEM, MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

HACKSAW, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, 15MM SOCKET, JACKSTAND

1. Remove stock exhaust from behind the catalytic converter.
2. Lay out the **GIBSON EXHAUST SYSTEM** on the floor so it looks like the drawing with hangers in the proper location.
3. Install headpipe # B. For '96 models with O2 sensor at rear of converter you may have to cut 2 1/2" off front extension pipe (**CHECK FIRST!**) Turn out pipe should exit on both sides of spring perch.
4. Install muffler assembly # A, slip hangers into rubber grommets.
5. Install stainless tips on. To clean stainless steel tip, use a scott brite pad and any stainless steel or aluminum cleaner.
6. When you have everything in place, firmly tighten all bolts and clamp down securely.

* MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, FUEL LINES, SHOCK BOOTS, TIRES, ETC.