




PERFORMANCE EXHAUST SYSTEMS

**INSTRUCTION MANUAL  
SUPER TRUCK EXHAUST SYSTEM  
FORD F150/F250 TRUCK 4.6L, 4.9L, 5.0L, 5.4L, 5.8L 2/4WD  
STANDARD CAB, SHORT BED**

**PART # 9510**

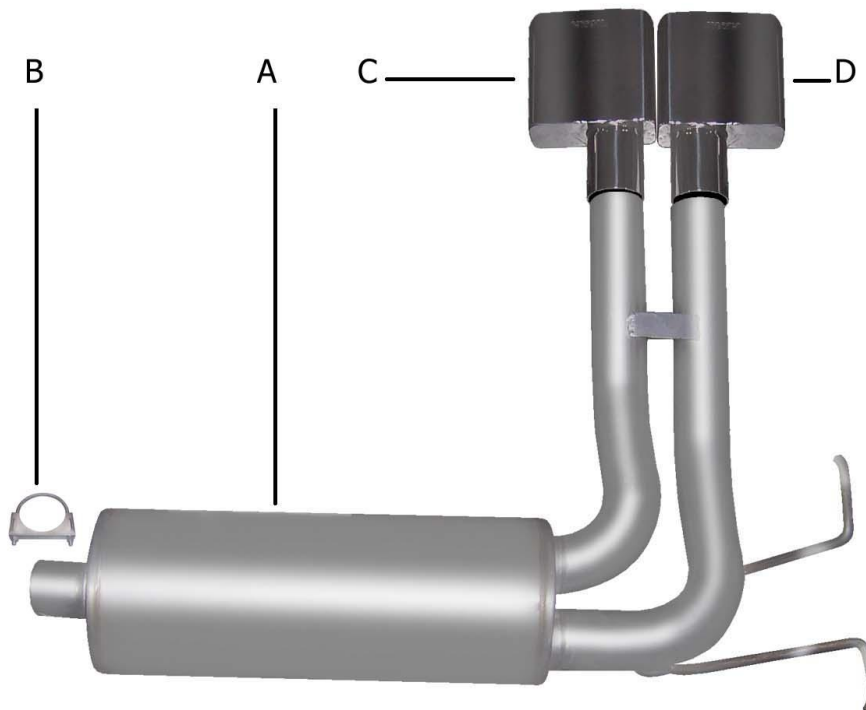

ITEM	PART #	QUANTITY	DESCRIPTION
A	700100	1	MUFFLER ASSEMBLY
B	5756	1	2-1/4" CLAMP
C	500365	1	SPORT TRUCK TIP
D	500366	1	SPORT TRUCK TIP

*Thank you very much for purchasing our GIBSON PERFORMANCE EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday through Friday, 8:00 am to 5:00 pm.*

# EXHAUST INSTALLATION PART #9510

WHEN INSTALLING THIS EXHAUST SYSTEM, MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!

## SUGGESTED TOOLS:


HACKSAW, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, JACKSTAND, WD-40



REMOVE YOUR STOCK EXHAUST BY UN-CLAMPING YOUR OLD MUFFLER BEHIND THE CONVERTER AND REMOVING. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 FOR EASIER REMOVAL.



USE A JACKSTAND TO SUPPORT MUFFLER ASSEMBLY. INSERT WELDED HANGERS INTO RUBBER GROMMETS.

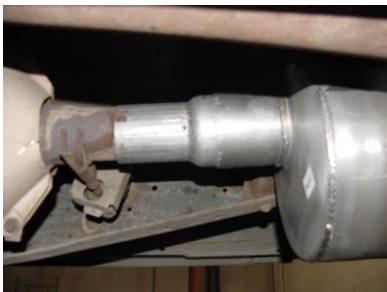

SLIDE INLET OF MUFFLER ASSEMBLY #A ONTO CATALYTIC CONVERTER. USE CLAMP #B TO SECURE. DO NOT TIGHTEN.



INSTALL STAINLESS TIPS. TO CLEAN TIPS USE A SCOTCH BRITE PAD AND ANY STAINLESS CLEANER. NOW GO BACK AND TIGHTEN ALL CLAMPS.

**“MAKE SURE YOU HAVE A 1” CLEARANCE ON ALL PIPES FROM BRAKE LINES, FUEL LINES, SHOCK BOOTS, TIRES, ETC...”**