

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

### INSTALLATION INSTRUCTIONS FOR TOYOTA MATRIX, TOYOTA COROLLA & PONTIAC VIBE FRONT FLOOR LINERS (WITH MANUAL TRANSMISSION)

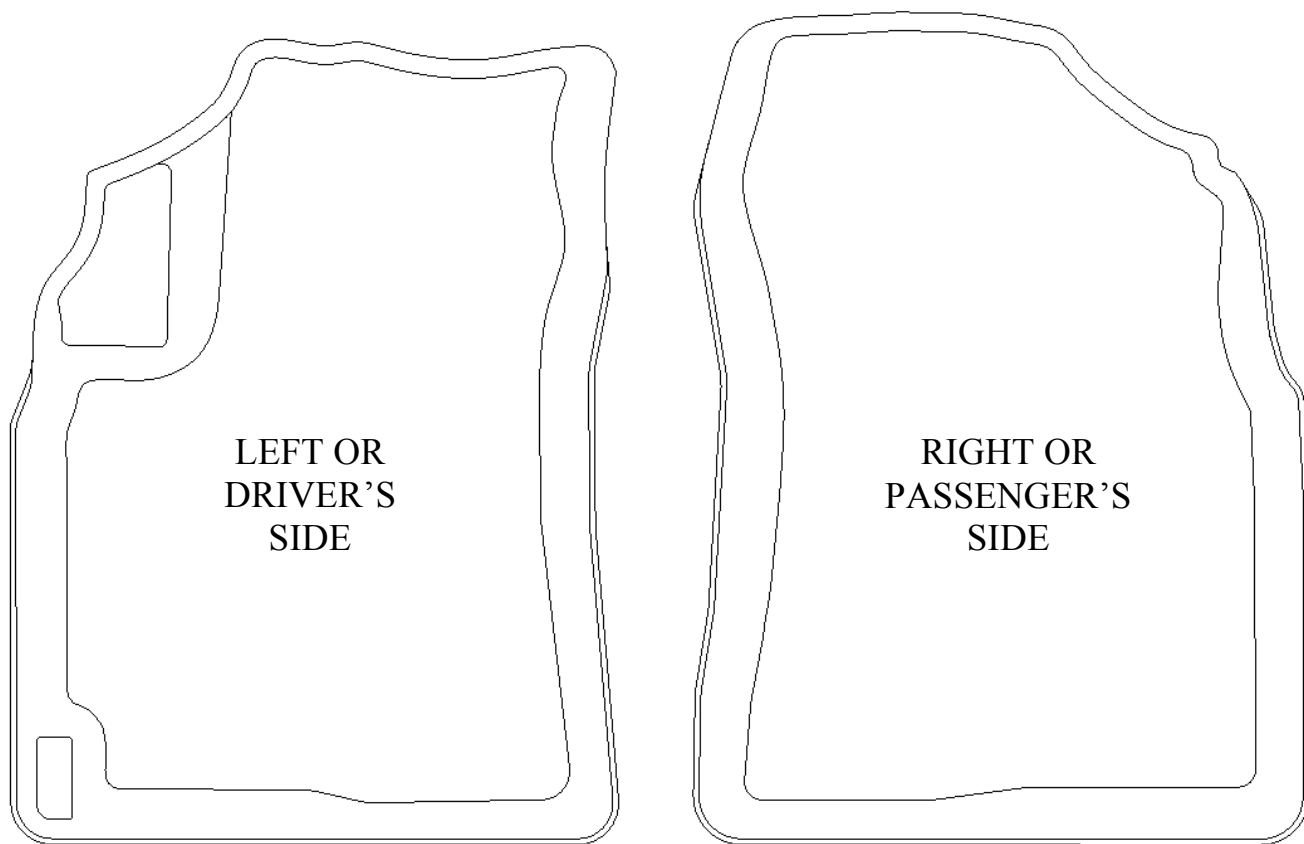

TO EASE INSTALLATION OF YOUR FRONT LINERS, MOVE THE FRONT SEATS TO THEIR MOST REARWARD POSITION. WITH THIS DONE, THE FACTORY CARPET HOOK LOCATED IN THE CARPET OF THE DRIVER'S SIDE FLOOR CAN BE EASILY REMOVED. REMOVING THE HOOKS WILL ALLOW YOUR LINER TO LAY COMPLETELY FLAT. TO REMOVE THE HOOKS, APPLY FIRM AND EVEN PRESSURE WHILE LIFTING THE END OF THE HOOK ARM STRAIGHT UP. ONCE THE HOOKS ARE REMOVED, INSTALL THE LINERS AND REPOSITION SEATS AS DESIRED. TO ACCESS THE FUEL DOOR RELEASE LEVER IN YOUR VEHICLE, YOU CAN SIMPLY LIFT UP THE LINER OR YOU CAN TRIM AWAY THE MATERIAL LOCATED DIRECTLY ABOVE THE RELEASE. THE AREA TO BE REMOVED IS LOWERED TO GUIDE TRIMMING.