


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA HIGHLANDER/TOYOTA HIGHLANDER HYBRID FRONT LINERS

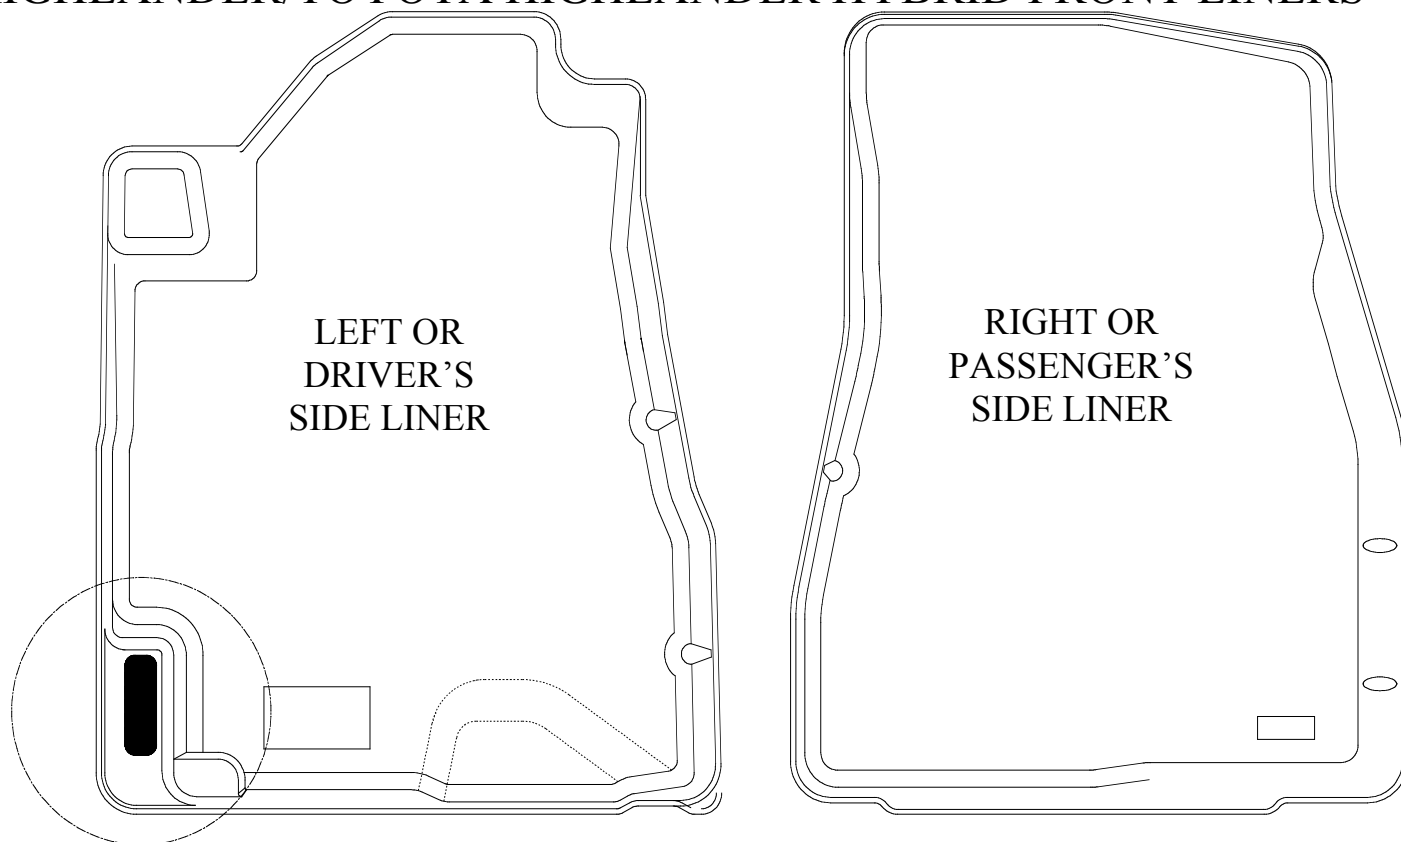

TO INSURE THE PROPER FIT OF YOUR DRIVER'S SIDE LINER, PLEASE REMOVE THE FACTORY INSTALLED CARPET HOOK(S). THE HOOK(S) CAN BE EASILY REMOVED BY GENTLY PULLING THE HOOK UP AND BACK TOWARD THE MOUNTING HOLE. THIS WILL ALLOW THE HOOKS TO "POP" OUT. SIMPLY STORE THE REMOVED HOOKS IN YOUR GLOVE BOX OR CONSOLE SHOULD YOU NEED TO REPLACE THEM AT A LATER DATE.

IF YOUR VEHICLE IS EQUIPPED WITH A FLOOR MOUNTED FUEL DOOR RELEASE LEVER, YOUR LINER CAN EASILY BE TRIMMED TO ALLOW ACCESS TO THE LEVER. JUST TRIM AWAY THE MATERIAL FROM THE AREA SHOWN ABOVE DARKENED (SEE CIRCLED AREA). THE TRIM AREA IS SLIGHTLY RECESSED TO PROVIDE A TRIMMING GUIDE. TO TRIM, USE A UTILITY KNIFE OR SIMILAR ITEM. AS ALWAYS, WHEN USING A SHARP ITEM TAKE CAUTION TO AVOID INJURY.