


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD 2000-2003 FORD F-150 LT. DUTY TRUCK SECOND SEAT FLOOR LINER

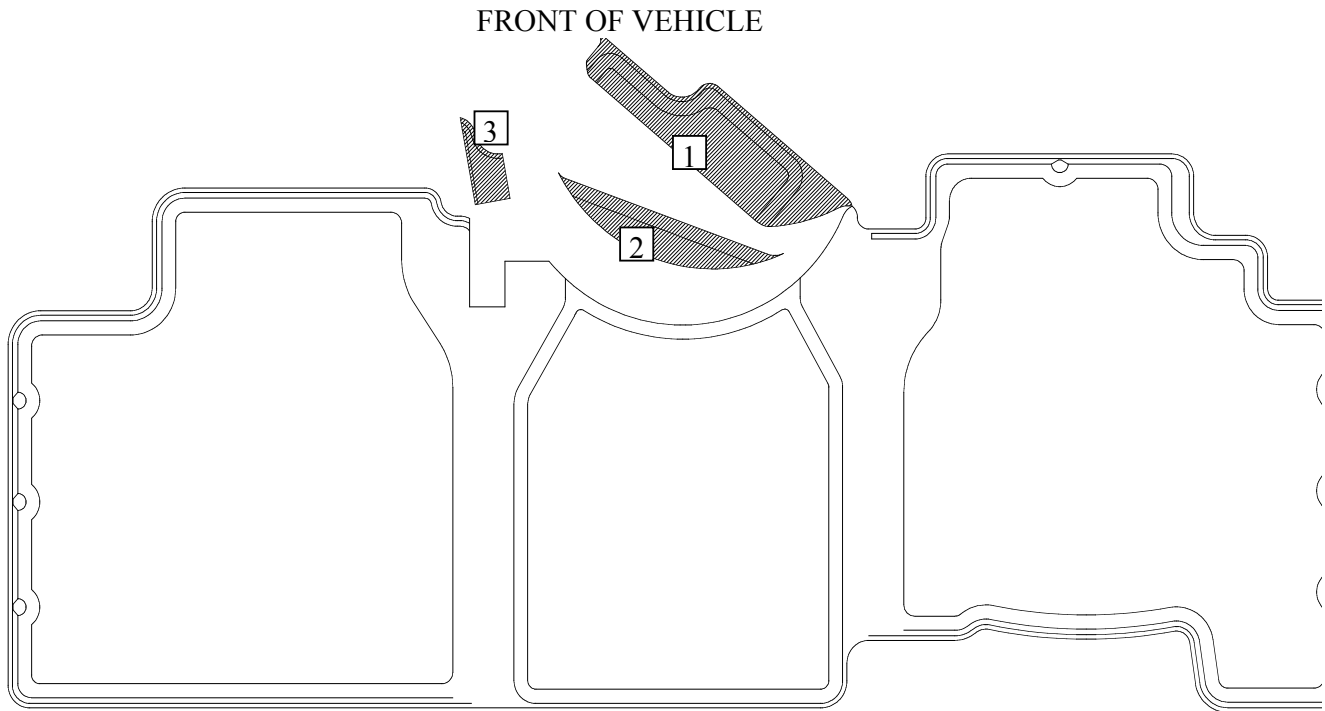

IF YOUR FORD SUPER CAB TRUCK IS EQUIPPED WITH A FACTORY CONSOLE, IT WILL BE NECESSARY TO TRIM YOUR LINER BEFORE IT WILL FIT PROPERLY. THIS IS EASILY DONE USING A UTILITY KNIFE OR HEAVY SHEARS. DUE TO VARIATIONS IN THE DESIGN OF FACTORY CENTER CONSOLES, THERE ARE TWO TRIM AREAS PROVIDED (SEE DRAWING ABOVE AND PHOTOS ON BACK OF PAGE). IF YOU HAVE THE "ROUNDED" BACK CONSOLE SHOWN IN PHOTO ONE, TRIM AWAY BOTH AREAS 1 AND 2 NOTED ABOVE. IF YOUR CONSOLE HAS THE "FLAT" BACK WALL (SHOWN IN PHOTO 2 ON THE BACK), YOU WILL NEED TO TRIM ONLY AREA 1 SHOWN ABOVE. TRIM YOUR LINER USING THE MOLDED IN "STEP" AS A GUIDE. **ON VEHICLES EQUIPPED WITH A POWER DRIVER'S SEAT, IT MAY BE NECESSARY TO TRIM AWAY AN ADDITIONAL PORTION OF THE LINER.** FIRST, MOVE YOUR DRIVER'S SEAT TO ITS MOST FORWARD POSITION, THEN INSTALL YOUR LINER IN YOUR VEHICLE. THEN, MOVE THE SEAT SLOWLY BACK AND NOTE IF THERE IS ANY INTERFERENCE WITH THE LINER. IF THERE IS, TRIM AWAY AREA "3" SHOWN ABOVE; THIS AREA IS SLIGHTLY RAISED ON YOUR LINER TO GUIDE TRIMMING.

