

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TAHOE YUKON/DENALI/ESCALADE THIRD SEAT ACCESS LINER

REAR OF VEHICLE (CARGO AREA)

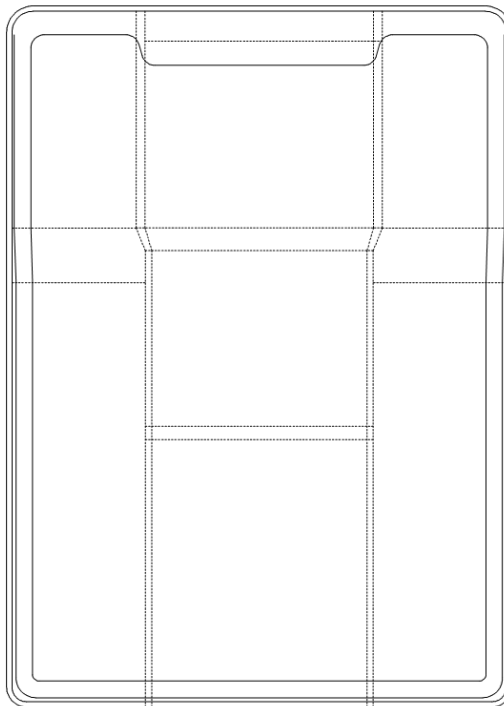

PART #8141 IS DESIGNED FOR USE WITH ESCALADE/YUKON/DENALI AND TAHOE'S EQUIPPED WITH 2ND ROW BUCKET SEATING. THIS LINER PROTECTS THE THIRD SEAT ACCESS AREA (WALKWAY BETWEEN 2ND ROW BUCKETS) THAT IS NOT COVERED BY THE SECOND SEAT HUSKY LINER (PART #6141). IF YOUR VEHICLE IS EQUIPPED WITH A REAR BENCH SEAT, YOU DO NOT NEED THIS PART.

TO INSTALL LINER, FIRST FLIP BOTH 2ND ROW SEATS FORWARD. ONCE LINER IS INSTALLED, FLIP 2ND ROW SEATS DOWN, MAKING SURE THEY ARE SECURELY LOCKED INTO POSITION. A PHOTO OF THE INSTALLED PART IS ON THE BACK OF THIS PAGE.

NOTE TO 2010 VEHICLE OWNERS: GM IMPLEMENTED A MID-YEAR CHANGE TO THE FLOOR AREA THAT THIS PART PROVIDES COVERAGE FOR. THE CHANGE INVOLVED REMOVING THE CARPETED HARD PLASTIC PIECES THAT SURROUNDED THE SEAT ATTACHMENT POINTS AND REPLACING THEM

WITH A SINGLE CARPETED PIECE. THIS CHANGE REMOVED MANY OF THE EXTRA “BUMPS” SHOWN IN THE PHOTOS OF PART #8141 BELOW. IF YOU FIND THAT PART #8141 IS NOT FITTING YOUR VEHICLE CORRECTLY, PLEASE CONTACT YOUR RETAILER OR HUSKY LINERS AT 800-344-8759 AS PART #8142 WILL FIT THE REVISED FLOOR SHAPE.

