

VEHICLE APPLICATIONS

- **2003-04 Nissan Pathfinder (LE Only)**
- **2001-03 Infiniti QX4**



KIT COMPONENTS

- **Radio Housing**
- **Trimplate**
- **ISO Snap In Brackets**

KIT FEATURES

- DIN head unit provisions with pocket
- ISO head unit provisions with pocket

TOOLS REQUIRED

- Phillips screwdriver
- Small Flat Blade Screwdriver



QUESTIONS?

Call the Help Line: **(800)253 TECH**
Monday - Friday 9:00 am - 7:00 pm EST
Saturday - Sunday 10:00 am - 4:00 pm EST

- **DASH DISASSEMBLY**
 - 2003-04 Nissan Pathfinder (LE Only) 1
 - 2001-03 Infiniti QX4 1

- **KIT ASSEMBLY**
 - DIN Head Unit Provision 2
 - ISO DIN Head Unit Provision 3

- **FINAL ASSEMBLY** 4

**2003-04 NISSAN PATHFINDER (LE Only)
2001-03 INFINITI QX4**

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Using a small flat blade screwdriver gently pry out on the top of the a/c vent assembly (including clock) and remove. (Figure A).

**Figure A**

- 3 Remove (2) Phillips screws from the top of the radio trim panel and unclip and remove panel. (Figure B).

**Figure B**

- 4 Remove (4) Phillips screws from the radio to remove.

DIN Head Unit Provision

● KIT ASSEMBLY

- 1 Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. (Figure A.)
- 2 Slide the aftermarket head unit into the cage and secure.



Figure A

ISO DIN Head Unit Provision

- 1 Mount the ISO Brackets to the head unit with the screws supplied with the unit. (Figure A.)

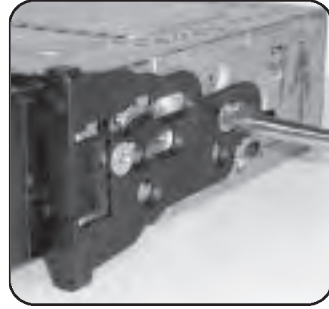


Figure A

- 2 Slide the head unit into the radio opening until the side clips engage. (Figure B.)
- 3 Snap the Trimplate into the Radio Housing.

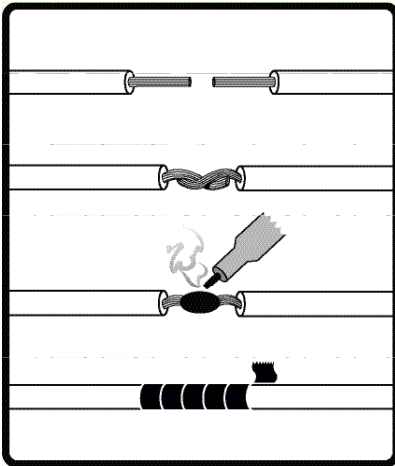


Figure B

Wiring and Re-connection Assembly

● FINAL ASSEMBLY

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit. See Figure A)
- 2 Re-connect the negative battery terminal and test the unit for proper operation.
- 3 Reassemble in reverse order of disassembly.



A) Strip wire ends back 1/2"

B) Twist ends together

C) Solder

D) Tape

Figure A

