



## INSTALLATION INSTRUCTIONS FOR PART 99-7405

### APPLICATIONS NISSAN TITAN 2004-2008 (BASE MODEL ONLY)

# 99-7405



#### KIT FEATURES


- DIN Head Unit Provisions with Pocket
- ISO DIN Head Unit Provisions with Pocket

#### KIT COMPONENTS

A) Radio Housing • B) ISO Brackets • C) ISO Trim Plate



A

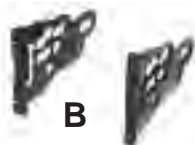

B



C

#### WIRING AND ANTENNA CONNECTIONS (Sold Separately)

##### Harness:

- 70-7550 - Nissan harness 1995-up
- 70-7551 - Nissan amp interface harness 1995-up

##### Antenna Adapter:

- Not required

#### TOOLS REQUIRED:

Small Flat Blade Screwdriver • Socket Wrench



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION



# 99-7405

## TABLE OF CONTENTS

- *Dash Disassembly*
  - *2004-2008 Nissan Titan* ..... 1
- *Kit Assembly*
  - *DIN Head Unit Provision*..... 2
  - *ISO DIN Head Unit Provision*..... 3
- *Final Assembly*..... 4
- *Notes* .....5



### **KNOWLEDGE IS POWER**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.

## 2004-2008 NISSAN TITAN


### DASH DISASSEMBLY

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.

- 2 Unclip and remove entire panel surrounding radio and climate controls. (Figure A)



- 3 Remove (4) Phillips screws to remove radio. (Figure B)

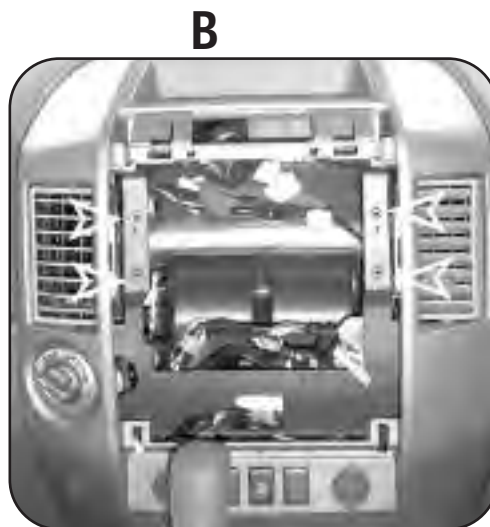



# 99-7405

KIT ASSEMBLY

## DIN Head Unit Provision

- 1 Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down.
- 2 Slide the after-market head unit into the cage and secure.





# 99-7405

## ISO DIN HEAD UNIT PROVISION

- 1** Mount the ISO Brackets to the head unit with the screws supplied with the unit.
- 2** Slide the head unit into the radio opening until the side clips engage.
- 3** Snap the Trim plate into the Radio Housing.




KIT ASSEMBLY



# 99-7405

## FINAL ASSEMBLY

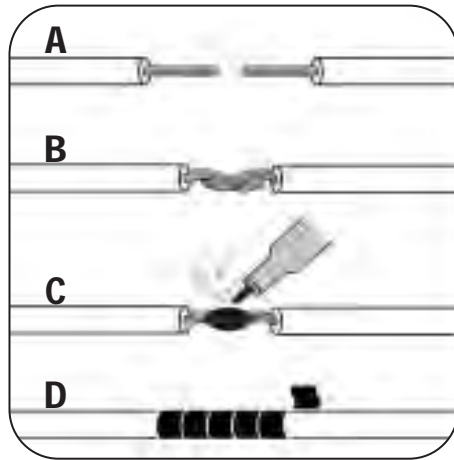

- A) *Strip wire ends back 1/2"*
- B) *Twist ends together*
- C) *Solder*
- D) *Tape*

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit) See figure A.
- 2 Re-connect the negative battery terminal and test the unit for proper operation.
- 3 Reassemble radio and dash assemblies in reverse order of disassembly.



99-7405

NOTES

INST997405



1-800-221-0932



[www.metraonline.com](http://www.metraonline.com)

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION REV. 06-24-09 INST99-7405