


# **MSD** **IGNITION** **INSTALLATION INSTRUCTIONS**

## **Wire Set Super Conductor** **GM 2001-2005 Truck 8.1L V8 w/Heat Guard** **PN 39849 (Red) and PN 39843 (Black)**

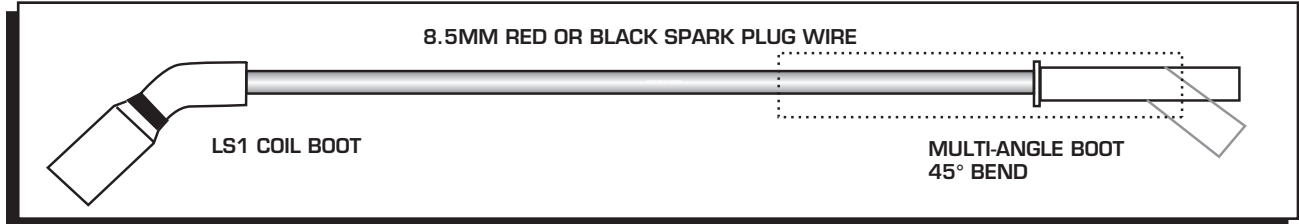

**Figure 1**

**Note:** To achieve the correct fit it's recommended that the Multi-Angle boot be bent to 45° as shown in Figure 1.

**Note:** You will also notice that there are two wires that measure 13" and also six wires which measure 15". The two shorter wires are intended to be used on cylinders #5 and #7 (Driver's rear two cylinders).

**MSD IGNITION** • 1490 HENRY BRENNAN DR., EL PASO, TEXAS 79936 • (915) 857-5200 • FAX (915) 857-3344

© 2005 Autotronic Controls Corporation


FRM27161

Created 12/05

Printed In U.S.A.

# **MSD** **IGNITION** **INSTALLATION INSTRUCTIONS**

## **Wire Set Super Conductor** **GM 2001-2005 Truck 8.1L V8 w/Heat Guard** **PN 39849 (Red) and PN 39843 (Black)**

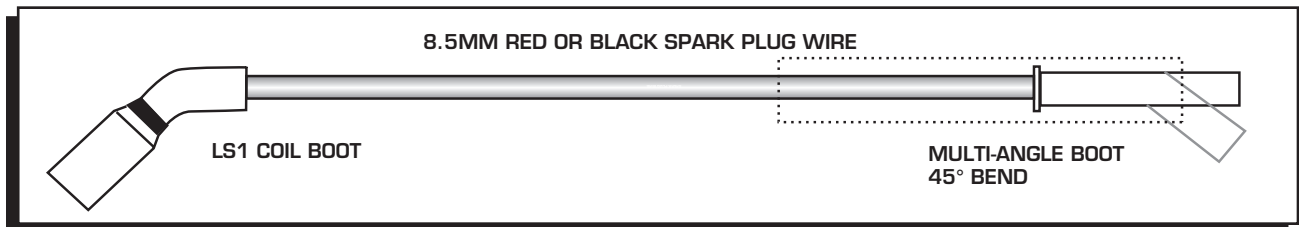

**Figure 1**

**Note:** To achieve the correct fit it's recommended that the Multi-Angle boot be bent to 45° as shown in Figure 1.

**Note:** You will also notice that there are two wires that measure 13" and also six wires which measure 15". The two shorter wires are intended to be used on cylinders #5 and #7 (Driver's rear two cylinders).

**MSD IGNITION** • 1490 HENRY BRENNAN DR., EL PASO, TEXAS 79936 • (915) 857-5200 • FAX (915) 857-3344

© 2005 Autotronic Controls Corporation

FRM27161

Created 12/05

Printed In U.S.A.