

# Rugged Liner

Truck Accessories

951 Aiken Road • Owosso, MI 48867  
989-725-8354 • Fax 989-725-8409  
1-800-433-3604



**Installation Kit No.: LIK-1**  
Contents: (8) Self-Drilling Screws

## INSTALLATION INSTRUCTIONS

Refer to diagrams 1 and 2


**Step 1:** In most applications pre-drilled holes have been provided for the locations of the Self-Drilling Screws. If pre-drilled holes are present, Skip to Step 3 to continue.

**Step 2:** On a few applications this kit is optional, so no pre-drilled holes are present. However, dimples have been placed onto the part to indicate the location of the holes. Use a 3/8" drill bit and place the tip into the dimples and drill the necessary holes.

**DO NOT DRILL INTO SHEET METAL!**

**Step 3:** Using a Phillips bit in your drill or driver, place one screw into one of the holes and insert the Self-Drilling Screw through the Sheet Metal of your vehicle. **DO NOT OVER-TIGHTEN!**

DIAGRAM 1

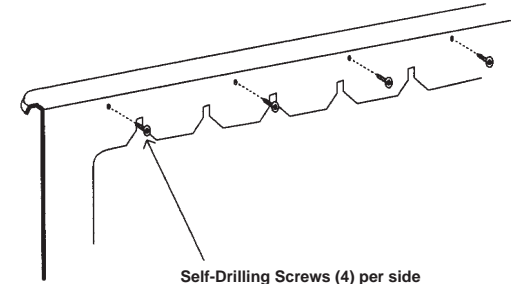

Self-Drilling Screws

DIAGRAM 2

