

# Rugged Liner

Truck Accessories

951 Aiken Road • Owosso, MI 48867  
989-725-8354 • Fax 989-725-8409  
1-800-433-3604





## Installation Kit No.: LIK-13

Contents:  
6 Over Rail Fastener Clips

## INSTALLATION INSTRUCTIONS

FOR THE OVERRAIL FASTENER CLIPS

1. Place Bedliner into the truck box; locate the six vertical notches located on the side walls (3 per side - some models may only have 2 per side for a total of 4). Hold liner firmly down on siderail.
2. To install clips, place the top "C" curve of the clip into a notch and push in the clip until the clip latch locks into place. (Refer to diagram 1).
3. Repeat step 2 until all the clips have been installed.
4. To remove liner from truckbed, pull out slightly on the bottom of the clip and insert a slim object (such as: a penknife or a screwdriver) under the clip latch (Refer to diagram 2). Slowly raise the object until the clip latch unlocks and remove clip from notch; repeat until all clips have been removed.

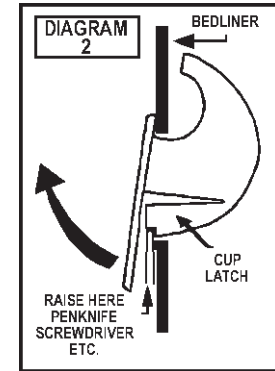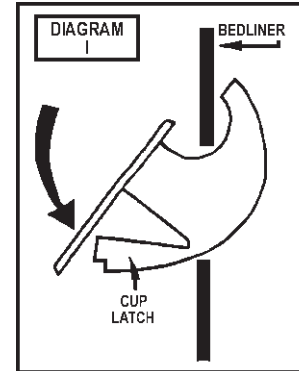

### TROUBLE SHOOTING

**Fastening clip won't snap in securely** - Check the back of the bedliner to insure that the pre-molded fastening slot is trimmed flush to the sidewall.

**Bottom of clip sticks out when secured** - With a pair of tin snips or utility knife, cut off 1/8" from the upper nose of the fastening clip.

