



951 Aiken Road • Owosso, MI 48867  
989-725-8354 • Fax 989-725-8409  
1-800-433-3604




**Installation Kit No.: LIK-27**  
Contents: (8) Flat Washers

This Tailgate Liner requires the removal of the manufacturer's screws/ or bolts from the Tailgate; to be used in securing the Tailgate Liner in place.

**DO NOT remove all of the manufacturer's screws/ or bolts!**

Only remove the screws/ or bolts which correspond with the pre-drilled holes in the Tailgate Liner.

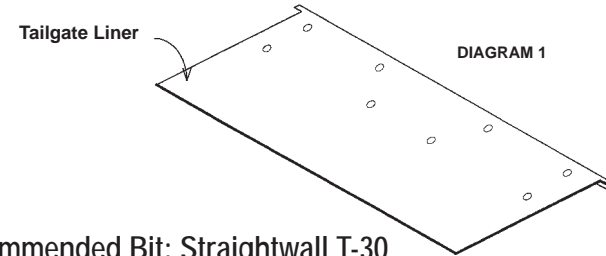

Recommended Bit: Straightwall T-30

### Installing Tailgate Liner

*Refer to diagram 1*

- Step 1:** Remove existing bolts that correspond with the holes in the Tailgate Liner.
- Step 2:** Place plastic Tailgate Liner onto metal Tailgate and align holes; using the 8 flat washers provided in the kit, fasten plastic Tailgate Liner to metal Tailgate.
- Step 3:** Check for proper alignment of the Plastic Tailgate Liner.
- Step 4:** Tighten bolts securely.