

Rugged Liner

Truck Accessories

951 Aiken Road • Owosso, MI 48867
989-725-8354 • Fax 989-725-8409
1-800-433-3604



Installation Kit No.: LIK-C2

Contents:
2 - 20mm Torx Screws

INSTALLATION INSTRUCTIONS


1988-98 FULL SIZE CHEVROLET / GMC TAILGATE INSTALLATION

Step 1: Only remove the manufacturer's bolts/screws which correspond with the pre-drilled holes in your plastic Tailgate Liner.

Step 2: Place the plastic Tailgate Liner onto metal Truck tailgate and align holes; using the bolts/screws provided with the Kit, attach plastic Tailgate Liner to Truck tailgate. **Do Not Tighten.**

(If a molding strip is required for installation, follow the instructions and install the molding strip now)

Step 3: Tighten bolts/screws securely.

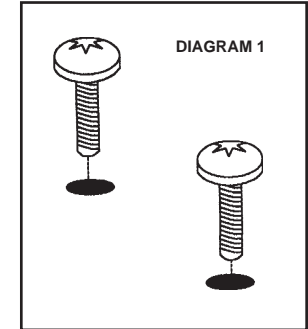

1988-98 CHEVROLET / GMC SPORTSIDE BEDLINER INSTALLATION

Step 1: Refer to diagram 2

Remove only the bolts which correspond with the pre-drilled holes along the sidewalls of the plastic Bed Liner; 6 bolts per side.

Step 2: Install Part No. CSS65U99 into Truck bed and align holes.

Step 3: Replace the manufacturer's bolts back into Truck bed securing plastic Bed Liner in place.

