

TOOLS NEEDED:

PHILLIPS SCREWDRIVER

INSTALLATION TIPS:

- Read and understand all instructions before beginning installation
- Take care not to over tighten the screws as damage can occur
- To clean use only soapy water and a soft cloth. Do not use paper towels, petroleum products or solvents.

KIT CONTAINS:

- | | | | |
|---|-----------------------|---|-------------|
| 1 | HOOD PROTECTOR | 1 | ALCOHOL PAD |
| 2 | WASHERS | | |
| 2 | PAN HEAD SCREWS | | |
| 2 | CLEAR ADHESIVE STRIPS | | |
| 2 | CLIPS | | |

WARNINGS:

Stampede Automotive Accessories only approves installing this Hood Protector to these written instructions with the hardware provided. Failure to install according to these instructions will invalidate the warranty. This includes, but not limited to using alternative installation methods, hardware, or materials.

INSTALLATION INSTRUCTIONS:

• **PRE INSTALLATION CHECKLIST**

- (1) Inspect the Hood Protector thoroughly for defects or damage and verify the contents of package.
- (2) Lift the hood and remove any dirt or debris.
- (3) Test fit the hood protector to the hood of the truck.
- (4) Clean areas where adhesive strips will adhere with alcohol pad.

• **INSTALLATION**

- (1) Peel back and fold over at least three inches of tape from each side of the center of the hood protector as shown. Peel tape from the very center of the hood protector not the outside.(fig 1)
- (2) Carefully place the hood protector to the truck with the center of the notch aligned with the center of the hood protector. The bottom surface of the hood protector will align with the leading edge of the hood. (fig 2)



(fig 1)




(fig 2)

- (3) Note the two locations where the holes on the hood protector align with the hood.
- (4) Install a piece of the clear film at each location noted in the previous step and wrap it around the edge of the hood.




(fig 3)

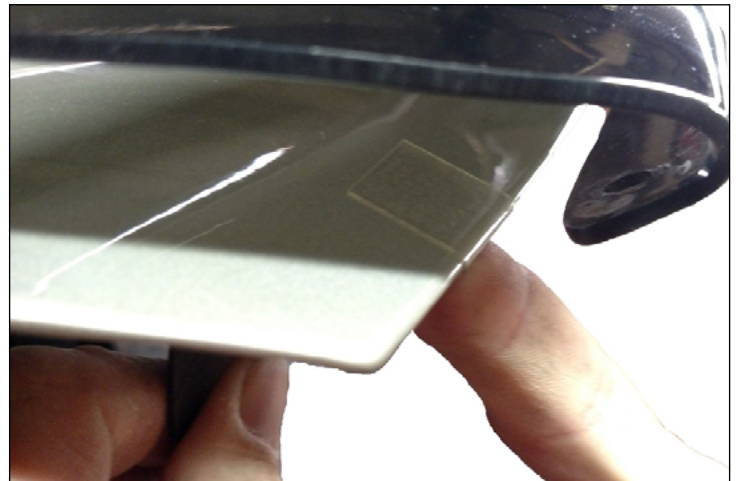

(fig 4)

- (5) Install a spring clip at each location with the clear film. Carefully align the clip with the hole in the hood protector. Note that when installing the spring clip only apply force at the point noted by the arrow in (Fig 5).
- (6) Using a Phillips screw driver attach the hood protector to the spring clip with the included screw and washer as shown. Note that the screw will pass through the hood protector and into the spring clip. (Fig 6)

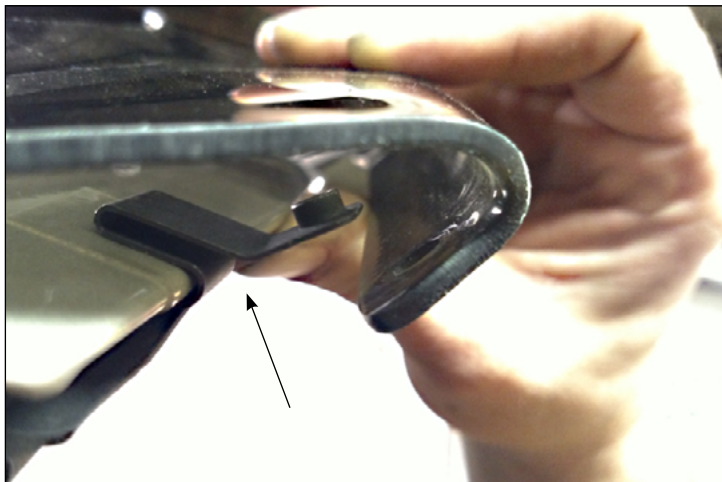

(fig 5)



(fig 6)



(fig 7)

- (7) With both spring clips installed on the hood and attached to the hood protector completely remove the red backing from the rest of the tape. (fig 6)
With the red backing removed make sure that the tape is pressed firmly to the hood of the truck.

- (8) Close the hood and verify proper fitment of the hood protector.