


Hood Protector Installation Instructions

#7

1969-1972 General Motors Full Size Pickup

1. Center shield on hood, with hood closed. Mark center of shield and hood with crayon or tape.
2. Clean face of hood where shield is to be mounted, with soap and water. Dry thoroughly!
3. Clean surface of hood for bump-ons and Duo-Loc pads with isopropyl (rubbing) alcohol to remove wax, grease and oil film.
4. Install bump-ons as in Fig. 1. Space evenly.
5. Install Duo-Loc. Lock both pieces of Duo-Loc pads together. With the hood closed, install the 6 locked pads on the leading edge of the hood. Do not remove the top pad liner. Press down firmly on the pads to secure pads into place. See Fig. 1.
6. Remove the top pad liner from the Duo-Loc pads that are installed on the hood. Center the hood shield above the center of the hood, just above the Duo-Loc pads. After the shield is centered, press the shield firmly down on the Duo-Loc pads. See the side view in Fig. 2.

KIT CONTAINS:
(1) HOOD PROTECTOR
(1) ALCOHOL PAD
(6) DUO-LOC STRIPS
(5) BUMP-ONS

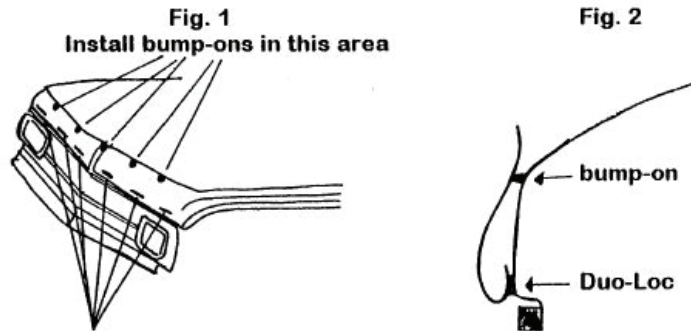

Install Duo-Loc on leading edge of hood. Clean face of hood before installing. Duo-Loc is a 3M trademark.


Hood Protector Installation Instructions

#7

1969-1972 General Motors Full Size Pickup

1. Center shield on hood, with hood closed. Mark center of shield and hood with crayon or tape.
2. Clean face of hood where shield is to be mounted, with soap and water. Dry thoroughly!
3. Clean surface of hood for bump-ons and Duo-Loc pads with isopropyl (rubbing) alcohol to remove wax, grease and oil film.
4. Install bump-ons as in Fig. 1. Space evenly.
5. Install Duo-Loc. Lock both pieces of Duo-Loc pads together. With the hood closed, install the 6 locked pads on the leading edge of the hood. Do not remove the top pad liner. Press down firmly on the pads to secure pads into place. See Fig. 1.
6. Remove the top pad liner from the Duo-Loc pads that are installed on the hood. Center the hood shield above the center of the hood, just above the Duo-Loc pads. After the shield is centered, press the shield firmly down on the Duo-Loc pads. See the side view in Fig. 2.

KIT CONTAINS:
(1) HOOD PROTECTOR
(1) ALCOHOL PAD
(6) DUO-LOC STRIPS
(5) BUMP-ONS

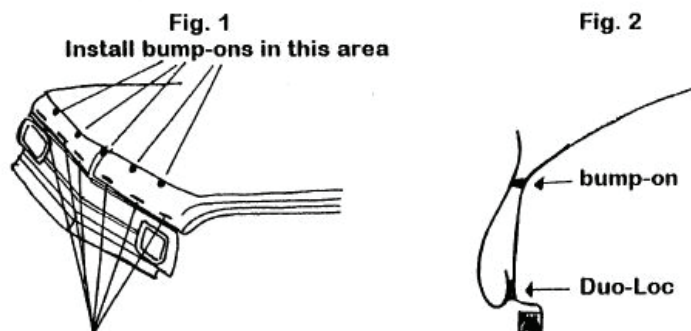

Install Duo-Loc on leading edge of hood. Clean face of hood before installing. Duo-Loc is a 3M trademark.