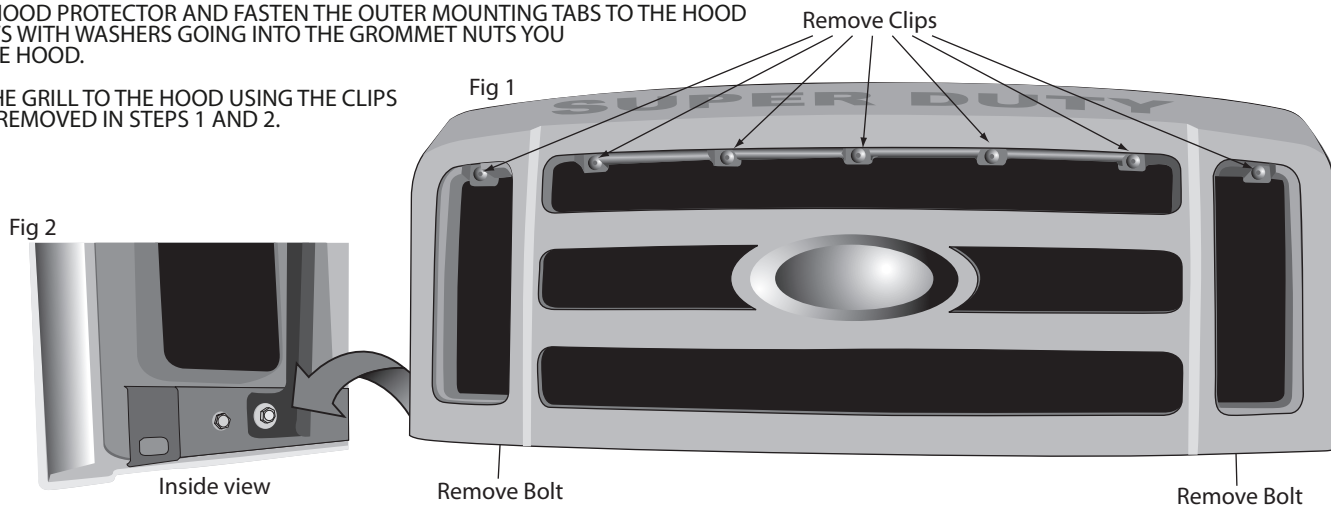


- 1** REMOVE THE 7 PLASTIC CLIPS FROM THE FRONT OF THE GRILL. (fig 1)
- 2** OPEN THE HOOD AND REMOVE THE BOLTS ON EACH SIDE THAT HOLD THE GRILL TO THE SUPPORTS. (fig 2)
- 3** LOWER THE HOOD CAREFULLY UNTIL IT LATCHES. REMOVE THE GRILL BY FIRST LIFTING STRAIGHT UP AND THEN PULLING TOWARDS YOU.
- 4** INSERT THE GROMMET NUTS INTO THE SLOTS IN THE HOOD WHERE THE OUTER TABS OF THE HOOD PROTECTOR WILL MOUNT.
- 5** CENTER THE HOOD PROTECTOR AND FASTEN THE OUTER MOUNTING TABS TO THE HOOD USING SCREWS WITH WASHERS GOING INTO THE GROMMET NUTS YOU PLACED IN THE HOOD.
- 6** RE-INSTALL THE GRILL TO THE HOOD USING THE CLIPS & BOLTS YOU REMOVED IN STEPS 1 AND 2.

**KIT CONTAINS:**  
HOOD PROTECTOR  
4 GROMMET NUTS  
4 SHOULDER WASHERS  
4 SCREWS

**TOOLS NEEDED:**  
PHILLIPS SCREWDRIVER  
5/16" SOCKET WRENCH

**CLEANING:**

USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.