


NO DRILL HOOD PROTECTOR INSTALLATION INSTRUCTIONS

• Carefully pry off the long plastic trim piece on the grill to expose the 5 bolts underneath using a flat head screwdriver with the tip wrapped in masking tape.

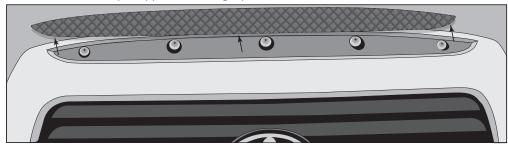


KIT CONTAINS:

HOOD PROTECTOR 2 PLASTIC INSERTS 2 SCREWS 2 WASHERS

TOOLS NEEDED:

10mm NUT DRIVER FLAT SCREWDRIVER MASKING TAPE

- 2 With the trim piece removed remove the 5 bolts with a 10mm nut driver.
- 3 Raise the hood and from underneath disconnect the metal hood lock rod attached to the hood lock mechanism.
- 4 Remove the 10 remaining bolts that hold the grill to the hood. 4 along the top edge and 3 on each of the side brackets.
- 5 Slowly lower the hood and carefully remove the grill by prying it away from the hood using the tape wrapped flat head screwdriver.
- 6 Clean off and dirt that may be present on the hood and insert the 2 grommet nuts into the 2 holes in the hood that line up with the holes of the large mounting tabs of the hood protector.
- Align the 2 holes in the hood protector to the holes in the hood with the grommet nuts and attach it with screws and washers
- 3 Carefully lower the hood and re-install the grill. Ensure that the hood protector tabs are in between the grill and the hood.



CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS.

