


STAMPEDE[™]
AUTOMOTIVE ACCESSORIES

HOOD PROTECTOR INSTALLATION INSTRUCTIONS

- 1 LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2 LOCATE THE 4 HOLES ON THE UNDERSIDE OF THE HOOD THAT LINE UP WITH THE MOUNTING HOLES OF THE HOOD PROTECTOR. PLACE A PLASTIC INSERT INTO EACH OF THE HOLES.
- 3 USING THE ALCOHOL PADS FROM THE HARDWARE PACK CLEAN THE UNDERSIDE OF THE HOOD WHERE THE 2 ADHESIVE STRIPS ON THE HOOD PROTECTOR MOUNTING TABS WILL ADHERE TO THE HOOD.
- 4 CENTER THE HOOD PROTECTOR TO THE HOOD AND REMOVE THE RED BACKING FROM THE ADHESIVE STRIPS ON THE MOUNTING TABS. INSERT A SCREW WITH A SHOULDER WASHER THROUGH EACH OF THE HOLES AND TIGHTEN JUST ENOUGH TO HOLD THE HOOD PROTECTOR IN PLACE.
- 5 CLOSE THE HOOD CAREFULLY TO CHECK THE FIT. IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND MOVE IT TO ONE SIDE OR THE OTHER UNTIL CENTERED..
- 6 APPLY FIRM PRESSURE TO THE MOUNTING TABS TO SECURE THE ADHESIVE TO THE HOOD. TIGHTEN THE SCREWS UNTIL SNUG **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR.

NOTE: SOME VEHICLE MODELS DON'T HAVE OUTER MOUNTING HOLES. IN THIS CASE, USE THE SELF PIERCING SCREWS WITH NO PLASTIC INSERTS.

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

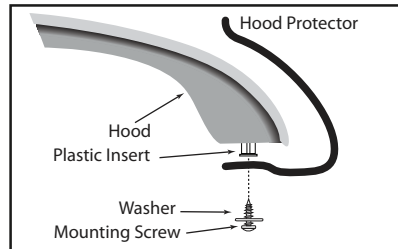

KIT CONTAINS:
HOOD PROTECTOR
4 MOUNTING SCREWS
4 SHOULDER WASHERS
4 PLASTIC INSERTS

TOOLS NEEDED:
PHILLIPS SCREWDRIVER