


## INSTALLATION INSTRUCTIONS

**APPLICATION:** 

2006-07 DODGE RAM 1500/2500/3500; 2006-07 DODGE RAM MEGA-CAB

## **AUTOMOTIVE PRODUCTS, INC.**

	ACEMENT GRILLE H INSERT 34-9670	TOOLS REQUIRED Phillips Screwdriver 4mm Wrench
QTY	HARDWARE CONTENTS	
1	REPLACEMENT GRILLE - w/ Mesh Insert	
16	M4 x 25MM PHILLIPS SCREWS	
16	M4 FLANGE NUTS	
16	METAL BRACKETS - FLAT	

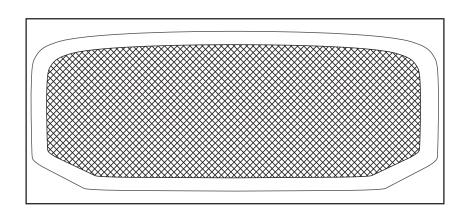

## PRODUCT INSTALLATION:

- 1. Verify all hardware contents listed above are present. Carefully read all Instructions before installing.
- 2. Open hood to access the backside of OE Grille. Position the top-left panel over existing OE Grille (Honeycomb).

  SEE FIGURE 1 From the front side of the Billet Grille, insert 4 M4 x 25mm screws through the existing holes on Billet Grille.

  Fasten all screws using the provided Metal Brackets and M4 Flange Nuts from back-side of OE Grille.

NOTE: Do not fully tighten screws at this time. SEE FIGURE 2

3. Repeat step 2 on remaining panels. Once the 4 Billet Grille panels have been loosely attached, align the top and bottom panels to desired position and tighten all fasteners evenly.

NOTE: DO NOT OVERTIGHTEN HARDWARE.

FIGURE 1 - GRILLE INSERT POSITIONS



FIGURE 2 - BRACKETS/M4 FLANGE NUTS

