



INSTALLATION INSTRUCTIONS

GRILL/ BRUSH GAURD PART #6048
2003-2005 HONDA ELEMENT

PARTS LIST

- | | |
|----------------------------|-------------------------|
| (1) FRONT BAR | (16) 7/16" FLAT WASHERS |
| (2) FRAME MOUNT BRACKETS | (6) 7/16" HEX LOCK NUTS |
| (2) TOP SUPPORT BRACKETS | (2) 1/4" x 3/4" SCREWS |
| (4) 7/16" x 1" HEX BOLTS | (1) 1/4" HEX LOCK NUTS |
| (6) 7/16 x 1 1/4 HEX BOLTS | (2) 1/4" WASHERS |
| (2) 5/16 X 3/4 HEX BOLTS | (2) 5/16 NUT PLATES |
| (2) 7/16 DUAL NUT PLATES | |

PROCEDURE


1. Remove the plastic rivets securing the plastic guard located underneath the vehicle in order to install the front bar.
 2. Start with the passenger side assembly, position one of the 7/16-nut plate behind the cross member opening and align the 7/16 nut plate with the two matching holes in the frame rail. Fasten the frame brackets to the bottom cross member as shown in the illustration using the 7/16 x 1" hex bolts and 7/16 washers.
- NOTE: ALIGN FRAME BRACKETS 24 5/8" FROM OUTSIDE TO OUTSIDE OF BRACKETS AND SECURE THEM.
3. Open hood to access existing holes on vehicle.
 4. Attach top bracket support to the cross member existing hole using the 5/16 nut plate and 5/16 x 3/4 hex bolt as shown in illustration.
 5. Using a utility knife, carefully cut slots on the plastic guard underneath the vehicle to fit around the frame brackets.
 6. Re-attach the plastic guard
 7. Attach front bar assembly to the lower brackets (inner edge) using the 7/16 x 1-1/4" hex bolts, 7/16 hex nuts, washers, and the top support bracket using the 1/4 x 3/4 screws, hex nuts, and washers.
 8. Align front bar assembly with front of vehicle and secure all fasteners.

SEE DIAGRAM BELOW

CUSTOMER SERVICE 888-800-ARIES

2003-05 HONDA ELEMENT

PASSENGER SIDE SHOWN

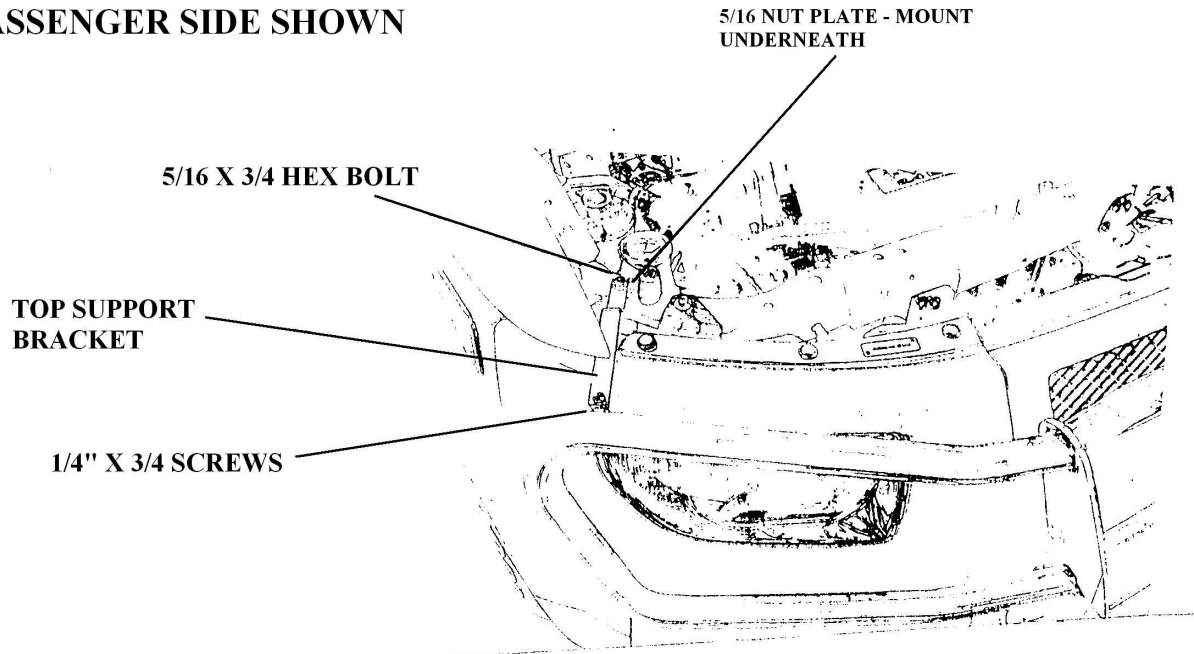

PASSENGER SIDE ASSEMBLY

