


# **BESTOP** EZFOLD Hard Tonneau Installation Instructions

333 Centennial Parkway, Suite B. • Louisville, CO 80027 • 1-800-845-3567



- 1.** Place the cover on front of truck bed.

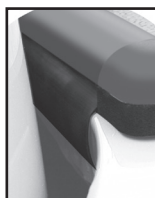


Place dust seal between cab and truck bed.



- 7.** Cover is laying down flat.




- 8a.** Secure tailgate clamp hooks for a snug fit.

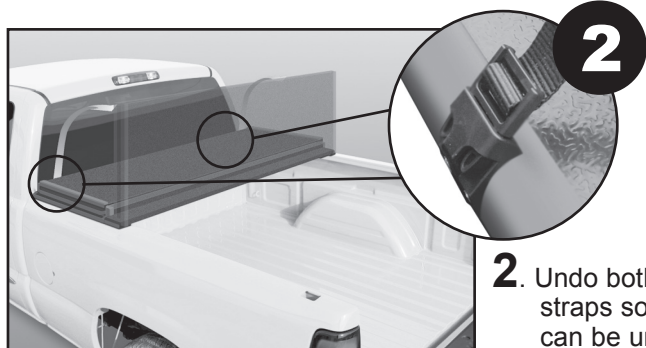


- 2.** Undo both tie-down straps so cover can be unfolded.



- 3.** Unfold the cover all the way open to align cover on the truck bed rails before clamping.

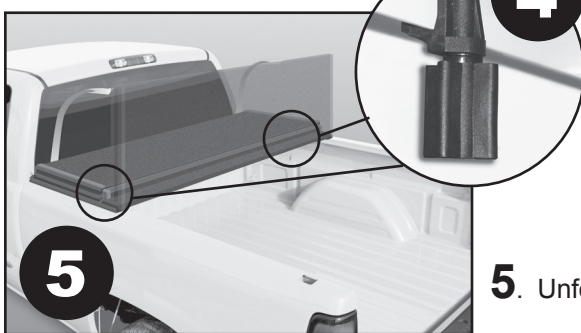


- 4.** Secure cab clamp hooks under the metal bed rail. Toyota Models Only - Tighten lock nut at bottom of knob.

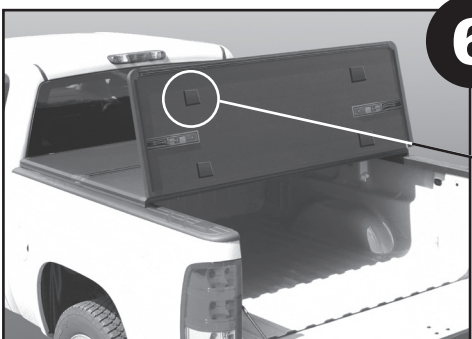


- 5.** Unfold first section.

- 6.** Unfold second section.
- IMPORTANT**  
DO NOT remove foam blocks. They protect surface of panel when folding. Voids Warranty.

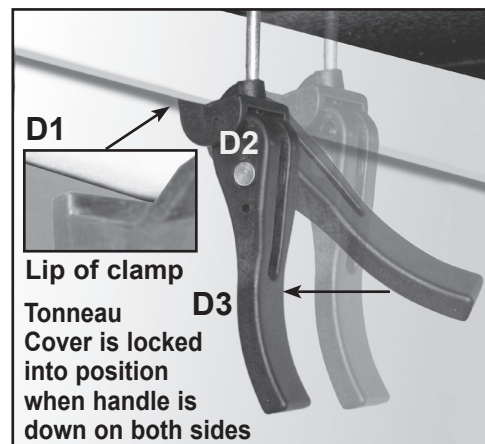

- 8b.** To clamp cover down, put lip of clamp hooks under the side metal bed rail and push handle down. (See D1, D2, D3)

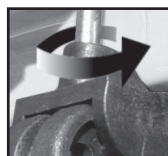


## **How To Adjust Clamps**

- To adjust, turn clamp hook clockwise to tighten or counter clockwise to loosen.

## **9. Vehicles With Utility Track**

- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure cab and tailgate clamp hooks on to aluminum blocks.

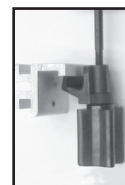

Cab



Tailgate

## **10. Paint Protectors**

- A.** Apply to inside metal bed rail at each latch location

**\*Patent No's.**

**8,348,328/8,256,824/8,511,736**