







Installation Instructions Factory Style Windshield Header

Vehicle Application:


- Jeep Wrangler and Wrangler Unlimited
1997 – 2006
Part Number: 55014


www.Bestop.com - We're here to help! Visit our web site and click on ["Ask a Question"](#). Click here for more [Jeep® Accessories by Bestop.](#)

INSTALLATION TIME	SKILL LEVEL
 <p>3/4 Hour</p>	<p>1 2 3 4</p> <p>2 - Moderately Easy</p>

TOOLS		
 <p>Safety Glasses</p>	 <p>Phillips Screwdriver</p>	 <p>Power Drill 3/16" Bit</p>



 **CAUTION** Safety glasses should be worn at all times while installing this product.


 **WARNING** This product is designed primarily to enhance the appearance of the vehicle and to shield the occupants from ordinary weather conditions. Do not rely in any way on the components of this product to contain occupants within the vehicle, or to protect against injury or death in the event of an accident. This product will not protect the occupants from falling objects. Never operate the vehicle in excess of manufacturer's specifications.

WEAR SEAT BELTS AT ALL TIMES

Read and follow, precisely, all installation instructions provided when installing product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

Factory Style Windshield Header Installation Instructions

Parts List

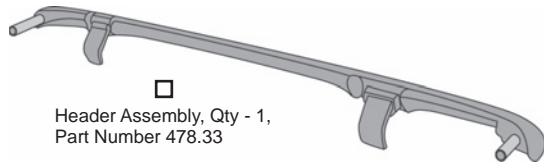


□ Header Assembly, Qty - 1,
Part Number 478.33



□ #12 x 3/8" Tapping Screw,
Qty - 4, Part Number 309.73




□ Loctite, Qty - 1, Part Number 309.83

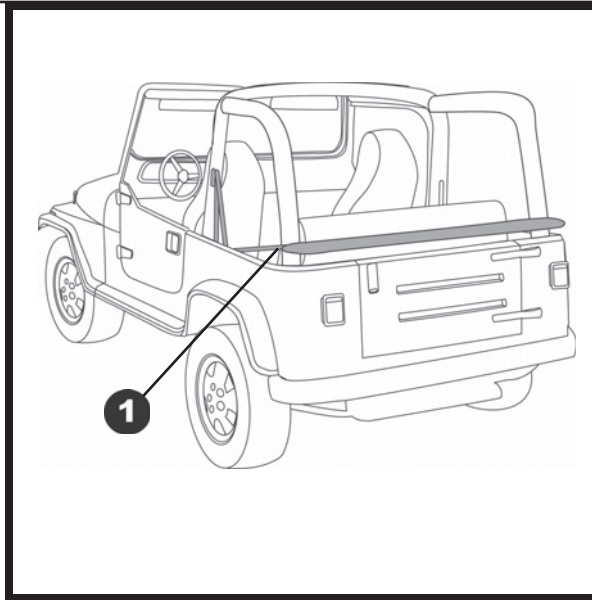

1 Install Header to Side Bows

If the old Header is attached to the Side Bows with rivets, drill out the rivets with a 3/16" drill. If it is attached with screws, remove the screws with a phillips screw driver. Slide the old Header out of the Side Bows.

Slide the new Header Assembly into the Side Bows with the same orientation. If the holes in the Header and Side Bows do not line up, transfer drill the holes with a 3/16" drill bit. Attach the Header with a #12 x 3/8 Tapping Screw on each side of each Side Bow. Use a drop of Loctite on each screw.

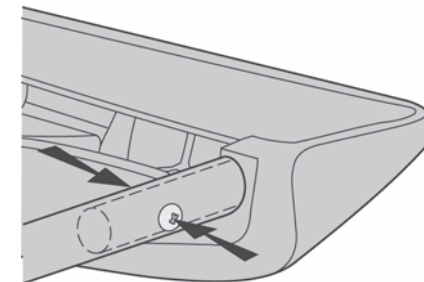

For Bestop Warranty Information, Please go to;
<https://www.bestop.com/help/warranty-information/>

