11772   1996-99 INFINITI I30, 1997-99 NISSAN MAXIMA

12/02/2020

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.
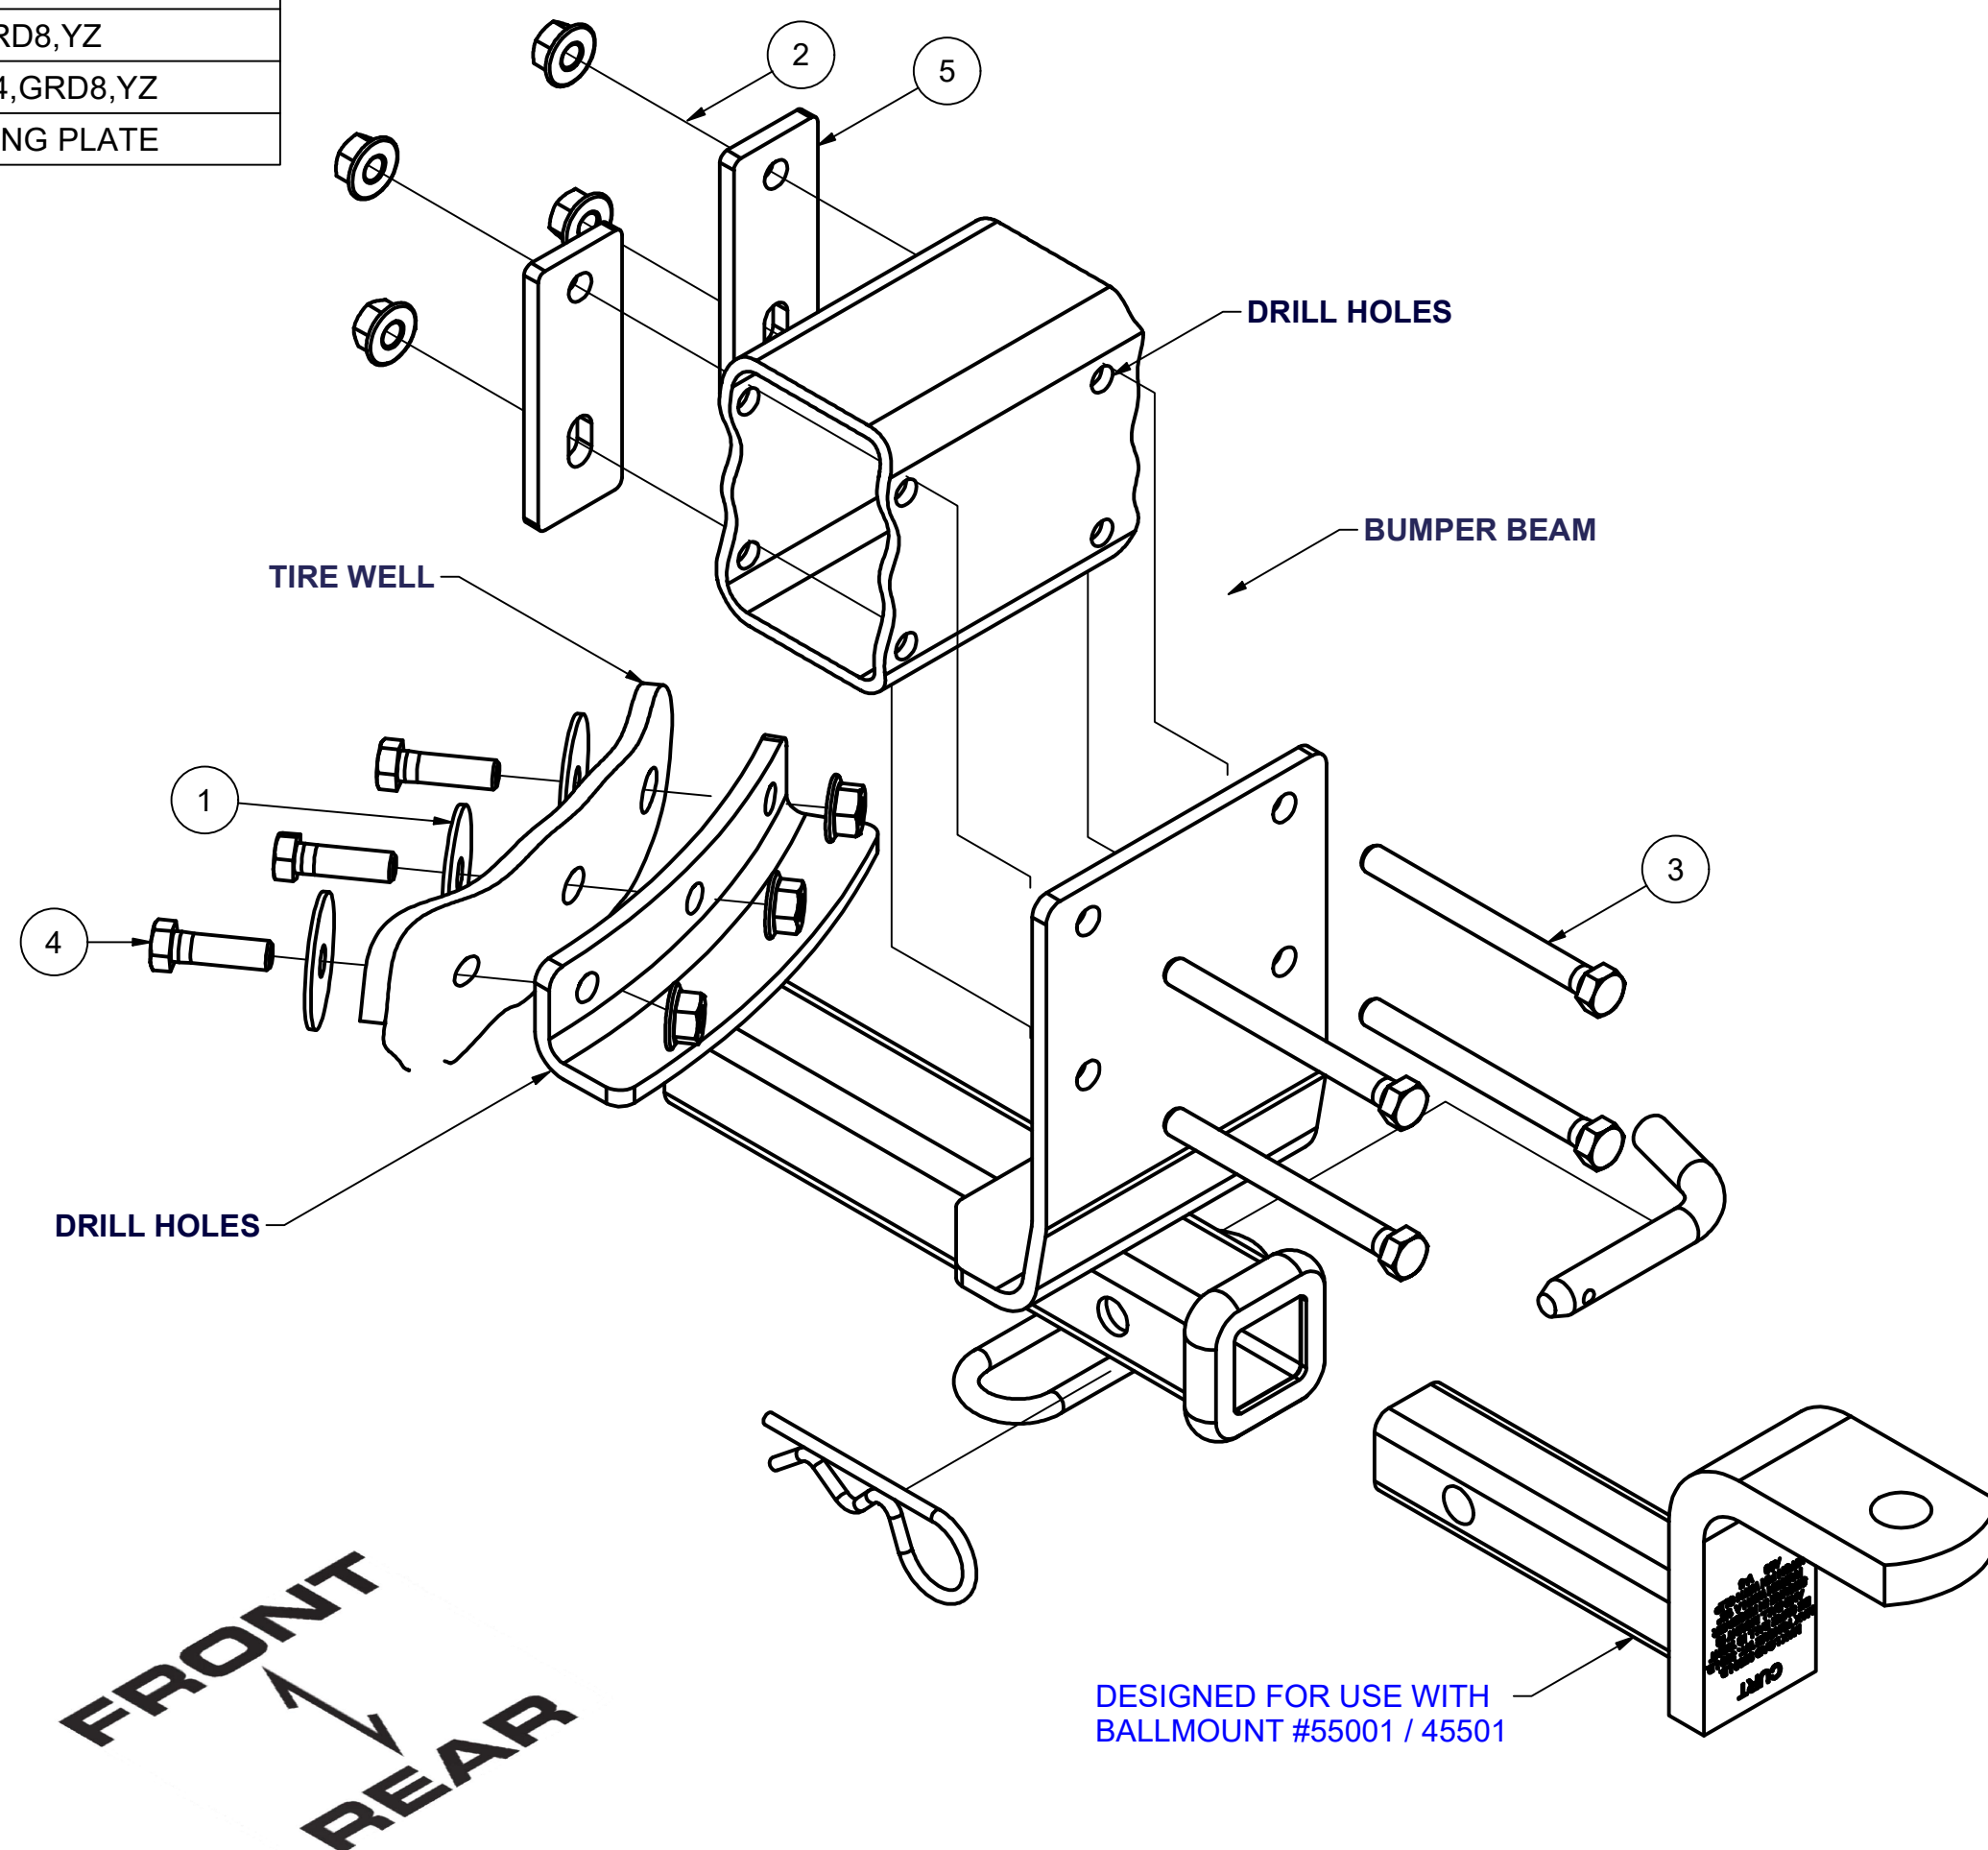***DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.***
WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.
** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**
HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	3	30-00205	WASHER,FDR,3/8,CZ
2	7	20-00102	NUT,SER-FLANGE,3/8-16 UNC,GRD8,YZ
3	4	10-10578	HHCS,3/8-16 UNC,4,GRD8,YZ
4	3	10-10339	HHCS,3/8-16 UNC,1-1/4,GRD8,YZ
5	2	CM-SP117	.25 x 1.50 x 4.00 BACKING PLATE

DRILL HOLES

BUMPER BEAM

TIRE WELL

DRILL HOLES

FRONT   REAR

DESIGNED FOR USE WITH
BALLMOUNT #55001 / 45501

HITCH WEIGHT: 11 LBS.
INSTALL TIME
  PROFESSIONAL: 30 MINUTES
  NOVICE (DIY): 60 MINUTES
INSTALL NOTES:
- DRILLING REQUIRED
- TEMPORARILY REMOVE LICENSE
  PLATE
- SILICONE SEAL HARDWARE
- TEMPORARILY REMOVE BOLTS
- TEMPORARILY REMOVE SPARE TIRE

INSTALLATION STEPS

1. Temporarily remove license plate. Lift the hitch into position centered and square with car. Temporarily remove fascia/ bracket bolts at bumper bottom to position hitch. Using hitch as a template, drill bumper for 3/8" diameter fasteners. Under license plate remove horizontal fascia strip. Pay attention to drill holes square with bumper so exit holes will match backing plates. Temporarily mount hitch using fasteners.

2. Remove spare tire. Using hitch as template, mark tire well for 3/8" fasteners. Remove hitch and drill tire well at marks. Reinstall hitch as shown.

3. Torque all 3/8" hardware to 45 lb.-ft.

4. Use silicone sealant to seal hardware hardware installed through tire well.

5. Reinstall license plate, spare tire and fascia / bracket bolts removed in Step 1.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS
ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

247278