

INSTALLATION MANUAL

19304

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Parts List

Item	Qty	Description
1	6	Tube Clamps
2	6	Button-head cap screw, M6 x 25mm
3	6	Hex nut, M6
4	1	Wrench

Tools Required

Allen wrench	--
--------------	----

⚠ WARNING

Never exceed the factory weight rating of the OEM roof rack, including the weight of the cargo carrier.

Product Photo



NOTICE

Visit www.curtmfg.com for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of your product should be performed to ensure all hardware and / or components remain secure.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

Product Registration and Warranty

CURT stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: warranty.curtgroup.com/surveys

ASSEMBLY

Parts List

Item	Qty	Description
1	6	Tube Clamps
2	6	Button-head cap screw, M6 x 25mm
3	6	Hex nut, M6
4	1	Wrench



1 (qty 6)



2 (qty 6)



3 (qty 6)




4

Step 1

Snap all six tube clamps over the roof rack tubes. Place the fairing on the front of the cargo basket and align the holes in the fairing with the tube clamps. Insert a screw into each hole and place a nut on the back side of the tube clamp. With all screws inserted adjust and center the fairing then tighten all screws.

CAUTION

Do not over tighten the screws to cause plastic clamps broken.

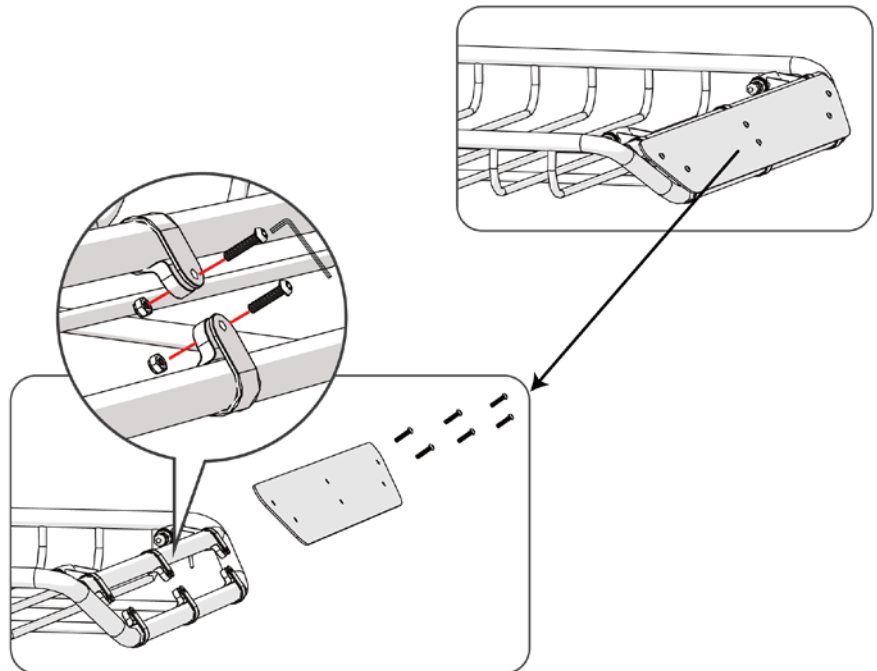

TOWING BASICS & SAFETY INFORMATION

For information on safely towing your trailer, visit curtmfg.com/understanding-towing.