

INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

| Make | Model |
|-------|-------|
| Acura | TL |


WIRING LOCATION GUIDE

PASSENGER CARS (P)

Representative vehicle shown below

P4 - Behind passenger side taillight housing, inside of trunk

CUSTOM WIRING HARNESS

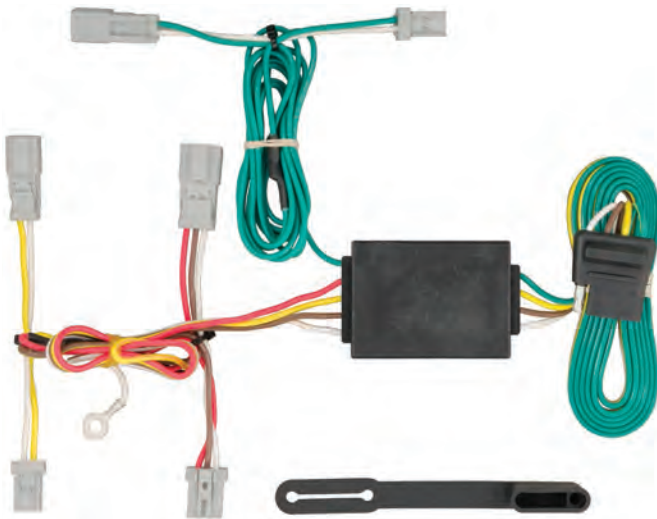

NOTICE

All steps must be followed to ensure the wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

Panel trim removal tool

Flat blade screwdriver

⚠ WARNING

Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side

Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.



INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Access the vehicle wiring harness connectors inside the trunk behind the taillight in positions P3 and P4 as shown in the 'Wiring Location Guide'.

Step 2

Locate vehicle battery on the driver's side under the hood and disconnect the negative battery terminal (A).

Step 3

Open the vehicle tailgate. Remove all trunk floor coverings (B).

Step 4

Remove the fasteners securing the rear scuff panel. Remove the scuff panel by pulling out on the bottom and then up (C).

Step 5


On both sides of the trunk, remove the push fasteners and the screw-in fasteners securing the felt liner (D,E).

Step 6

Starting on the driver side, pull back on the felt liner to locate the vehicle's taillight wiring harness connectors (F). The connectors will be similar to those on the T-connector harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs (G).

Step 7

Insert the T-connector end with yellow wire between the separated two-pin connectors. Insert the T-connector end with brown wire between the separated three-pin connectors. Make sure the connectors are fully inserted with locking tabs in place (H).

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

Step 8

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

Step 9

Route the T-connector end with the green wire to the passenger side behind the removed scuff panel. Repeat Steps 6-7 on the passenger side using the T-connector end with the green wire.

Step 10

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the double-sided tape provided (I).

Step 11

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in a convenient, out of the way location. Secure any loose wires with the provided cable ties.

Step 12

Reinstall all items removed during install and reconnect the negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.

