




409S_® Stainless Steel

Installation Instructions for:
MUFFLER #8425461

2016 CAMARO SS

6.2L V8 ENGINE, REPLACEMENT MUFFLER
DOES NOT FIT DUAL MODE VEHICLES

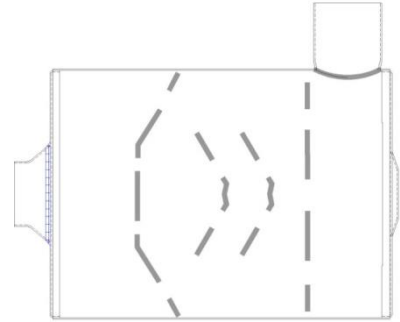

01/26/16



1) Support the factory muffler with a stand. Using a hacksaw or Sawsall, carefully cut off the inlets to the muffler just on the edge of the welds at the muffler case. Then carefully cut off the mufflers two exit pipes just at the welds to the muffler case. Remove the two hangers at the front of the muffler from the rubber mounts on the vehicle then carefully lower the factory muffler from the vehicle. Use a file or die grinder to remove any burrs on the inlet pipes as well as the exit pipes. Leave the exit pipes hanging in place for the installation of the Flowmaster mufflers.



2) Place the inlet of muffler **8425461** onto the factory front pipe and support with a stand. Connect the factory exit pipe to the outlet of the muffler. Adjust the position of the muffler and exit pipe to get a satisfactory fit. Be sure that the exit pipe is in the correct position in the bumper cut-out. Once you are satisfied with the position of the muffler and exit pipe, fully weld the inlet and outlet of the muffler. Repeat this step on the opposite side of the vehicle.