

10-14 Dodge 2500-3500 Installation instructions
FBR #300-41-0006, XFBR part # 600-41-0005, SFBR
#120-41-0006

Bolt Bag Contents:

Quantity	Description
16	1/2" Flat Washers
8	1/2" Lock Washers
8	1/2" Nuts
8	1/2" X 1-3/4" Bolts
8	10mm X 50mm Bolts
8	10 mm Nuts
16	10mm Flat Washers
8	10mm Lock Washers
6	1/4" X 1" Bolts
12	1/4" Flat Washers
6	1/4" Lock Washers
6	1/4" Nuts
110	Total Pieces




Step 1



Step 2

Driver Side

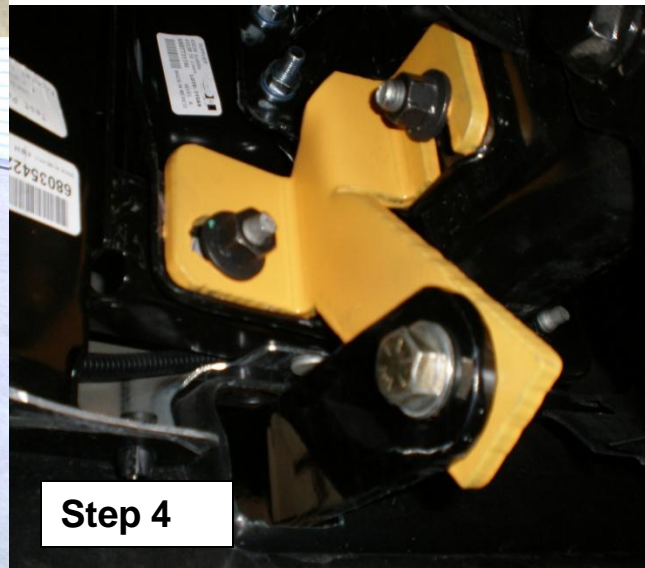

Step 4

Step 1: Remove factory bumper. NOTE: You have to temporarily remove grille to access the final bumper bolt when removing. (See step 1).

Step 2: Remove factory tow hook and install upper support bracket directly to frame cap. Re-install tow hook using our longer bolts. Remove factory fog lights from bumper and install factory fog lights (if available) to front bumper replacement using our 1/4" bolts provided.

Step 3: Mount Frontier Front Bumper Replacement to upper frame brackets using (1/2" X 1 3/4") bolts provided. Check alignment of Front Bumper to truck during this step.

Step 4: Install lower frame support bracket to outside lower frame cap bolt and lower frame bolt as shown (HINT: Loosen factory nuts and re-tighten). Finally install bottom foot of Frontier Grille Guard to lower frame support bracket (1/2" X 1 3/4" Bolts).

Step 5: Check alignment of front end replacement to truck from side to side and tighten bolts. Check alignment of front bumper replacement up and down to truck and tighten all bolts.