



WEATHERBEATER™

PT #1423


FLOOR LINERS

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Husky Liners. Your new third seat floor liner is custom molded to fit your Chevrolet Tahoe/GMC Yukon with 2nd row bucket seating. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET TAHOE / GMC YUKON 2ND SEAT FLOOR LINER WITH 2ND ROW BUCKET SEATING

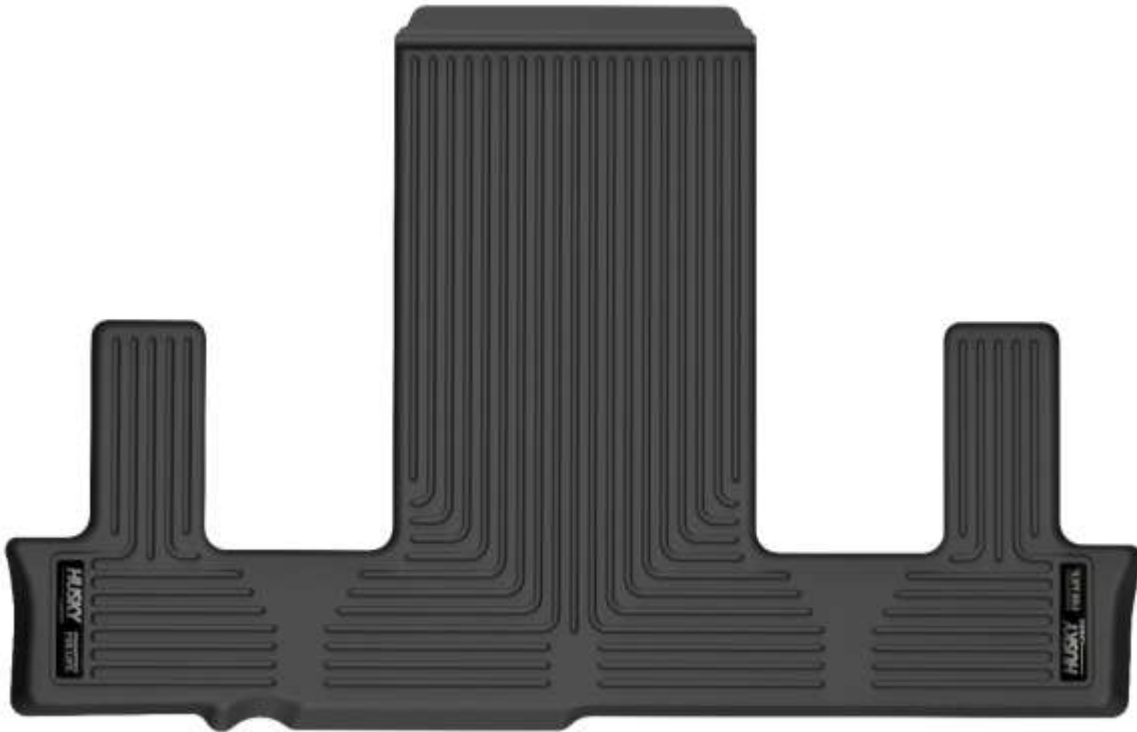

TO EASE INSTALLATION OF YOUR THIRD SEAT LINER, MOVE BOTH 2ND ROW SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL THE LINER, POSITIONING IT AS SHOWN IN THE IMAGE ABOVE. NOTE THAT THE TONGUE PORTION THAT EXTENDS FORWARD BETWEEN THE 2ND ROW BUCKET SEATS TUCKS BEHIND THE BACK OF THE 2ND SEAT LINER.