

GMC/CHEVROLET DUALY LOGO READY REAR MUD GUARD

INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required

- Short Phillips screwdriver
- Center punch
- Drill / 1/8" drill bit

Package Contents

- Driver & passenger side rear mud guard
- #10 screw (qty. 2)
- Washer (qty. 6)
- M6 Bolts (qty. 4)
- Instruction sheet

NOTE: It may be necessary to remove the rear wheels depending on the tools being used for installation.

1. Clean the mud guard location area on the fender before installation.
2. Remove existing fasteners from locations A, C, and D (Figures 1 and 2).
3. Attach mud guard at locations A and C with M6 Bolts and washers, check fit and level before tightening.
4. Install factory fastener at location D.
5. Using mud guard as a template, mark, center punch, and drill 1/8" hole at location B and attach with a #10 screw (Figure 1).

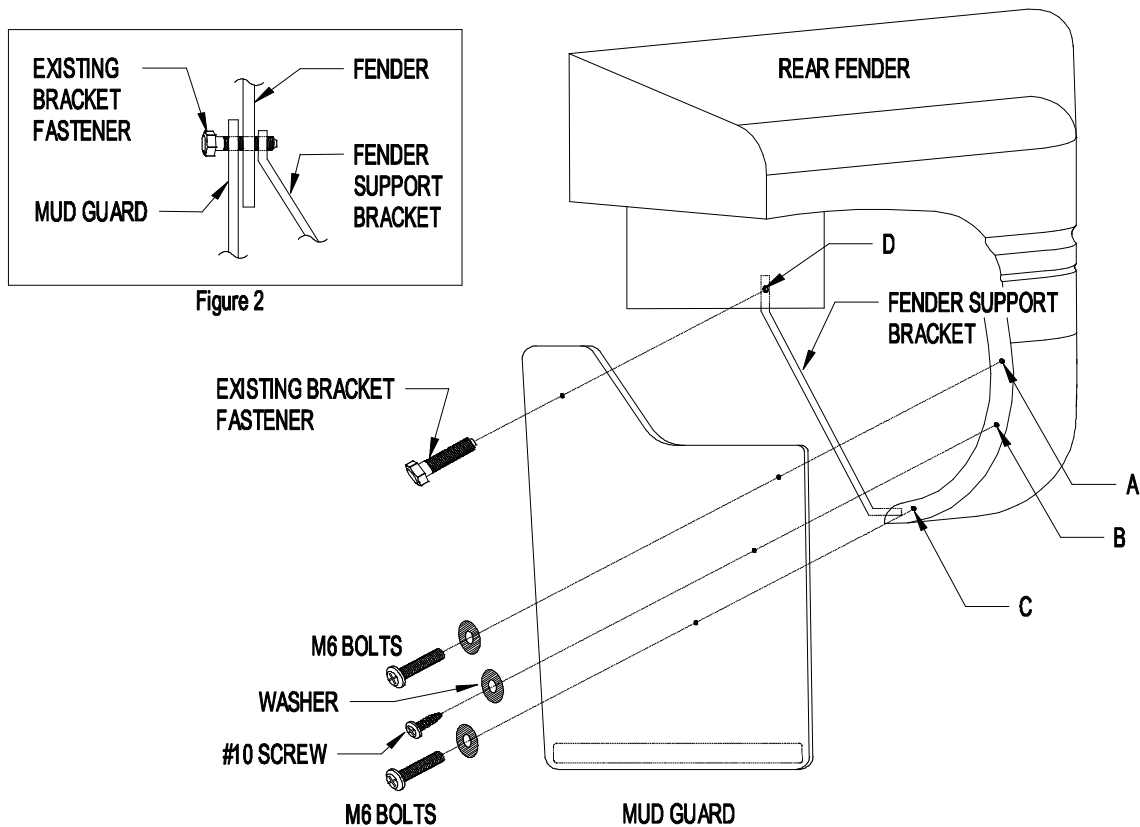


Figure 1

NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.