

Trail Armor® Components and Hardware:

1.



Trail Armor Front
Driver side

2.



Trail Armor Mid
Driver side

3.



Trail Armor Rear
Driver side

4.



5.



Trail Armor Rear
Passenger side

6.



Trail Armor Mid
Passenger side

7.



Trail Armor Front
Passenger side

Components and Hardware:

- 1. Trail Armor Front..... (2)
- 2. Trail Armor Mid (2)
- 3. Trail Armor Rear (2)
- 4. Alcohol Pad (2)

Tools for Installation:


- Car Wash supplies

Trail Armor®

PRIOR TO INSTALLATION

1

- A. Husky® only approves installing the Trail Armor® according to these written instructions. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, Super Glue, or similar products.
- B. **Fit:** Verify the fit of the Trail Armor to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C. **Painting** is not recommended.
- D. **Care & Cleaning:** Husky® Trail Armor is built to last; any detergent you use to wash your vehicle is sufficient to clean the parts. Do not use any harsh abrasive detergents.
- E. Ensure vehicle surface and part are between 60°F and 80°F (15°C and 27°C) prior to installation.

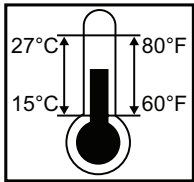

PLEASE READ: Dirt and debris can become lodged between the Trail Armor and the vehicle's body, causing scratching and paint wear from vibration. Husky® is not responsible for any damage, and the installation of our Trail Armor is done with the buyer's understanding that this scratching and paint wear may occur.

3 YEAR LIMITED WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

Trail Armor®

Rear Trail Armor Procedures (Drivers's Side):

1

NOTE: Wash and thoroughly dry the installation areas before beginning procedures.

Open vehicle doors. Clean all dirt and debris from vehicle door sills and rocker panel. Use supplied alcohol wipes where part will attach.

Peel back roughly 3" of red tape liner from the pieces of tape on the back side of rear part. Make sure red tape liner will be accessible when part is attached to truck.

← Toward Rear of Vehicle

Toward Front of Vehicle →



2

Set part in place on vehicle. Remove all red tape liners. Apply **FIRM** pressure to mounting locations to affix to truck.



Trail Armor®

Middle Trail Armor Procedures (Driver's Side):

3

Peel back roughly 3" of red tape liner from the pieces of tape on the back side of middle part. Make sure red tape liner will be accessible when part is attached to truck.



4

Set part in place on vehicle. Remove all red tape liners. Apply **FIRM** pressure to mounting locations to affix to truck.



Trail Armor®


Front Trail Armor Procedures (Driver's Side):

5

Peel back roughly 3" of red tape liner from the pieces of tape on the back side of front part. Make sure red tape liner will be accessible when part is attached to truck.


← Toward Rear of Vehicle

Toward Front of Vehicle →

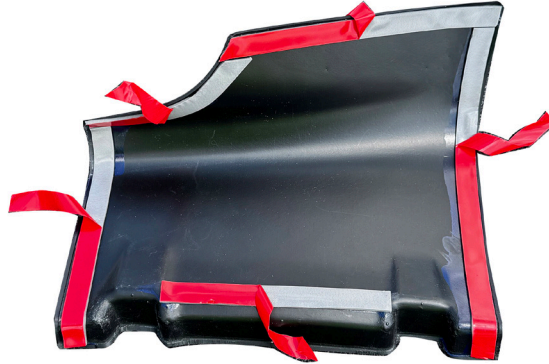

6

Set part in place on vehicle. Remove all red tape liners. Apply **FIRM** pressure to mounting locations to affix to truck.

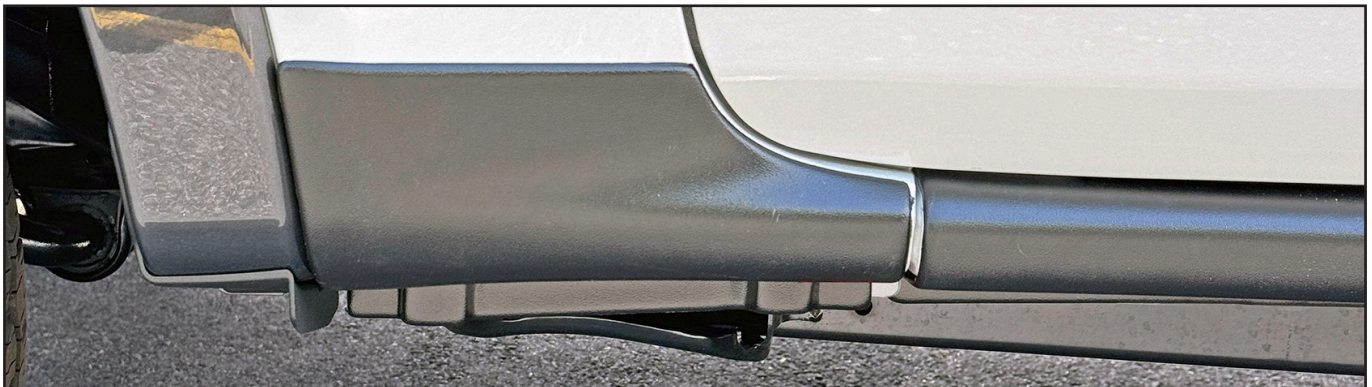

Trail Armor®

7

Completed driver side Trail Armor installation.
Repeat Steps 1-7 for Passenger Side.



Care and Cleaning

• Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.

Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

www.huskyliners.com

Phone: 800-344-8759

Email: customerservice@huskyliners.com

