


S6200PLM/SLM

99-03 FORD F250/F350 7.3L POWER STROKE, TURBO BACK, 4" SINGLE SIDE

MBRP
INC.
PERFORMANCE EXHAUST

March 15, 2017

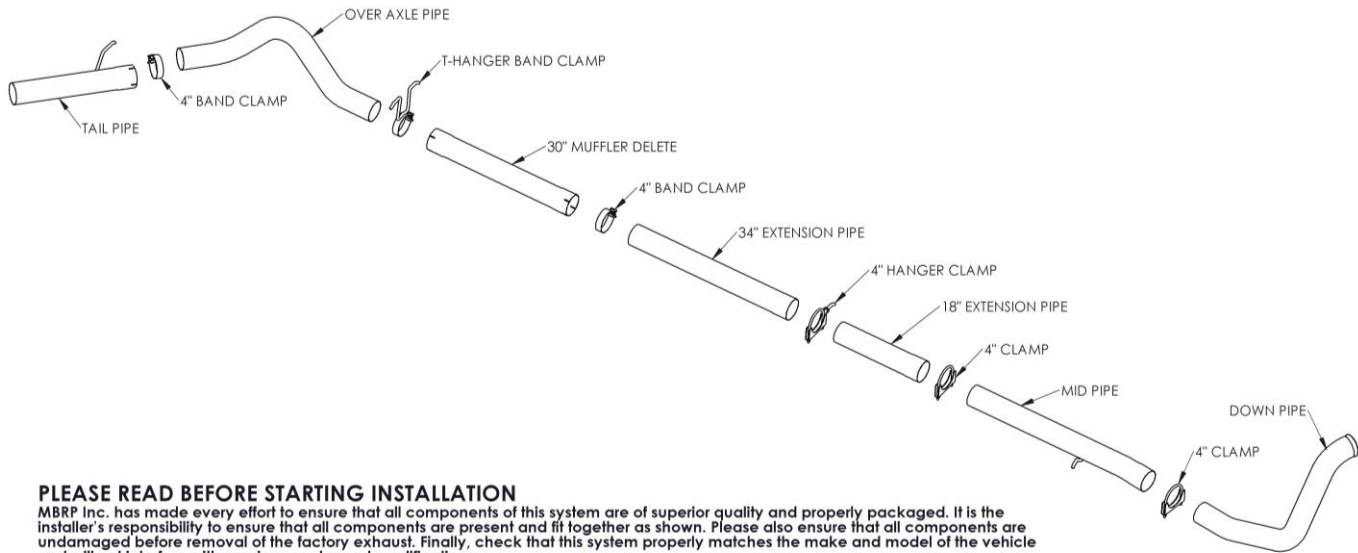

Removal of Stock System:

1. Loosen the nut on the band clamp located behind the catalytic converter using a 15mm wrench or socket.
2. If a hoist is being used for the installation, the original exhaust system can be removed in one piece by removing the passenger side shock. If a hoist is not being used the tail pipe must be cut behind the muffler to be removed.
3. Remove the muffler and tail pipe from the OEM rubber hangers and separate the stock exhaust at the slip joint located behind the catalytic converter and remove the muffler and tail pipe from under the truck. **Re-install the passenger side shock.**
4. Remove the catalytic converter by removing the two nuts holding the inlet flange together using a 15mm wrench or socket.
5. Remove the down pipe from the turbo by removing the band clamp using an 11mm socket. **Retain the band clamp for the installation of the new down pipe.** Cut the down pipe in front of the transmission cross member to remove. (**Note:** The stock down pipe can be removed in one piece by removing the transmission cross member. It is recommended that this only be done by qualified, trained professionals using tools and equipment designed to safely carry out this procedure.)

Installation of MBRP Inc. Performance Exhaust:

1. Install the Down Pipe in the same position as the stock down pipe and attach the flared end to the turbo using the stock band clamp. Do not fully tighten until all components are in place.
2. Attach the Mid Pipe to the Down Pipe and place the hanger into the factory rubber insulator located on the frame.
3. Install the Extension Pipes over the Mid Pipe. The Extension Pipes are pre-cut to fit vehicles with a 172" wheelbase and will have to be cut or left out to fit all other vehicles. For example, the 137" wheelbase vehicles do not require the 34" Extension Pipe to be installed. The 4" Hanger Clamp is installed into the OEM rubber hanger. Installation Tip: Temporarily install the Muffler Delete and the Tail Pipe using the factory rubber insulators and the "T" Hanger Band Clamp. Measure from the Muffler Delete to the Mid Pipe and then cut or remove the Extension Pipe or Pipes to create the required length.
4. Install the Muffler Delete Pipe over the Extension Pipe. Install the "T" Hanger Band Clamp into the two OEM rubber hangers located above the outlet of the Muffler.
5. Install the Over Axle Pipe from the rear of the truck, over the axle and attach to the outlet of the Muffler Delete Pipe. Attach the 4" Band Clamp and Tail Pipe to the Over Axle Pipe. Install the tail pipe hanger into the OEM hanger to complete.
6. Install the provided Clamps around the pipes where required. Starting at the front of the exhaust, add and tighten all clamps. Adjust the Tail Pipe and check along the whole length of the exhaust system to ensure that there is adequate clearance around the fuel and brake lines or any wiring. If any interference is detected relocate or adjust.

Congratulations! You are ready to begin experiencing the improved performance and driving pleasure of your MBRP Inc. performance exhaust system. We know you will enjoy your purchase.