




INSTALLATION INSTRUCTIONS



FORD MUSTANG 5.0L

PART NO. 19646

BILL OF MATERIALS:

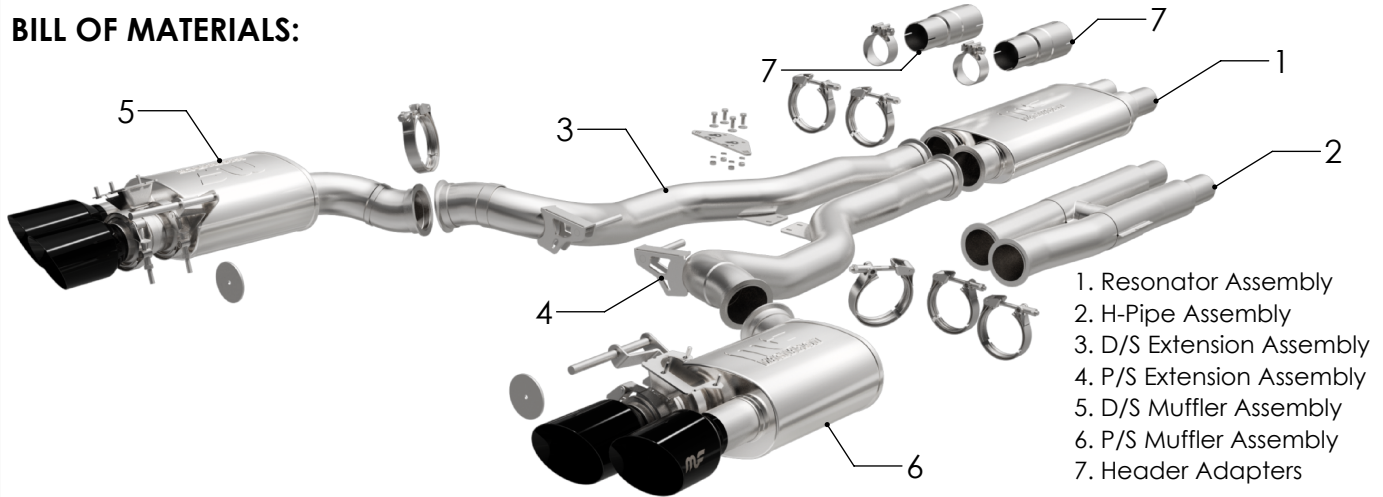

HARDWARE KIT:

- 1.[6] 3.00" V-Clamp
- 2.[1] MF Bracket
- 3.[4] M6 Bolt
- 4.[4] M6 Nut
- 5.[4] M6 Lock Washer
- 6.[4] M6 Flat Washer
- 7.[2] Header Adapter Pipes
- 8.[2] 2.50" Torca Clamps

SHOP SUPPLIES:



WEAR SAFETY GLASSES



READ INSTRUCTIONS THOROUGHLY BEFORE INSTALLING PRODUCT



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

MINIMUM REQUIRED TOOLS:



11mm, 13mm, 15 mm, 7/16"



Hanger Tool (Or Pry Bar)

MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS



WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

ATTENTION: Always install any supplied band or U-bolt clamps to the proper torque specifications of 40-45 ft-lb for band clamps and 30-35 ft-lb for U-bolt clamps. Over tightening will result in the clamps breaking and will NOT be warranted by MagnaFlow.

MAGNAFLOW: 1901 Corporate Centre Dr - Oceanside, CA 92056 | 1(800)990-0905

Technical Support: 1(800) 959-9226 | Email: moreinfo@magnaflow.com

INSTALLATION INSTRUCTIONS



NOTICE BEFORE INSTALLATION:

The Ford Mustang can be purchased with an "Active Exhaust" system including exhaust valves (image above). This MagnaFlow kit can be used with "Active Exhaust" by using the provided MagnaFlow valves.

Step 1 and Step 3 are for vehicles equipped with Active Exhaust, skip these steps if your vehicle is not equipped with Active Exhaust

Step 4 is for applications with aftermarket headers. Please note that depending on the manufacturer of the headers, header connection pipe may require modification to fit as each exhaust manufacturer may have unique profiles.


Step 1. To remove the OEM system first unplug the electrical connector at the exhaust valves.

Step 2. Begin by loosening the clamps at the exhaust inlet. Remove all four welded hangers from the rubber insulators and remove the exhaust. Do not damage the fasteners or rubber insulators as they will be used to install the new MagnaFlow system.

Step 3. Once the exhaust is off of the vehicle remove the valve motors from the muffler assembly and transfer it over to the new MagnaFlow exhaust valve assembly using the factory hardware.



INSTALLATION INSTRUCTIONS


Step 4. (OPTIONAL) If installing on a vehicle with aftermarket headers, modifying the Resonator Delete H-Pipe or Resonator Assembly will be required to accommodate header pipe connection. First cut the reduced section of pipe off of the inlet pipes on the Resonator Delete H-Pipe and Resonator Assembly. Then attach the header adapter pipes with the supplied 2.50" torca clamps. The modules will now have a 3.00" interior diameter to accommodate 3.00" aftermarket headers. Depending on the various header applications modifications may be required.

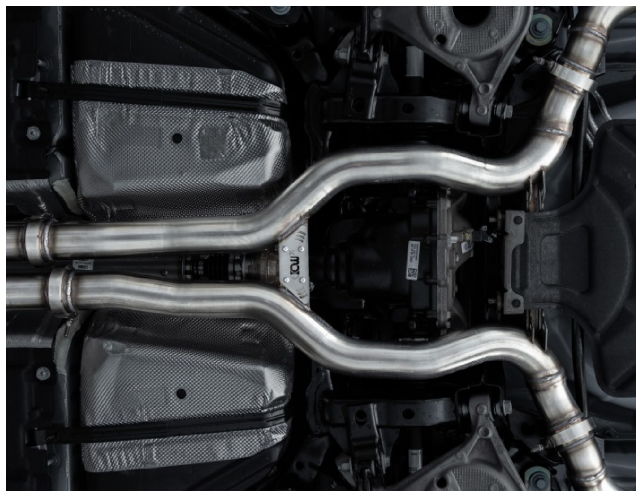

Step 5. *MagnaFlow xMOD exhausts are designed with multiple build options giving the ability to use different components depending on sound and performance preference (See Page 5).*

Begin installation of the MagnaFlow system by attaching either the Resonator Delete H-Pipe or Resonator Assembly to the OE Converter outlet pipes using the OE clamps. Next, attach the Extension Assemblies using two of the supplied V clamps and engaging the hangers into the rubber insulators. (Leave all clamps and fasteners loose for final adjustment of the complete system.)

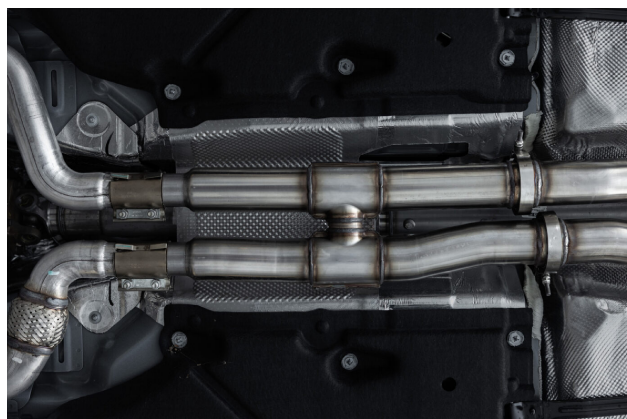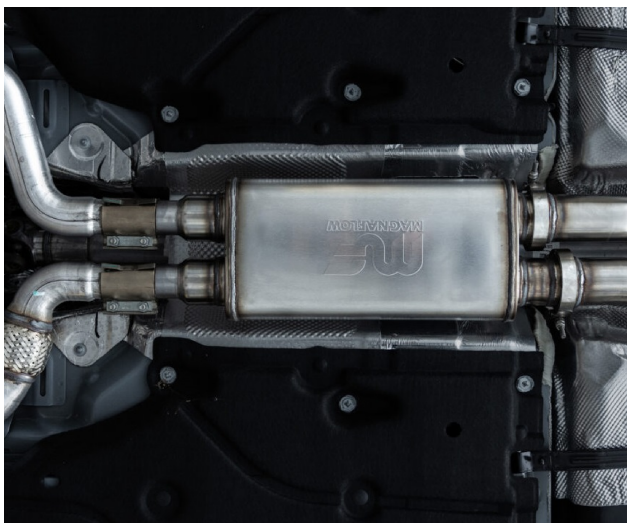

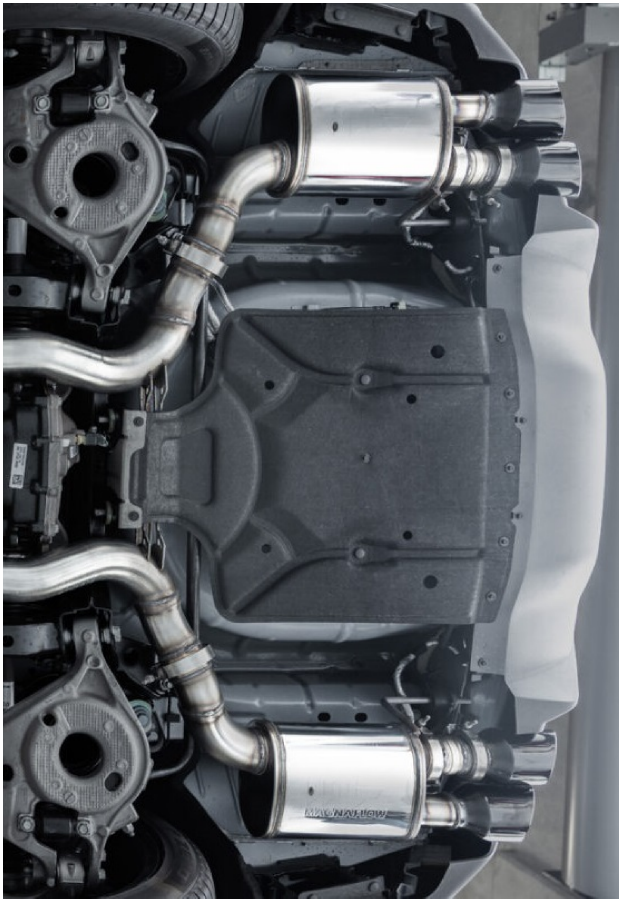

Step 6. Next install the passenger side Muffler Assembly followed by the driver side Muffler Assembly using supplied V clamps and engaging the hangers into the rubber insulators. Finish the installation by loosely attaching the MagnaFlow bracket between the Extension Pipes. Re-attach the valve wiring for the valves and make sure they are secured properly away from the heat of the mufflers.



Step 7. Once a final position has been chosen for the new exhaust system, evenly tighten all clamps and fasteners, from front to rear, using the torque specifications on page one of the instructions. Inspect all fasteners after 25-50 miles of operation and re-tighten if necessary.

xMOD™ Series Configurations

FORD MUSTANG *with Active Exhaust*

xMOD™ is a revolutionary, fully modular performance exhaust system designed to work with the factory electronic controlled valves. Personalize and fine tune your Mustang's exhaust system to configure the power and sound you want when you want it by swapping modules and using menu-driven Active Exhaust modes.



| | | | | | |
|--------------------------------|---|---|---|--------------------|--|
| | + | <div style="border: 1px solid black; padding: 5px; text-align: center;"> QUIET NORMAL SPORT TRACK </div> | = | | <p>Smooth-tuned note crafted for maximum sound suppression, while supporting more airflow for additional power-adders.</p> |
| <p>Tru-H™ Resonator Module</p> | | <p>Active Exhaust (Select either menu mode)</p> | | <p>Stealth</p> | |
| | | | | | |
| | + | <div style="border: 1px solid black; padding: 5px; text-align: center;"> QUIET NORMAL SPORT TRACK </div> | = | | <p>Aggressive and throaty growl mixed with chambered exhaust tones for a street performance sound.</p> |
| <p>Tru-H™ xTreme Delete</p> | | <p>Active Exhaust (Select either menu mode)</p> | | <p>Street</p> | |
| | | | | | |
| | + | <div style="border: 1px solid black; padding: 5px; text-align: center;"> QUIET NORMAL SPORT TRACK </div> | = | | <p>Rich. Deep. Powerful. The distinctive MagnaFlow performance tone designed for balanced street performance.</p> |
| <p>Tru-H™ Resonator Module</p> | | <p>Active Exhaust (Select either menu mode)</p> | | <p>Competition</p> | |
| | | | | | |
| | + | <div style="border: 1px solid black; padding: 5px; text-align: center;"> QUIET NORMAL SPORT TRACK </div> | = | | <p>Straight-pipe sounds inside and out, with the rasp and pop reminiscent of chambered exhausts.</p> |
| <p>Tru-H™ xTreme Delete</p> | | <p>Active Exhaust (Select either menu mode)</p> | | <p>Race</p> | |

IMPORTANT



Need assistance?

Scan code using your mobile device to visit our help center for instant answers to common questions

Warranty &

Returns

For inquiries about warranty and returns, or to start a return, contact MagnaFlow directly:



+1 800 959 9226



moreinfo@magnaflow.com



magnaflow.com/pages/contact-us



magnaflow.com/a/returns



MagnaFlow
3937 Ocean Ranch Blvd
Oceanside, CA 92056

© MagnaFlow is a registered trademark of Car Sound Exhaust System, Inc.
All rights reserved.
ISO 9001:2008 Certified — Registered since 2000

v2021.01_108.20