



I-SHEET PART NUMBER: INST-00277
 PART NUMBER: **H0365**
 PRODUCT: **NERF STEP**
 APPLICATION: **03-10 HUMMER H2**


HARDWARE H0365		QTY
5/16"x1" carriage bolts		12
2.25" self-tapping screws		12
3/8 washers		12
5/16 nuts		12

PARTS INCLUDED		QTY
Driver Side Step		1
Passenger Side Step		1



Step 1. To determine which is the front of the step, look for the shorter tail bend. Hold the N-Fab nerf-step up to the truck, approximately 3/4 to 1 inch from the front wheel well opening. (If you have oversized tires you can mount further back to ensure clearance.)

Step 2. With the bar held up to the underside of the truck, position the flange with the 1/2" holes below the pinch weld. The edge of the bracket and pinch weld will line up. The N-fab brackets have spacers that will line up with the plastic, you must mark around all the spacers and drill them out with a one inch hole saw. This will allow the spacers to go through the plastic and make contact with the metal part of the body.

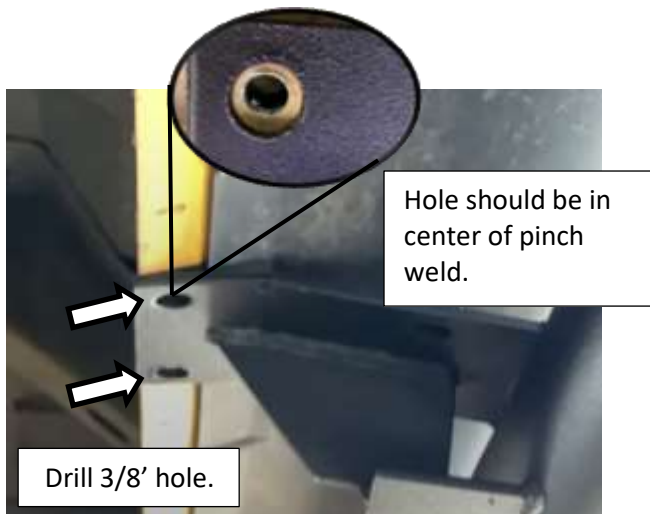

Step 3. Hold the bar up to the truck again, line up the holes you drilled, take 5/16 carriage bolt and insert through bracket and holes; install all 6 bolts with washers and hex nuts. Finger tighten so nerf step is suspended.



Step 4. After final adjustment tighten (x6) carriage bolts to (15-20 ft./lbs. torque.)

Step 5. Install the supplied self-taping screws through the bracket and 1" hole drilled in step 2.

