


# PREDATOR PRO



HARDWARE DESCRIPTION		QTY	PARTS INCLUDED		QTY
<b>HWKT-12094X</b>			DRIVER SIDE		1
FHLB 04240X	M10 X 25mm HEX BOLT FLANGE	8	PASSENGER SIDE		1


**Step 1.** Identify the Driver side rail.

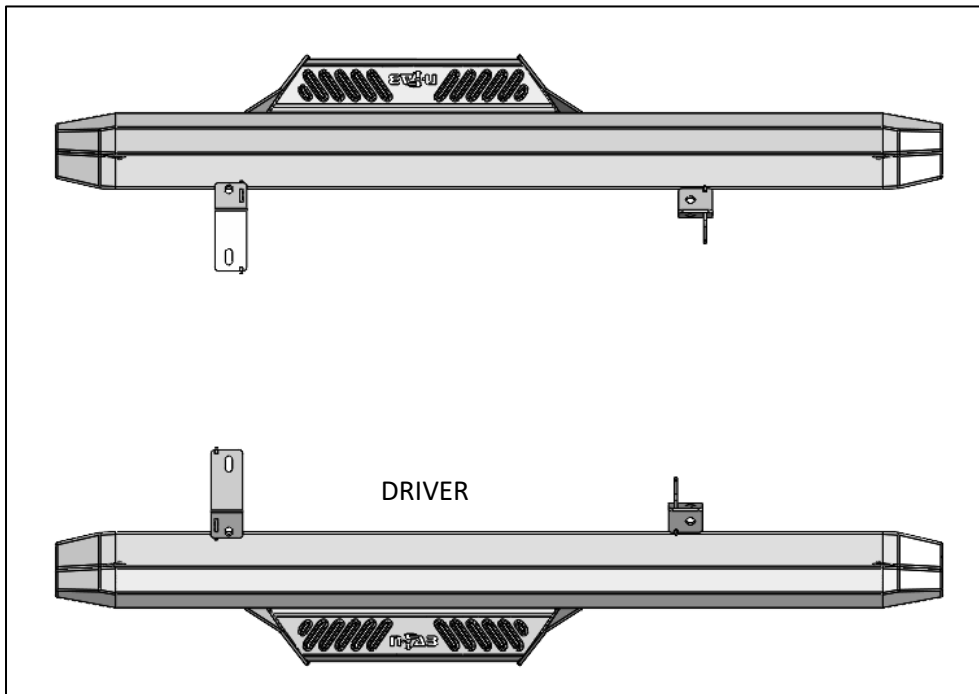

**STEP 2:** Remove any factory running boards or hardware and discard.  
**STEP 3:** Clean/tap the two factory threaded mounting locations.



**STEP 4:** Carefully place step into place and loosely fasten using the supplied M10X25mm hardware.

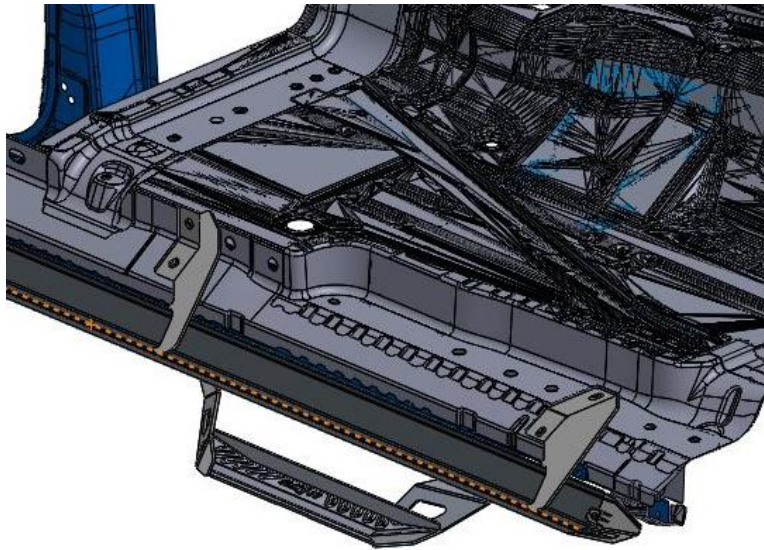

**Step 5:** Next, tighten the two lower bolts first following with the two upper bolts.  
**Step 6:** Repeat steps 2-5 with passenger side.  
**Step 7:** Your install is now complete.